



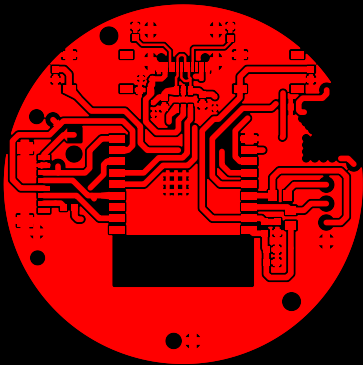

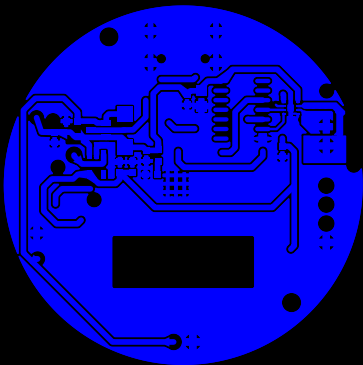

U4

TSL

TGD

TVB

TVS
TINT

TSDA

BOOT

ANTENNA

U1

CN3

R2

D1

D3
C2

D5

D2
C5

USBC1

R1

RESET



C11
C12

R21

R23

C13

TO2
C10

U5
TO1
CN4

