

HIDAssist Instruction

1. Instruction


HIDAssist is a debugging tool for HID communication under Windows platform. It supports single send, cycle send, multiple send, file send; The tool supports personalized display in the receiving area (timestamp, keyword highlight), and data saving in the receiving area. HIDAssist supports monitoring keyboard and mouse(getting RAWINPUT data); Chinese/English switching (switch through menu options), and GBK/UTF-8 two encoding format switching.

2. Runtime

Win7/Win8/Win10/Win11 x86/x64

3. Detailed explanation of software features

3.1 Software interface distribution

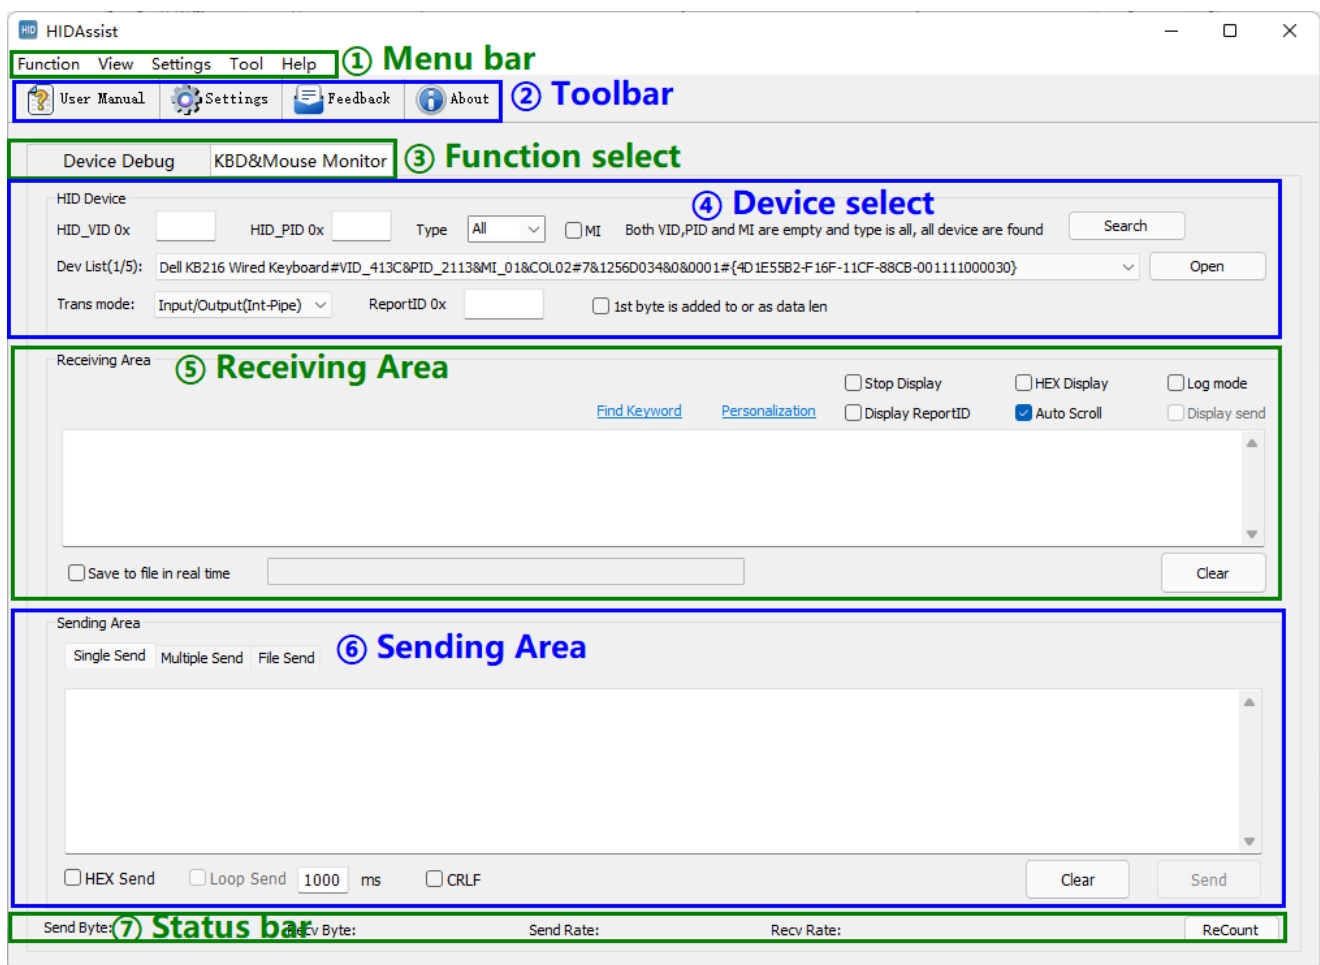


The software contains functional areas are as shown above:

- ① Menu bar : List of software menus.
- ② Toolbar : Icon software toolbar.

- ③ Function select : Choose compatible device debugging and keyboard and mouse monitoring(data from RAWINPUT)
- ④ Device select: Device information selection and display.
- ⑤ Receiving Area : The area displays the data received by the HID, supports log mode display (with timestamp), supports HEX/ASCII code display, and custom personalized display.
- ⑥ Sending Area :Support single send/multiple send/file send.
- ⑦ Status bar: Display the send/received byte and send/received rate.


3.2 Menu bar function

The menu bar has five items: Function, View, Setting, Tool and Help. The sub-menu bar functions of each item are as follows.

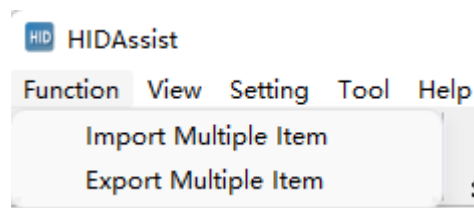

Function ——>Import multiple Item.



Function ——>Export multiple Item.

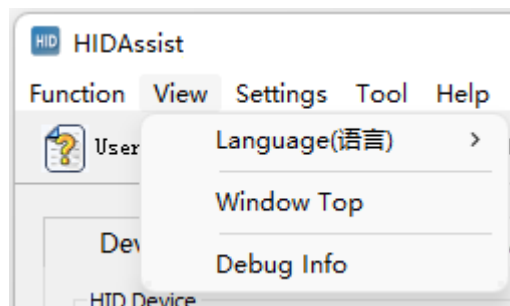


View——>Language. Switch between Chinese and English.

View——>Window Top. Lock the window to the front of the screen


View——>Showing and hiding of the debug info window.

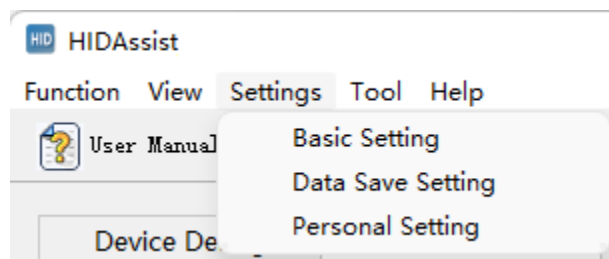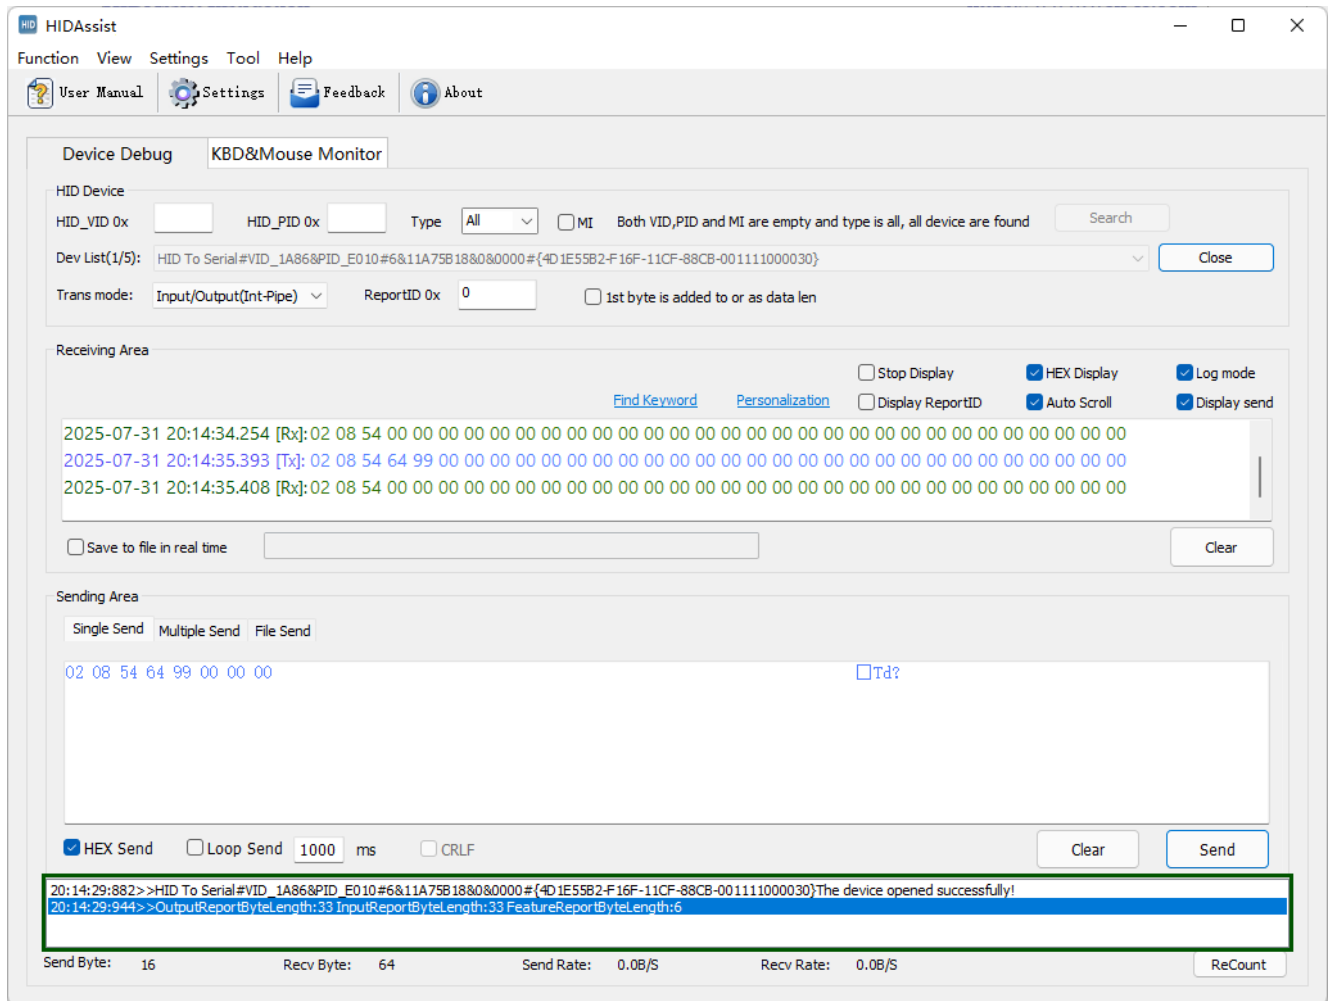



Settings——>Basic settings. Set the timeout and encoding of the HID. It will update automatically after the settings are completed.

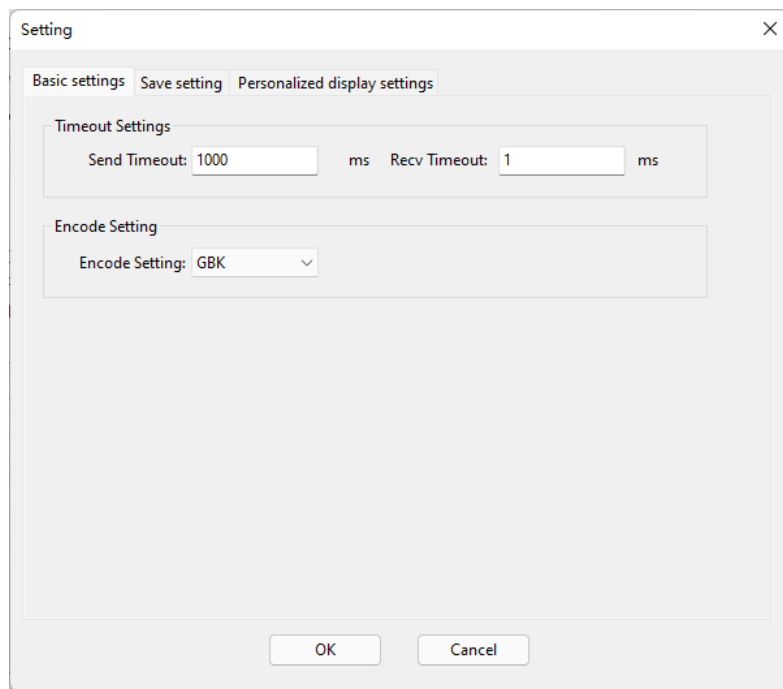

Settings——>Save settings. Set the buffer directory and capture settings.

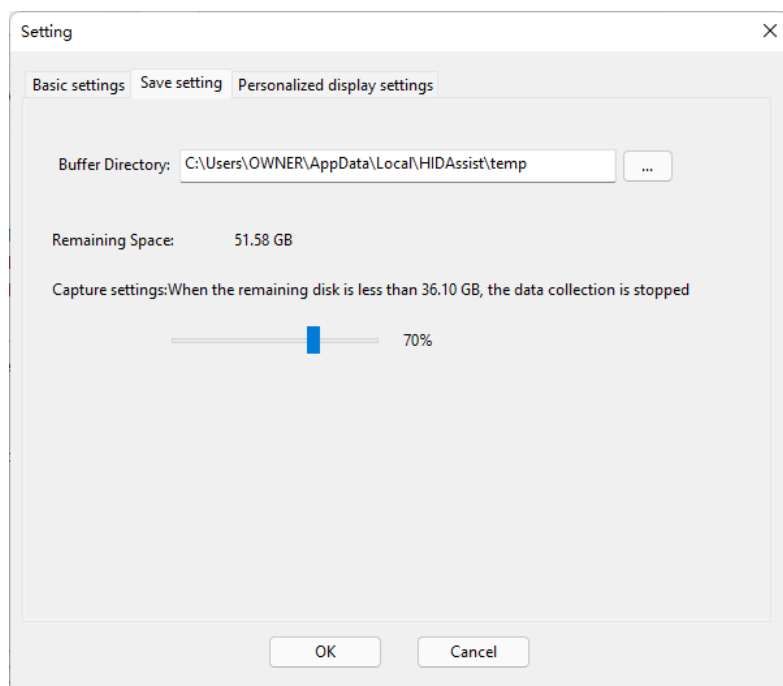


Settings——>Personalized display settings. Support custom modifications for sending/receiving background color/font/font color, sending and receiving timestamp color, timestamp format and keywords.

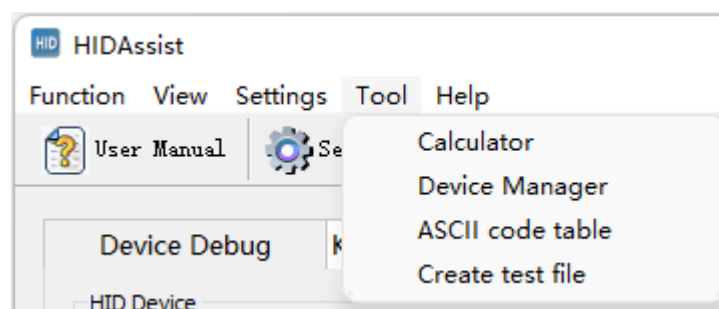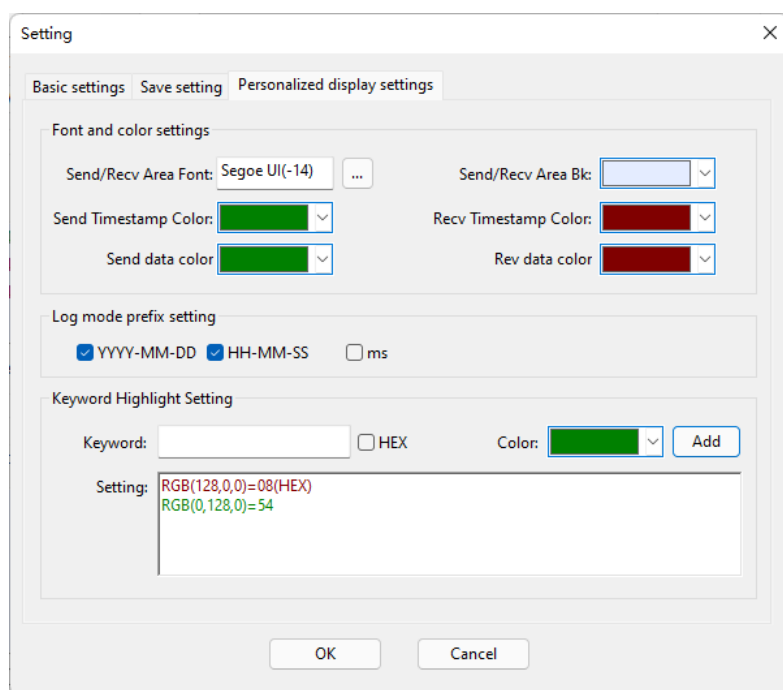

Tool——>Calculator. Call the local calculator tool.

Tool——>Device Manager. Calls the local device manager.


Tool——>ASCII Table.

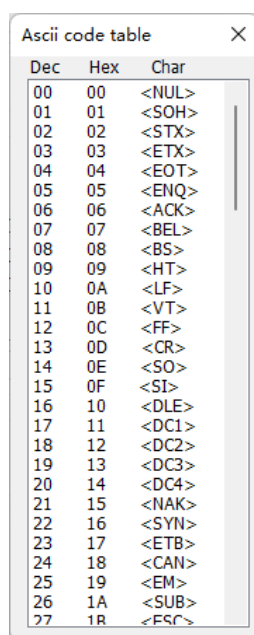

Dialog box titled "Ascii code table" showing a table of ASCII codes from 00 to 1F.


Dec	Hex	Char
00	00	<NUL>
01	01	<SOH>
02	02	<STX>
03	03	<ETX>
04	04	<EOT>
05	05	<ENQ>
06	06	<ACK>
07	07	<BEL>
08	08	<BS>
09	09	<HT>
10	0A	<LF>
11	0B	<VT>
12	0C	<FF>
13	0D	<CR>
14	0E	<SO>
15	0F	<SI>
16	10	<DLE>
17	11	<DC1>
18	12	<DC2>
19	13	<DC3>
20	14	<DC4>
21	15	<NAK>
22	16	<SYN>
23	17	<ETB>
24	18	<CAN>
25	19	
26	1A	<SUB>
27	1B	<ESC>

Tool——>Generate test files. Support for generating test files of any length and format.

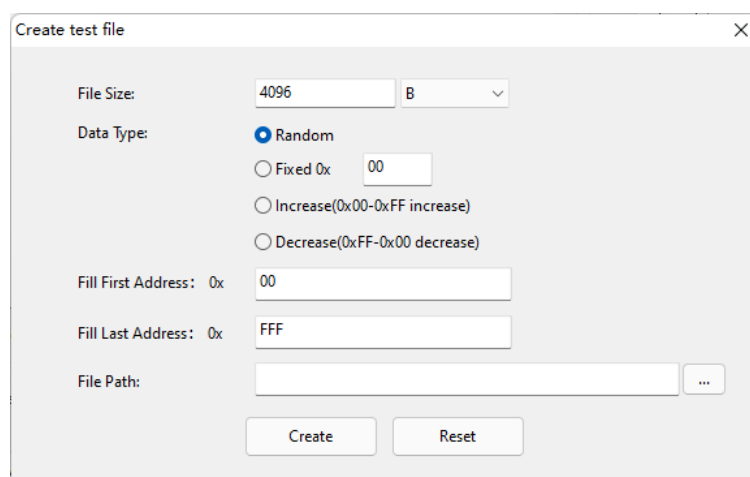


Dialog box titled "Create test file" with the following fields and options:

- File Size: 4096, B (dropdown)
- Data Type:
 - ☒ Random
 - ☐ Fixed 0x 00
 - ☐ Increase(0x00-0xFF increase)
 - ☐ Decrease(0xFF-0x00 decrease)
- Fill First Address: 0x 00
- Fill Last Address: 0x FFF
- File Path: (empty text box with browse button)
- Buttons: Create, Reset

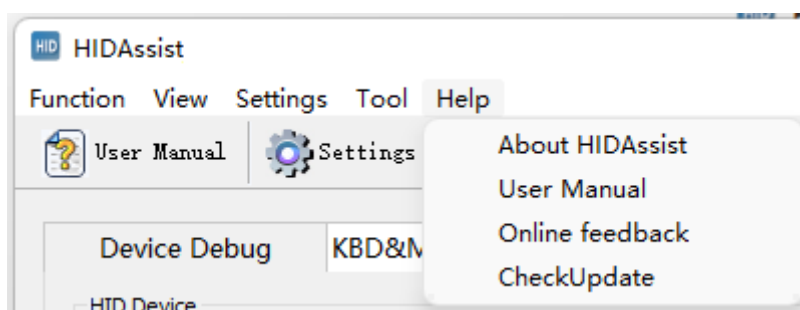

Help——>About HIDAssist. Display the version and copyright. Click contact us to go to the company's official website.

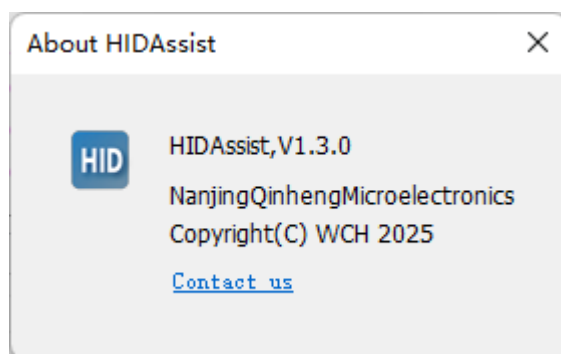


Help——>Help Document. Click to jump to this document.

Help——>Online feedback.

A screenshot of a software window titled "Online feedback". It contains three main sections: "Your questions or suggestions" with a large text area and a placeholder "Please provide a detailed description of your problem or suggestion."; "Your contact details" with input fields for "email" (placeholder: "Your email address.") and "phone" (placeholder: "Your phone number."); and "Attachment" with a text input field (placeholder: "Add attachment") and a button with three dots. A "sure" button is located at the bottom center. There is a close button (X) in the top right corner.

Help——>CheckUpdate. Check the current version and the latest version. If the current version is not the latest version, click the button to update to the latest version.

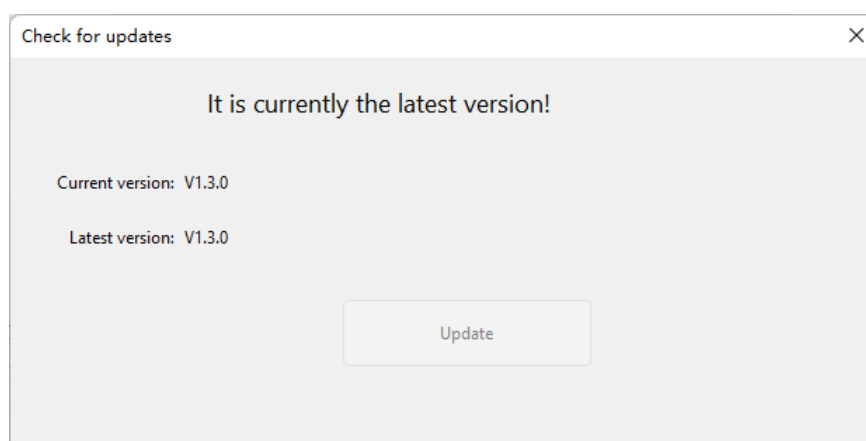


4. Functional operation instructions


4.1 Single Send

[illegible]

4.2 Multiple send

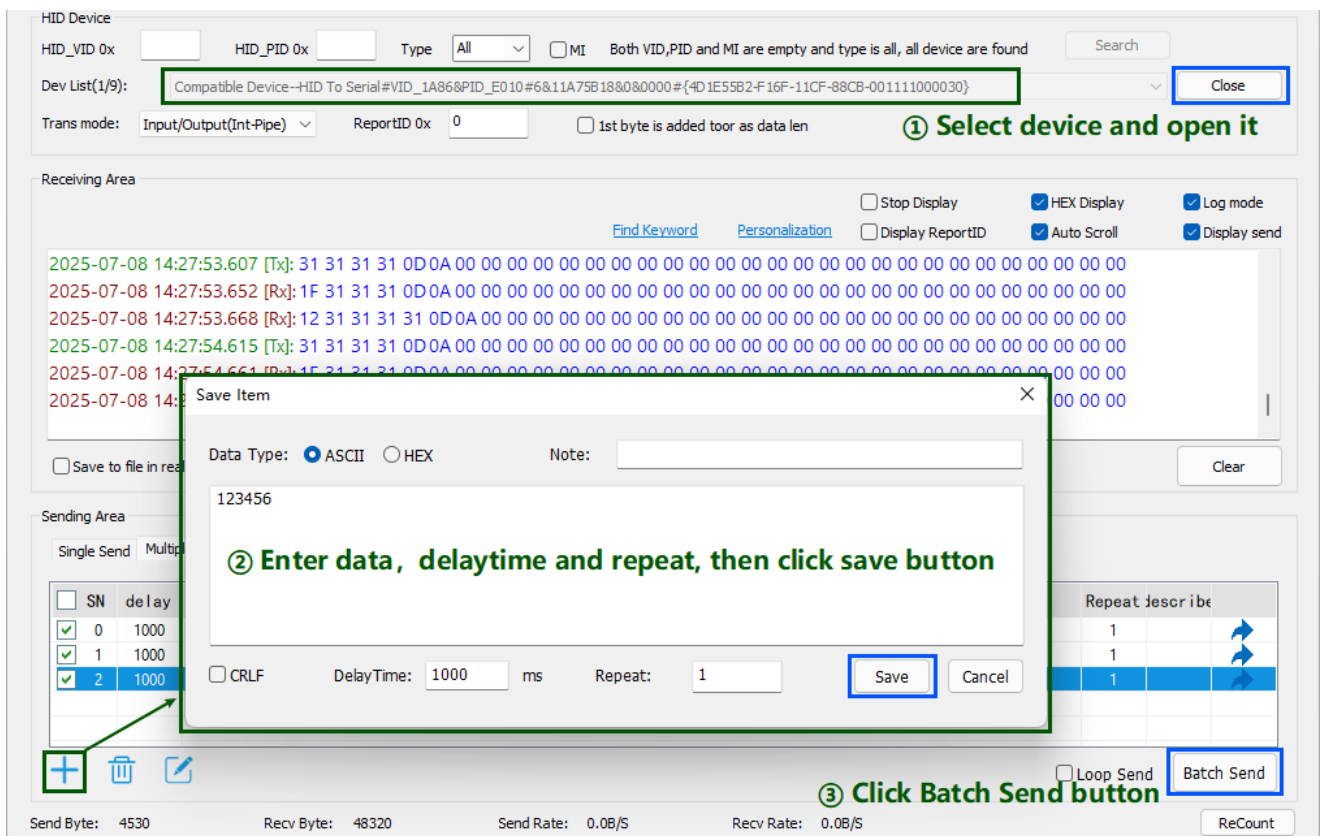

After clicking the Batch Send button, the received data is as follows:

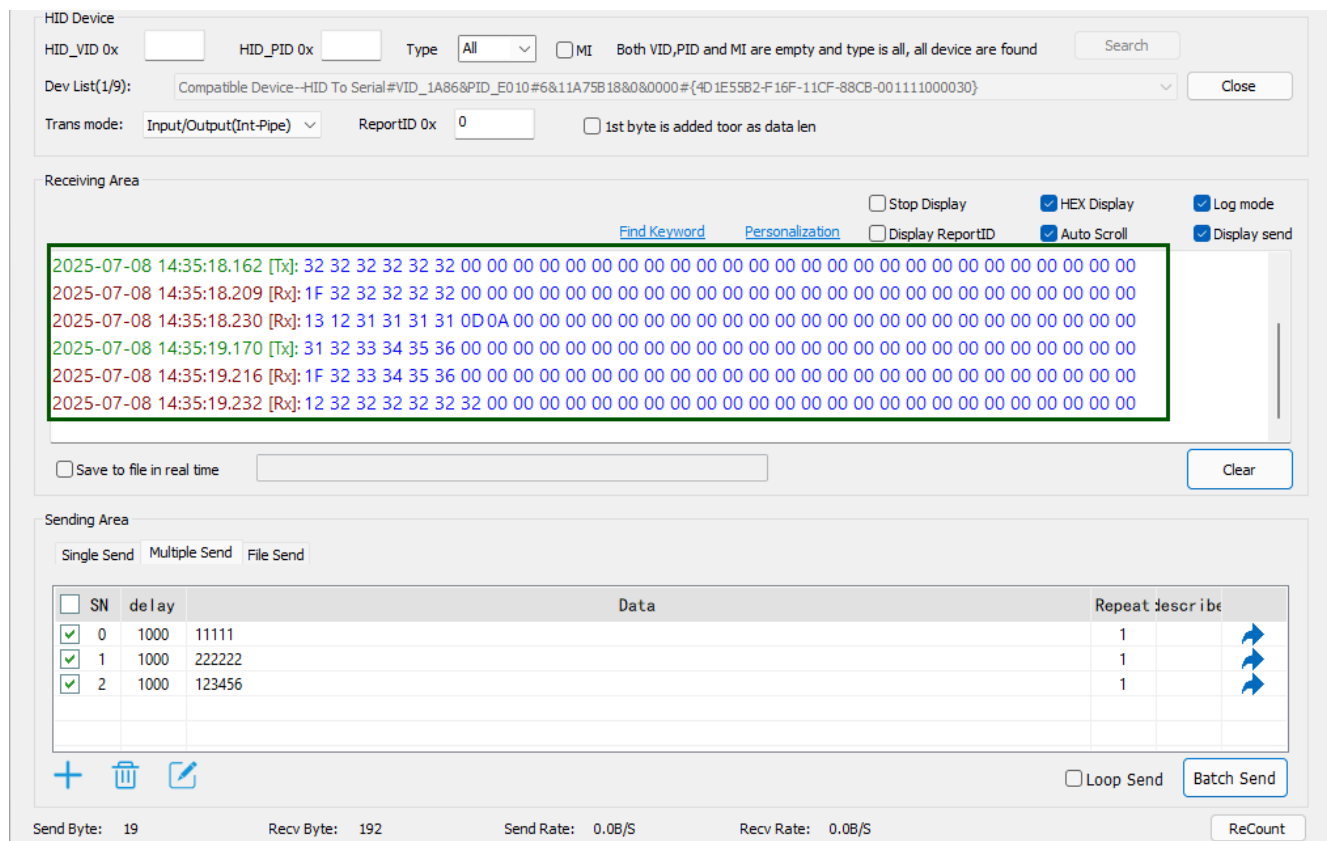

4.3 File send

HID Device

HID_VID 0x HID_PID 0x Type ☐ MI Both VID,PID and MI are empty and type is all, all device are found

Dev List(1/9):

Trans mode: ReportID 0x ☒ 1st byte is added too as data len

① Select device and open it

Receiving Area

③ Set receiving style

[Find Keyword](#) [Personalization](#)

☐ Stop Display ☒ HEX Display ☒ Log mode
☐ Display ReportID ☒ Auto Scroll ☒ Display send

2025-07-08 14:37:28.704 [Rx]: 1D 30 D3 C3 17 A0 A8 1A D3 6D 82 0B C4 8A 97 C2 F9 1C 8C 25 4F DC 43 5A E6 BD F4 89 D1 D0 7F
2025-07-08 14:37:28.718 [Tx]: 1F 1F 92 A6 D0 0F 50 01 44 6A 5A D0 4E 24 E5 46 E8 9E DD 6D 87 CA 7C 67 4E 8F 1C FA 82 6F 49 4C
2025-07-08 14:37:28.735 [Rx]: E3 12 64 00 E3 C5 71 A4 D3 9B 37 BC 93 8A 22 10 96 C3 F1 76 2D E5 17 A3 08 70 61 40 F9 7C DA
2025-07-08 14:37:28.750 [Tx]: 1F 3F 67 1B EA 69 16 C2 0F E4 22 63 24 08 D8 23 83 4F 12 81 80 51 5E E8 AAF3 5C 84 4E DB 68 56
2025-07-08 14:37:28.766 [Rx]: 41 FC AB EC 72 75 5C C7 52 B8 21 07 25 CE 74 90 45 77 A5 BD B9 6B 17 BB 08 E5 AC 2F 4F 62 7E
2025-07-08 14:37:28.783 [Tx]: 1F 3D 27 79 83 CF 5E 49 F2 28 A6 B7 15 BA 38 69 07 0B 12 B5 D8 B9 EB C2 25 BB 6C EA EB E9 9D 63

☐ Save to file in real time

Sending Area

File:

File Size: B


Send Time:

Progress:


② Select file and click send file button

Send Byte: 3131 Recv Byte: 3168 Send Rate: 962.4B/S Recv Rate: 993.1B/S

4.4 Personalized display

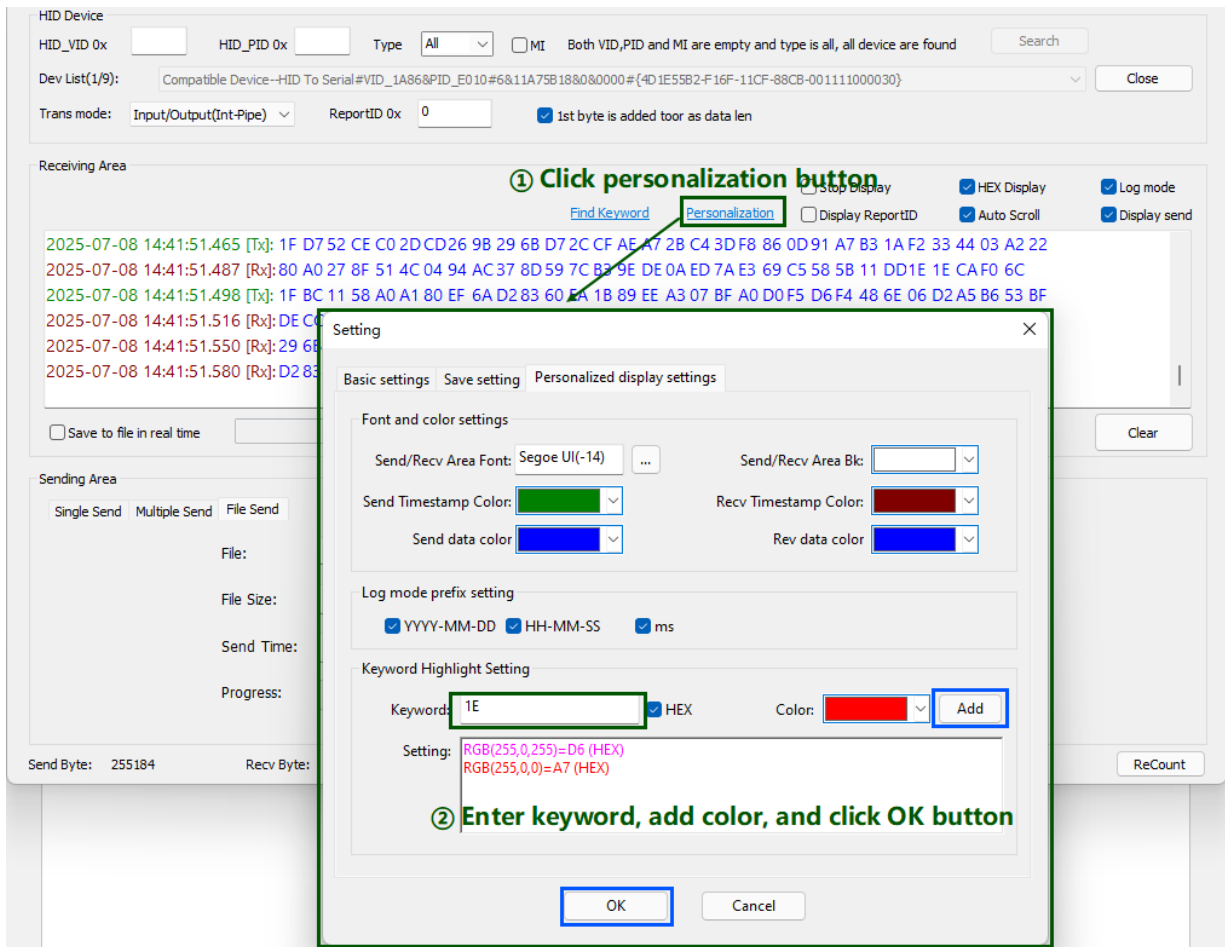

After clicking the OK button, the interface is displayed as follows:

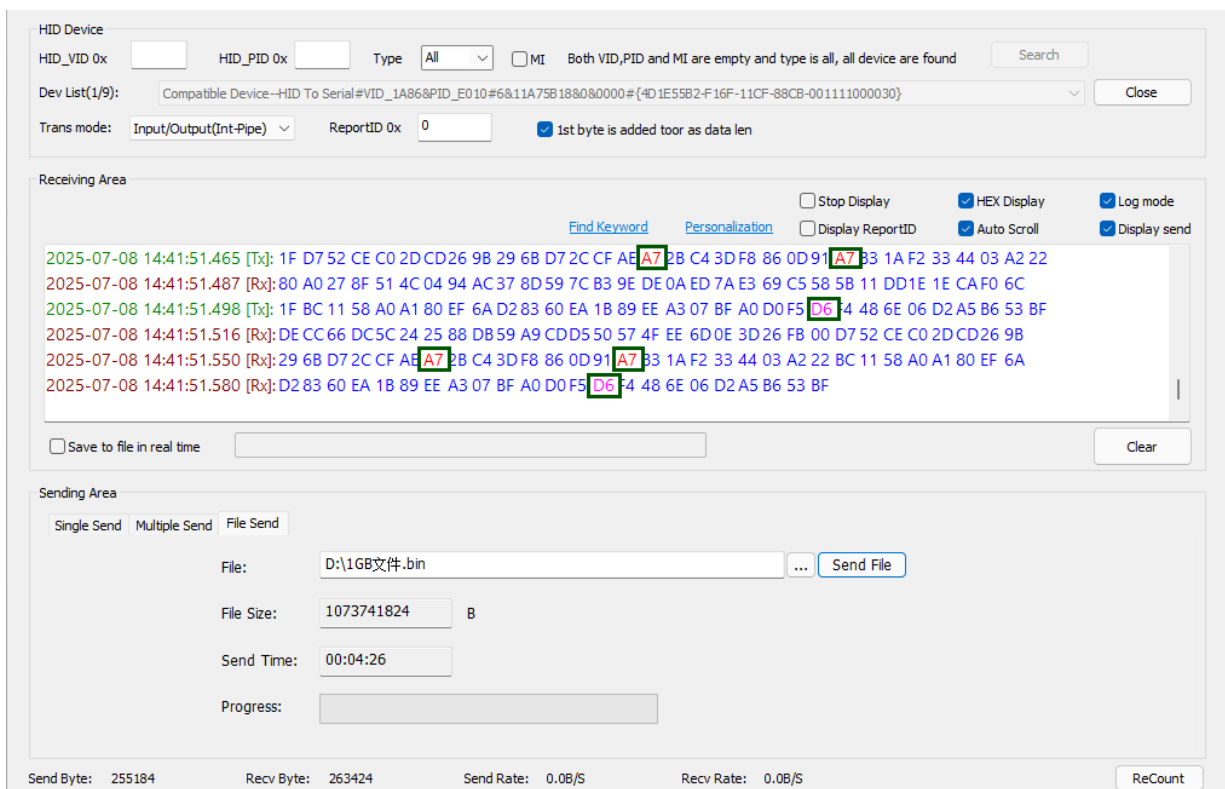

4.5 Find keyword

HID Device

HID_VID 0x HID_PID 0x Type All ☐ MI Both VID,PID and MI are empty and type is all, all device are found

Dev List(1/9): Compatible Device--HID To Serial#VID_1A86&PID_E010#6&11A75B18&0&0000#{4D1E55B2-F16F-11CF-88CB-001111000030}

Trans mode: Input/Output(Int-Pipe) ReportID 0x 0 ☒ 1st byte is added too as data len

Receiving Area

① Click Find keyword button

[Personalization](#)

☐ Stop Display ☒ HEX Display ☒ Log mode
☐ Display ReportID ☐ Auto Scroll ☒ Display send

2025-07-08 14:41:51.465 [Tx]: 1F D7 52 CE C0 2D CD 26 9B 29 68 D7 2C CF AE A7 2B C4 3D F8 86 0D 91 A7 B3 1A F2 33 44 03 A2 22
2025-07-08 14:41:51.487 [Rx]: 80 A0 27 8F 51 4C 04 94 AC 37 8D 59 7C B3 9E DE 0A ED 7A E3 69 C5 58 5B 11 DD 1E 1E CAF0 6C
2025-07-08 14:41:51.498 [Tx]: 1F BC 11 58 A0 A1 80 EF 6A D2 83 60 EA 1B 89 EE A3 07 BF A0 D0 F5 D6 F4 48 6E 06 D2 A5 B6 53 BF
2025-07-08 14:41:51.516 [Rx]: DE CC 66 DC 5C 24 25 88 D8 59 A9 CDD5 50 57 4F EE 6D 0E 3D 26 FB 00 D7 52 CE C0 2D CD 26 9B
2025-07-08 14:41:51.550 [Rx]: 29 68 D7 2C CF AE A7 2B C4 3D F8 86 0D 91 A7 B3 1A F2 33 44 03 A2 22 BC 11 58 A0 A1 80 EF 6A
2025-07-08 14:41:51.580 [Rx]: D2 83 60 EA 1B 89 EE A3 07 BF A0 D0 F5 D6 F4 48 6E 06 D2 A5 B6 53 BF

☐ Save to file in real time

Sending Area

File:

File Size:

Send Time: 00:04:26

Progress:



Search **② Enter keyword, click Find all button**

Keyword 1F ☒ HEX

Found strings together : 10248

Send Byte: 255184 Recv Byte: 263424 Send Rate: 0.0B/S Recv Rate: 0.0B/S

4.6 Keyboard and mouse monitor

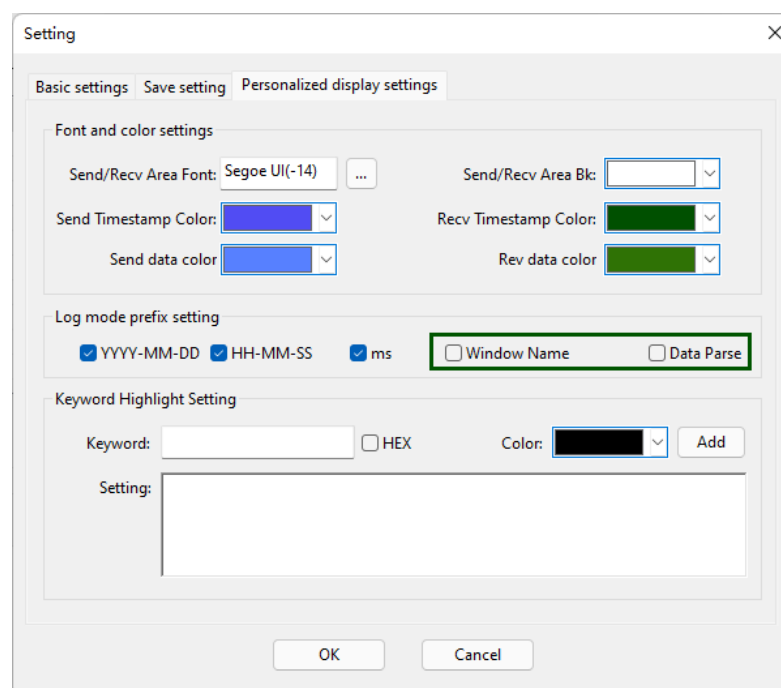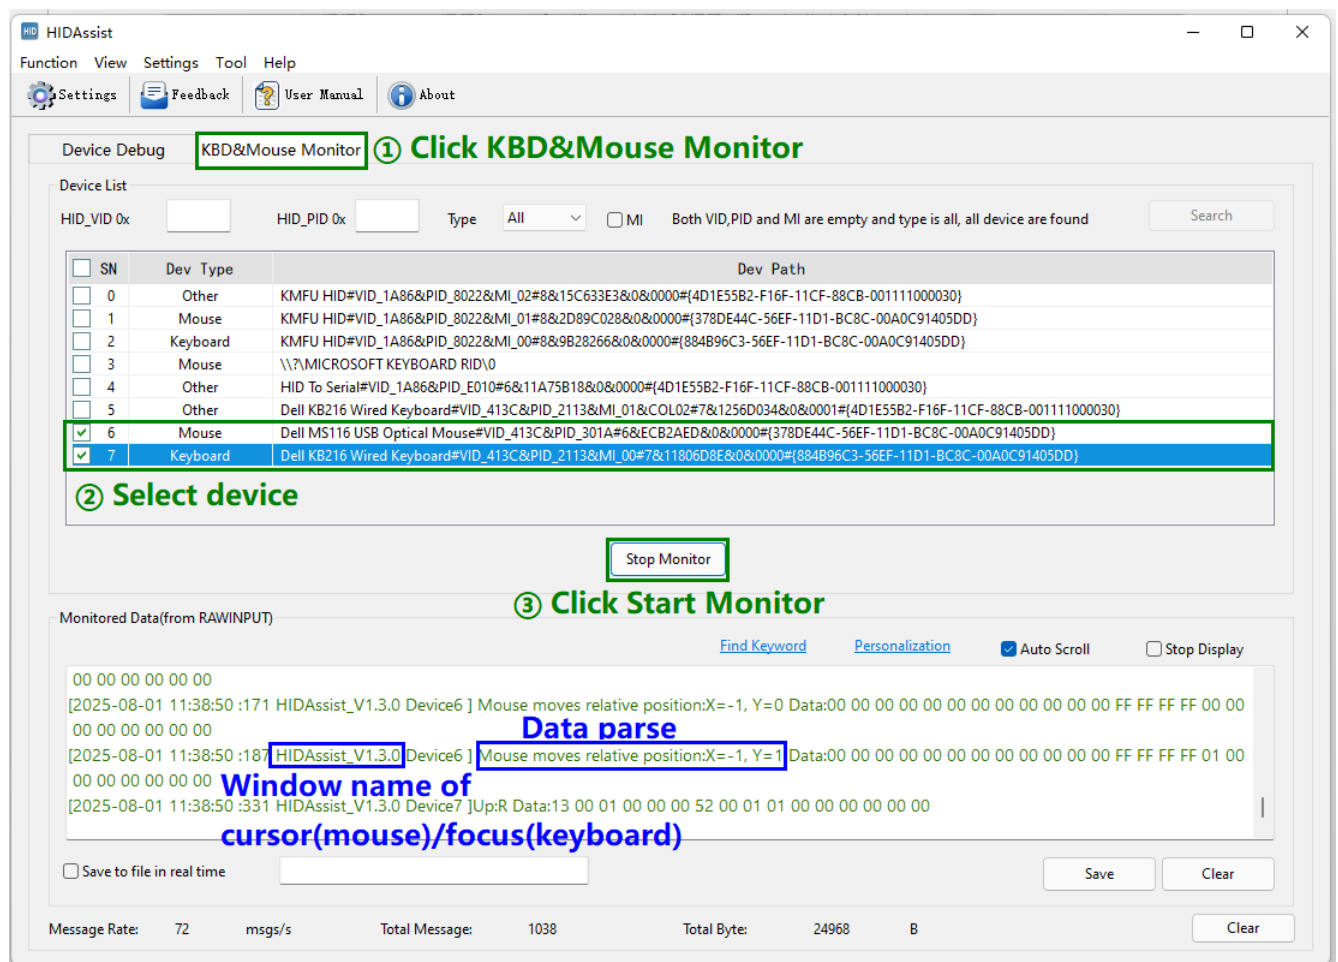

Click Personalization, you can display the data information selectively, set up as shown in the figure.

```
[2025-08-01 15:43:49 :598 Device6 ] Data:00 00 00 00 00 00 00 00 00 00 00 00 01 00 00 00 FF FF FF 00 00 00 00
[2025-08-01 15:43:49 :614 Device6 ] Data:00 00 00 00 00 00 00 00 00 00 00 00 01 00 00 00 FF FF FF 00 00 00 00
[2025-08-01 15:43:49 :630 Device6 ] Data:00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 FF FF FF 00 00 00 00
[2025-08-01 15:43:49 :646 Device6 ] Data:00 00 00 00 00 00 00 00 00 00 00 00 01 00 00 00 00 00 00 00 00 00 00
[2025-08-01 15:43:49 :709 Device6 ] Data:00 00 00 00 01 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
[2025-08-01 15:43:49 :773 Device6 ] Data:00 00 00 00 02 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
```