

Potentiometer

DETECT

INPUT

What does it do?

A potentiometer lets your code read how far a knob has been turned.

This small version is called a trimpot. Turning the blue knob moves a contact called the wiper, changing the voltage your board reads.

Use it to choose a speed, a brightness or a sound. Turn gently and stop at the ends. The marking 103 means 10 kΩ.

Uses

Sensor sensitivity



DETECT
Knob position

DECIDE
Set trigger level

DO
Adjust sensor response


Alien voice tuner



DETECT
Knob position

DECIDE
Choose voice pitch

DO
Rumble or squeak

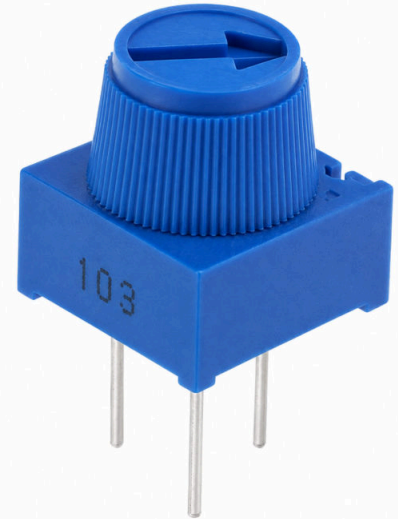

Knob

Turn to adjust

Outer pair

Pins 1 and 3

Wiper

Pin 2, offset

Code

● Raspberry Pi

```
from gpiozero import MCP3008

pot = MCP3008(0, select_pin=22)

setting = pot.value
```

● Raspberry Pi Pico

```
from picozero import Pot


pot = Pot(26)

setting = pot.value
```

`setting` runs from 0 to 1. Read `pot.value` again after turning; `pot.voltage` gives volts. The Pi needs the MCP3008 converter shown. Power the trimpot and converter from **3V3**.


Wiring

PI 5 + MCP3008

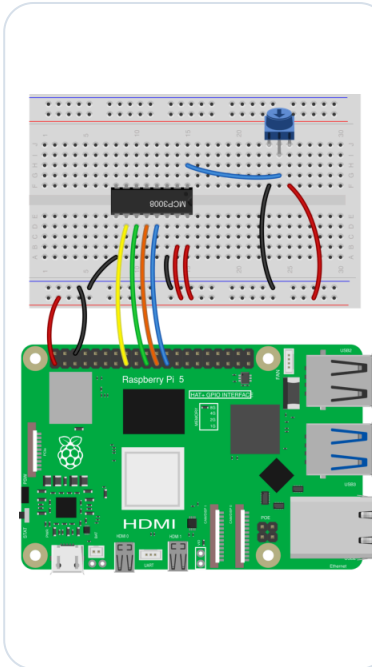

Wiper → **CH0**. CLK / DIN / DOUT / CS → **GPIO 11 / 10 / 9 / 22**. Chip notch faces right.

PICO

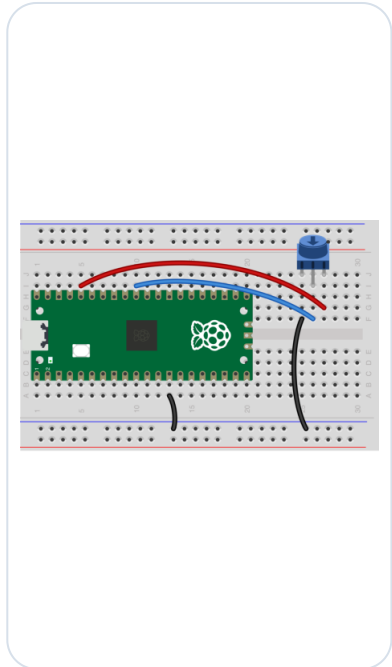

Pin 1 → **GND** · 2 (wiper) → **GP26** · 3 → **3V3**. Each pin has its own breadboard row.