

HOME

PLOTS

APPS

FIGURE

FORMAT

TOOLS

New Script

New Live Script

New

Open

Go to File

Find Files

Import Data

Save Workspace

Clean Data

New Variable

Open Variable

Clear Workspace

Favorites

Clear Commands

Simulink

Layout

Set Path

Add-Ons

Settings

Connections

Parallel

Help

Request Support

Feedback

Learn MATLAB

FILE

VARIABLE

CODE


SIMULINK

ENVIRONMENT

RESOURCES

MATLAB Drive

```
1 clc;
2 clear;
3 close all;
4 snr = 0:5:30;
5 snr_linear = 10.^(snr/10);
6 capacity = log2(1 + snr_linear);
7 figure;
8 plot(snr,capacity,'-o','LineWidth',2,'MarkerSize',6);
9 grid on;
10 xlabel('SNR (dB)');
11 ylabel('Channel Capacity (bps/Hz)');
12 title('Channel Capacity vs SNR');
```

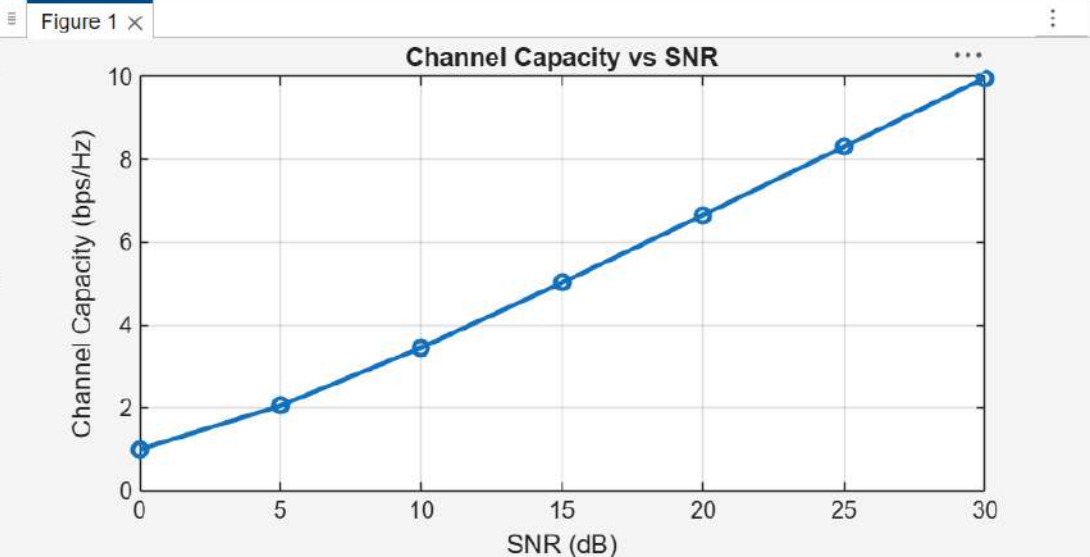

Command Window

>>

HOME PLOTS APPS FIGURE FORMAT TOOLS

New Script New Live Script New Open Go to File Find Files Import Data Save Workspace Clean Data Clear Workspace

New Variable Open Variable Clear Workspace


Favorites Clear Commands

Simulink Layout Set Path Add-Ons Settings Connections Parallel

Help Request Support Feedback Learn MATLAB

FILE MATLAB Drive

```
1 clc;
2 clear;
3 close all;
4 snr = 0:5:30;
5 snr_linear = 10.^(snr/10);
6 capacity = log2(1 + snr_linear);
7
8 figure;
9 plot(snr,capacity,'-o','LineWidth',2,'MarkerSize',6);
10 grid on;
11 xlabel('SNR (dB)');
12 ylabel('Channel Capacity (bps/Hz)');
13 title('Channel Capacity vs SNR');
```

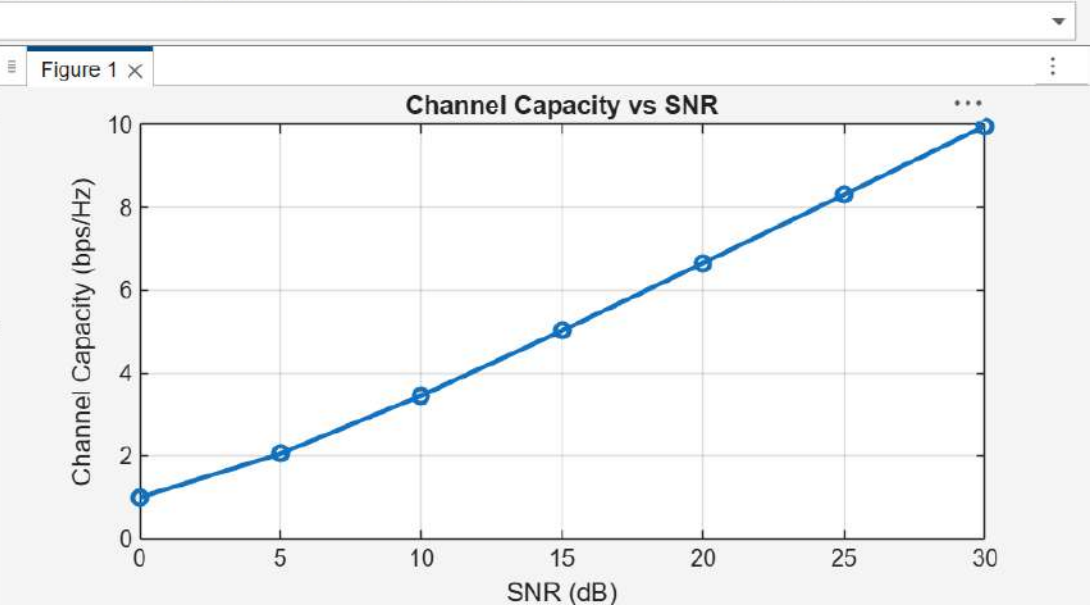

Command Window

>>

Copy Figure
Print
Save As
Show Code

Title Subtitle X-Label Y-Label Z-Label Legend Colorbar Grid X-Grid Y-Grid

FILE LABELS AND ANNOTATIONS

