Copyright Notice

© Amino Communications Ltd. All rights reserved. Printed in China. Amino, AmiNET and AmiNET330 are trademarks of Amino Communications Ltd. All other product or brand names as they appear are trademarks or registered trademarks of their respective holders. This document contains proprietary information of Amino Communications Ltd ("Amino") No part of this document may be copied, reproduced, transmitted, distributed, transcribed, stored in a retrieval system, modified or translated into any other language or computer language, or sublicensed in any form or by any means - electronic, mechanical, magnetic, optical, chemical, manual or otherwise - without the prior written consent of Amino.

Disclaimer

Amino shall not be liable for any errors contained herein nor for any damages arising out of or related to this document or the information contained within it, even if the Company has been advised of the possibility of such damages. This document is intended for informational and instructional purposes only. The Company reserves the right to make changes to the specifications and other information contained in this document without prior notification.

Product Disposal Information - EU only
The product is labelled in accordance with the
European Directive 2002/96/EC concerning
Waste Electrical and Electronic Equipment (the
WEEE Directive) and therefore should not be
disposed of with other household or commercial
waste.



Product Disposal Instructions for Residential Users

Please remove any batteries and dispose of them and the product as per your local authority's recycling processes. For further information please contact your local authority or the retailer where the product was purchased.

Product Disposal Instructions for Business Users

Business Users should contact their supplier and check the terms and conditions of the purchase contract and ensure that the product is not mixed with other commercial waste for disposal. Setting up the AVC
Remote Control
4

Controlling the Set-Top Box

Configuring the Remote Control 8

TV Brand Codes

9

.

DVD Brand Codes

15

AVC Remote Control Guide


Setting up the AVC Remote Control This section explains how to unpack and set-up the Amino remote control. Your service provider may have supplied an alternative remote control, in which case please refer to the User Guide supplied by your service provider for instructions on setting up and using the remote control. **Inserting Batteries** The remote control requires two batteries type AAA, MN2400, UM-4, or LR03. For best performance we recommend using Alkaline batteries. • Open the battery cover by • Insert the batteries, taking care to Replace the battery cover by pushing lightly on the tab and observe the correct polarity: engaging the two tabs in the top ontrol lifting up the cover: of the case and then closing it until it clicks into place: "Click"

5

Childproof Feature

You can optionally secure the battery compartment with the screw provided to prevent children from opening the compartment:

• Remove the battery cover as described above, and using a suitable screwdriver remove the silver screw at the base of the remote control:

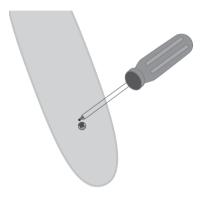

- Replace the battery cover.
- Fit the screw at the base of the cover, taking care not to overtighten it.

Important Information about Using Batteries

Do not mix different types of battery or old and new batteries.

Do not use rechargeable batteries with the remote control.

Remove the batteries from the remote control if you are not going to use it for several weeks, to avoid the risk of leakage.

Please respect your environment and any local regulations and dispose of old batteries in a responsible manner.



Caution!

Do not attempt to recharge the batteries.

Immediately remove any leaking batteries. Take care when handling leaking batteries as they may cause burns to the skin or eyes, or other physical injuries.



Controlling the Set-Top Box

To control the Set-Top Box (STB) press the STB button on the remote control. The STB mode–select button will light for one second to indicate that the mode has been set.

When any valid function button on the remote is pressed, the STB button will light to indicate that a command is being transmitted in STB mode.

Switching On or Off

To turn the STB on or off:

• Press the power button on the Amino remote control.

When the STB is switched on the status light on the front panel is on.

Controlling a TV


To control the TV press the TV button on the remote control. The TV mode–select button will light for one second to indicate that the mode has been set.

When any valid function button on the remote is pressed, the TV button will light to indicate that a command is being transmitted in TV mode.

Controlling the DVD

To control the DVD press the DVD button on the remote control. The DVD mode-select button will light for one second to indicate that the mode has been set.

When any valid function button on the remote is pressed, the DVD button will light to indicate that a command is being transmitted in DVD mode.

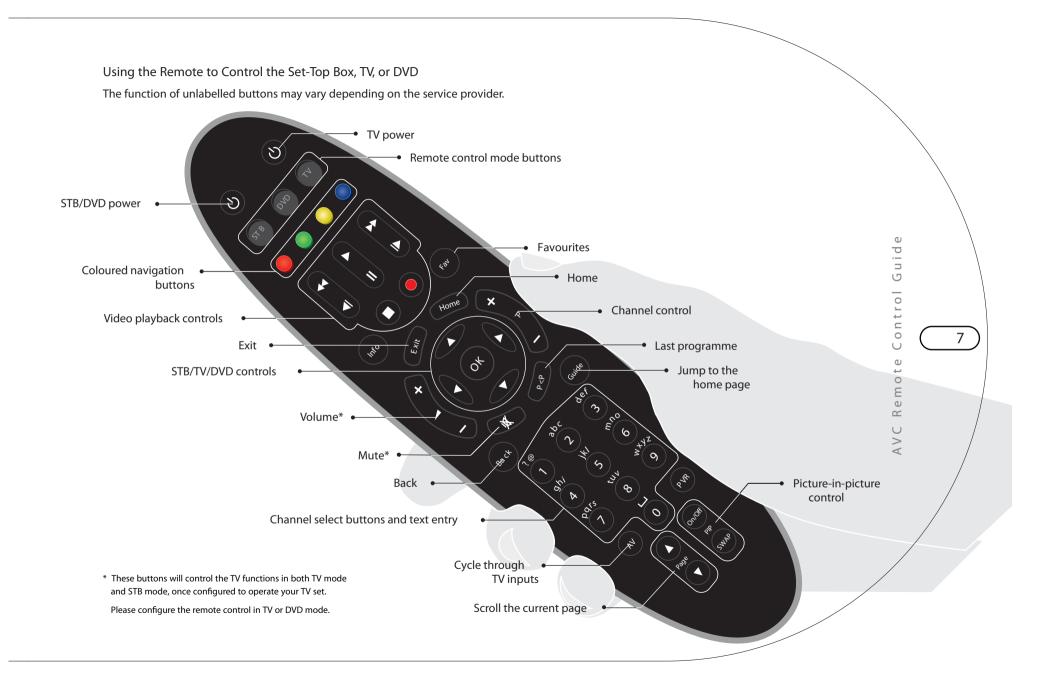

Configuring the Remote Control

In order for the remote control to transmit the correct signals to control the TV, the remote control must be programmed with a code corresponding to the brand of TV in use. Below is a set of instructions for programming TV codes into the remote:

- · Identify the make of the TV; e.g. Sony, Philips etc.
- Find the TV manufacturer in the TV brand code tables in this manual. Most TV manufacturers have
 more than one brand code listed; if this is the case use the steps below to try all the brand codes
 until a suitable one is found. If no brand code exists for your manufacturer, try using other popular
 brand codes.
- Press the TV Mode button and hold for 2.5 seconds.

The TV button will blink twice.

• Continue to hold down the TV mode button for another 2.5 seconds.

The TV button will blink twice again.

- · Release TV mode button.
- Enter the 3-digit TV brand code from the list in this manual.

At each key press the mode button will blink.

If the TV brand code is accepted, the TV button will flash twice and go out when the 3rd digit is entered.

If the TV brand code is not accepted, the TV button will remain illuminated for 2.5 seconds and then go out. The remote control will not have been programmed and the process will have to be repeated from the start.

During the programming steps if no button is pressed for 10 seconds, the TV button light will go out, the remote control will not have been programmed, and the process will have to be repeated from the start.

The same procedure applies to configuring the remote control in DVD mode.

TV Brand Codes

A.R. Systems 506 550

Abex 098

Acer 041

Acme 373 388

Acura 379 500

ADA 378

ADC 372 374

Admiral 001 099 207 214 370 371 372 386 387 440 514 557

Advent 113 197

Adventura 100

Adyson 373 492 493 527 528

Agashi 492 493

Agazi 372

AGB 448 498

Aiko 015 206 373 374 379 492 493 500 504 506 512 527 528

Aim 506

Aiwa 034 340 662

Akai 002 201 222 333 374 376 378 379 380 408 416 457 463 475 492 493 498 500 504 506 512 528 529 561 567 573

Akiba 380 506 529 540 558

Akito 390

Akura 372 380 417 500 506 529 540

Alaron 492

Alba 373 379 380 392 393 412 416 424 475 492 497 500 505 506 527 529 536 552 557 576 695

Alcyon 513

Alkos 472

Alleron 044

Allorgan 391 493 528 542

Allstar 408 506

America Action 211

Amplivision 373 493 497 528 543 555

Amstrad 372 379 380 395 416 417 440 448 498 500 506 521 529 551

Amtron 036

Anam 211 379 414

Anam National 003 036

Anglo 379 500

Anitech 372 379 403 500 506 513 Ansonic 379 382 496 497 500 503

506 515 536 538 541 556

AOC 004 005 155 201

Apex 074 088 111 119 229

Apex Digital 208 216 334

Apollo 560

Arc en Ciel 404 451 461 545

Arcam 492 493 527 528

Arcam Delta 373

Aristona 408 475 503 506 567

Arthur Martin 555

ASA 370 383 384 385 387 511 516

548

Asberg 403 408 506 513

Astra 379

Asuka 372 373 380 492 493 527 528

529 540

Atlantic 373 408 475 492 506 527 538 543

Atori 379 500

/((OI) 3/) 30(

Auchan 555

Audiosonic 373 379 380 408 461 475 493 497 506 528 529 547

AudioTon 373 493 497 528

Audiovox 036 206 211 213 344

Ausind 403 513

Autovox 370 372 373 403 435 450

493 513 528 536 549

Aventura 209

Awa 492 493 502

Avomi 533

Baird 441 461 493 512 523 524 528

Bang & Olufsen 370

Basic Line 379 380 408 493 500 506

529 540

Bastide 373 493 528

Baur 419 445 456 463 475 501 506 525 549 565

Bazin 493 528

Beko 377 398 424 497 506 636 639

648 682 691

Belcor 155

Bell & Howell 001 045 163 221

Bena 042 136

Beon 408 475 506 557

Best 497 547

Bestar 408 443 497 506

Binatone 373 493 528

Black Star 453 536

Blacktron 540

Blackway 540

Blaupunkt 378 458 525

Blue Sky 380 506 529 540 558 576

Blue Star 446 540

Bondstec 453 536

Boots 373 390 493 528

BPL 446 506 540

Bradford 036 211

Brandt 400 404 405 451 452 461 545

546 582 583

Brinkmann 506 557

Brionvega 370 408 475 506

Britannia 373 492 493 527 528

Brockwood 155

Broksonic 114 121 211 214 333 363

Bruns 370 377

BSR 391 455 542

BTC 380 529

Bush 379 380 386 389 390 392 393 408 412 416 443 446 455 456 461 474 475 476 493 500 505 506 528 529 540 542 549 552 566 576 609

668 688

Candle 004 007 100 155 201

Capsonic 372

Carena 506 558

Carnivale 201

Carrefour 392 505 511

Carver 205

Cascade 379 500 506

Cathay 408 475 506

CCE 493

Celebrity 002 199

Celera 216

Centurion 156 408 475 506

Century 370 536

CGE 403 453 455 497 513 536 557

Changhong 216

Cimline 379 393 500 529

Citizen 004 007 015 036 073 097 155

163 201 206 362

City 379 500

Clarion 211

Clarivox 475

Clatronic 372 373 379 380 395 403

408 424 453 493 497 500 506 513

515 528 529 536 543

CMS 492 493

Colortyme 004 155

Colt 358

Commercial Solutions 202

Concerto 004 155

Concorde 379 500

Condor 373 408 424 492 497 500

506 515 527 536 540 543 556

Contec 211 373 379 392 394 395 492 500 502 505 519 527

Contec/Cony 002 011 012 036

Continental Edison 400 404 405 441

451 461 545

Cosmel 379 500 547

V brand codes

9

IMA 036

Indesit 389 435

Imperial 387 403 408 424 453 455

497 506 513 536 549 557

Lifetec 372 379 415 416 441 443 476

Ð 0 0 0 11 \subseteq σ 9 >

405 408 441 451 452 461 525

Radiotone 377 408 497 500 506 557

568

Shorai 391 522 542

Siarem 370 382 448 455 498 506 515

Φ 0 0 0 13 \subseteq σ 9 >

083 087 093 101 116 127 159 162

163 183 208 221 237 238 239 241

243 249 252 253 256 257 266 267

300 313 315 321 325 333 345 353

DVD Brand Codes

Advent 163

Aiwa 026 131 134 309 348 466

Akai 146 162 300 340

Akura 388

Alba 409 412 413 431

Alco 160

Alpine 258

Amphion MediaWorks 167 171 264

AMW 167 171

Apex 001 056 057 095 098 145 273

Apex Digital 148 178 179 180 183

184 193 195 221 271 301

Aspire Digital 166

Audiovox 132 160 227 263 316

Best Buy 384

Blaupunkt 136 195

Blue Parade 191

Bose 122 130

Bosston 378

Brandt 370 408 423

Britannia 374

Broksonic 053 054 072 146 300

Bush 003 371 373 382 386 415 431

433 438 486

California Audio Labs 157

Cambridge Audio 376 393

CAT 379 380

Celestial 391

Centrex 389

Centrum 380

CGV 376

CineVision 385

Clarion 100

Classic 101 354

Clatronic 382

Coby 164 165 168

Conia 371

Crypto 387

C-Tech 377

CyberHome 083 405 417 419 429

Daewoo 058 062 137 138 325 326

327 418 456

Dalton 392

Dansai 375

Daytek 264 406

DFC 382

Denon 040 110 133 157 197 202 238 252 254 257 259 335 359 394 459

Denver 352 382 388

Denzel 372

Desay 381

Diamond 376 377

Digitor 390

Disney 194

DK Digital 003 443

Dmtech 323

Dual 372

DVD2000 188

DVX 377

Easy Home 384

Eclipse 376

Elta 336 353 427 433

Emerson 059 073 147 194 304 346

Enzer 372 Finlux 376

Fisher 112 134 349

Funai 194

Gateway 272

GE 041 079 118 189 195 255

Global Solutions 377

Global Sphere 377

Go Video 046 124 127 128 129 150

177 185 272 295 299 338

GoldStar 410

Goodmans 382 386 389 404 409 438

GPX 114

Gradiente 157

Graetz 372 Greenhill 195

Grundig 190 341 351 389 430 439

H&B 382 383

Haaz 376 377

Harman/Kardon 125 267 268 365

HiMAX 384

Hitachi 000 027 126 175 200 338 357

372 384 440 450 462 468

Hiteker 193

Humax 448

Initial 195

Innovation 342 343 344 357

Insignia 289

Integra 158 191

Irradio 017 JBL 043

Jensen 165

Jeutech 378

JVC 047 090 096 097 115 174 192 222 240 274 275 276 277 311 332

370 402 449 460 476 488 489 490

491 492 493 494 495

Kawasaki 160

Kenwood 019 039 157 197 202 256

260 261 315 335 363 400

Kingavon 382

Kiss 372 383

KLH 160 195 221

Koda 382

Konka 029

Koss 060 159 170 228

KXD 384

Lasonic 081

Lawson 377 Lecson 375

Lenco 382

Lenoxx 169

LG 059 270 346 407 410 414 451

477 483

Life 342 343 344

Lifetec 342 343 344 357

Limit 377

Liquid Video 170

Lite-On 272

Loewe 341 437 471

LogicLab 377

Luxor 389

Magnavox 002 018 045 051 147 176

187 190 194 370 382 395

Magnum 357

Matsui 423

MBO 366

Mediencom 374

Medion 324 342 343 344 357 386

Marantz 034 190 250 350 458 472

Memorex 003 146

Metz 339

Mico 376

Micromaxx 342 343 344 357

Micromedia 370

Micromega 401

Microsoft 189

Microstar 342 343 344 357

Mintek 004 195

Mirror 386

Mitsubishi 021 030 123 142 186 188 337 396

Mizuda 382 384

Monyka 372

Mustek 354 404 470

Mx Onda 376

NAD 059 139 364

Naiko 389

Nakamichi 116 368

0 0 Ū 0 \subseteq σ 0

>

e s

15

SM Electronic 377