


PROX-LEGEND7DS 產品使用說明書

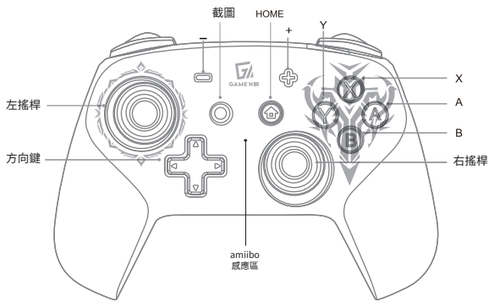

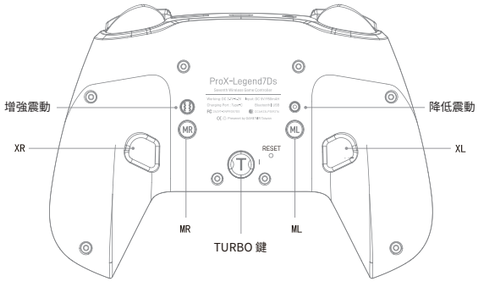

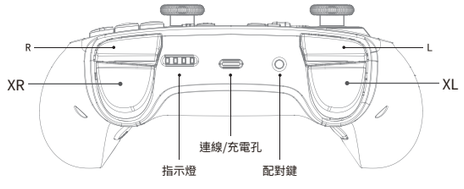

遊戲裝置配對方法

Switch 主機連線模式

首次連線
請於首頁下方選項「控制器」>>「更改拿法/順序」的畫面中,
按下手把頂部「配對鍵」約3-5秒,達到指示燈快速閃爍後連線。

第二次以後連線+遠端喚醒Switch主機
首次配對成功後,只要於主機附近短按HOME鍵,
指示燈閃爍後,即可連線並喚醒SWITCH主機。

USB有線配對連線

無線控制器以USB傳輸線(USB to TypeC)連接SWITCH底座側邊USB孔位,即可配對成功 (請確認於設定>>控制器與感應器 >>PRO 控制器的有線通訊,該選項功能有開啟)

Android/ iOS/ Apple Arcade:

1. 打開 裝置內建藍芽 搜尋
2. 同時按 B+HOME鍵進行XBOX模式連線,或Y+HOME鍵進行NS模式連線
3. 找到一個「XBOX CONTROLLER/ PRO CONTROLLER」名稱
4. 點選後確認配對,即可連線(特別留意:遊戲本身需支援手把控制器功能方可使用,各手機平板系統不一定支援NS模式,大多支援以XBOX模式為主)

注意事項

● 手把連接不同設備時都需要切換模式。
如在 iOS/ Android上連接手把,要同時按 X+Home鍵 的模式進行連接。
若要切回Switch上使用,就需要同時按 Y+Home鍵 做模式切換並連接。

● 手把控制器於PC/ STEAM/ Android/ iOS/ Apple Arcade內的功能(體感陀螺儀瞄準/指標移動/震動等),將因遊戲本身設定與支援項目不同而有所差異。

遊戲裝置配對方法

PC(Windows系統)/ STEAM

A. PC上有線模式:
使用隨附的傳輸線或其他支援資料傳輸的 TypeC to USB 傳輸線連接即可直接連線使用。有線狀態預設偵測手把為 XBOX 模式,若PC有線狀態要使用NS模式,請按住R3(右邊蘑菇頭往下按壓)並接上USB線,則會啟動PC上的NS模式。

B. PC上無線模式:
若PC(桌電/筆電)本身擁有,能支援接收手把控制器訊號的藍芽功能/外接藍芽天線,有以下三種模式可以連接使用。

PC 無線連線:NS模式-PC偵測手把為Pro controller

1. 長按手把Y+HOME鍵2-3秒啟動配對
2. 至「藍芽」設定頁面點選「新增裝置」,找到「Pro controller的訊號源
3. 點選後確認配對,即可連線。

PC 無線連線:XBOX模式-PC偵測手把為XBOX controller

1. 長按手把B+HOME鍵2-3秒啟動配對
2. 至「藍芽」設定頁面點選「新增裝置」,找到「XBOX controller」的訊號源
3. 點選後確認配對,即可連線。

PC 無線連線:PC偵測手把為GAMEPAD通用手把模式

1. 長按手把X+Home鍵2-3秒啟動配對
2. 至「藍芽」設定頁面點選「新增裝置」,找到「GAMEPAD」的訊號源
3. 點選後確認配對,即可連線。

*若PC本身沒有「支援配對手把控制器的藍芽功能」,可搭配購買GAME'NIR藍芽手把傳輸器,就能使手把在PC上無線使用囉!

商品規格

GAME' NIR 七代雙驅引擎無線手把DS 傳說特仕版


產品名稱	GAME' NIR 七代雙驅引擎無線手把DS 傳說特仕版
型　　號	GN-ProX-Legend7Ds
配　　件	USB to USB C、傳輸線、產品說明書
主要功能	喚醒Switch主機、支援amiibo讀取、多段連發、按鍵記憶設定 可調節震度馬達、敏銳六軸體感雙類比搖桿、省電自動休眠
使用時間	約24-30 小時　待機時間 約1200小時
充電時間	約2-5小時
充電電壓	DC 5V
充電接口	USB C
電池容量	950mAh
適用系統	Switch、PC/Steam、Android、iOS
連線方式	藍牙無線連接、USB有線連接
外殼材質	新強化ABS環保材質
產品尺寸	15.2 x 11.3 x 5.9 cm
產品監製	GAME'NIRTaiwan
產　　地	China

保固連結

① 打開手機相機掃描QR Code 或
② 開啟LINE > 加入好友功能點選掃描QR Code

Youtube 影片教學

① 打開手機相機掃描QR Code 或
② 開啟LINE > 加入好友功能點選掃描QR Code

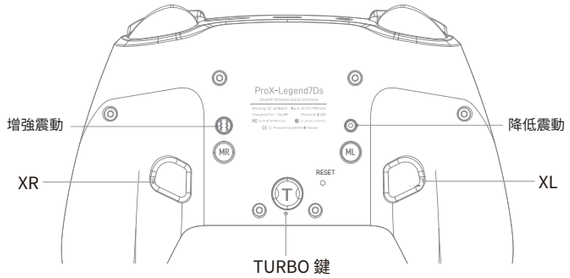

T TURBO 連發功能

如何啟動:按下TURBO鍵(T鍵)+A/B/X/Y/L/R/ZR/ZL動作鍵,即可設置連發。
1. 長按連發:按下T鍵+單擊動作鍵
2. 全自動連發:按下T鍵+雙擊動作鍵
*啟動全自動連發時,單按該連發中動作鍵,可暫停自動連發功能,再次按下便可開啟。


如何取消連發動作
1. 若是按鍵在長按連發時,需再按T+2下動作鍵,關閉該按鍵連發
2. 若是按鍵在全自動連發時,需再按T+1下動作鍵,關閉該按鍵連發
清除設定:長按T鍵5秒,清除當下所有連發功能。

三段頻率:按T鍵與「+鍵」增加連點頻率,按T鍵與「-鍵」減少頻率
三段頻率分別為每秒 5次/12次/20次 連發。

馬達強弱震動調節

增強震動效果(左邊)　降低震動效果(右邊)

①按住背部震動鍵(右邊)可以加強馬達的震動強度
②按住背部震動鍵(左邊)可以減弱馬達的震動強度
總共有五個強度,100%,75%,50%,25%,0%
*僅適用SWITCH遊玩調整

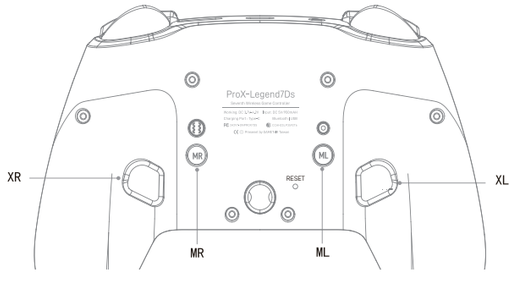

單一按鍵複製

1.長按MR/ML按3秒,震動後可開始複製按鍵。
2.輸入需要複製的「單一按鍵」。
3.輸入完畢再按一下MR/ML結束複製,手把會震動一下代表設定成功。
4.按下XR/XL鍵,則會替換成方才複製的「單一按鍵」。


招式記憶設定

1.長按MR/ML按3秒,震動後可開始記憶設定
2.輸入需要記憶的「招式步驟」,輸入完畢再按一下MR/ML結束複製,手把震動代表設定成功。
3.按下XR/XL鍵,將會觸發方才「招式記憶」的動作。

*可記憶動作的按鍵為"A、B、X、Y、L、R、ZL、ZR、+、-、十字鍵、搖桿蘑菇頭"(可用作遊戲中的連續招式)。
*組合按鍵記憶最多20步
*SWITCH/XBOX/GAMEPAD/安卓/iOS/PC無線/PC有線模式,均可使用按鍵記憶功能

• 開啟及關閉背鍵功能
長按 ▭ 鍵加上R鍵或L鍵5秒,可關閉及開啟背鍵XR/MR或XL/ML
避免誤觸施放;開啟/關閉時皆會震動一下。　*出廠預設為開啟

• 清除複製按鍵與記憶設定
長按MR/ML按鍵3秒後震動,無須按任何其他按鍵,
再按一次ML/MR鍵,會清除XR/XL複製的按鍵或記憶的動作。

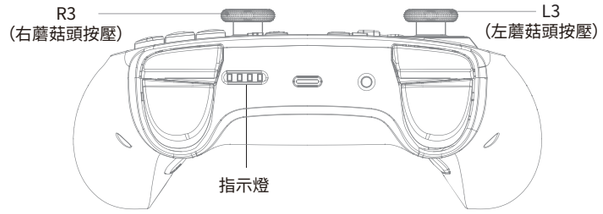

指示燈說明

電量提示:
同時按下T鍵與十字鍵的左鍵/右鍵,側面指示燈將閃爍顯示大約電量比例:
一顆燈低於25%、四顆大於90%。
①低電量提醒:遊戲中LED指示燈緩慢閃爍
*低電量狀態時,容易影響連線穩定度,建議適時進行充電,以獲得較佳遊戲體驗。
②充電顯示:LED指示燈閃爍
③充電完成:LED指示燈熄滅

配對模式顯示:配對成功時,指示燈長亮。
Xbox模式 (Xinput) :對應1+4 號LED指示燈亮
Switch模式(Dinput):對應2+3 號LED指示燈亮

遊戲氛圍燈控制

搖桿環狀燈模式控制:
背後T鍵+「L3」(左邊蘑菇頭按壓):
T+按一下L3:開啟燈光｜T+連按二下L3:開啟呼吸燈模式/關閉燈光

搖桿環狀燈亮度調節:
背後T鍵+長按「L3」(左邊蘑菇頭按壓)
可調節燈光的亮度,4 個級別。25%、50%、75%、100%

ABXY按鍵燈控制:
背後T鍵+「R3」(右邊蘑菇頭按壓):
按第一下R3:開啟呼吸燈模式｜按第二下R3:關閉燈光

自動休眠模式切換

一定時間無動作,將啟動省電休眠模式,可切換為無動作5分鐘/30分鐘後休眠。
操作方法:
同時長按[左蘑菇頭-L3鍵 + 右蘑菇頭-R3鍵] 5秒後便可切換
*休眠模式延長後可能會稍微影響手把續航時間,建議使用完手把後進行手把充電1-2小時,讓手把保持電量充足。

注意事項

低電量保護機制

因 GAME'NIR 手把有設置低電量保護機制,若遊戲中手把出現低電量 警示,請先充電再繼續使用,建議不要玩到完全沒電才充電,因為手把 完全沒電,有可能會進入低電量保護模式(意即進入強制休眠模式)。另外若手把很久沒用,建議再次使用前也要充一下電(約0.5-1HR) 再開始使用,避免進入低電量保護模式唷!


其他


·手把充電建議使用5V/1-2A以下規格充電器,避免電流過大容易造成短路。
·手把與裝置無線連接時,建議避免隔著金屬、厚牆或周遭使用較強的 WIFI、藍芽裝置以減少環境造成的訊號干擾,導致連線較不穩定,或是 連線距離會需要比較近才比較不會受干擾。


NCC 警語

取得審驗證明之低功率射頻器材,非經核准,公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。低功率射頻器材之使用不得影響飛航安全及干擾合法通信;經發現有干擾現象時,應立即停用,並改善至無干擾時方得繼續使用。前述合法通信,指依電信管理法規定作業之無線電通信。低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

PROX-LEGEND7DS Wireless Game Controller

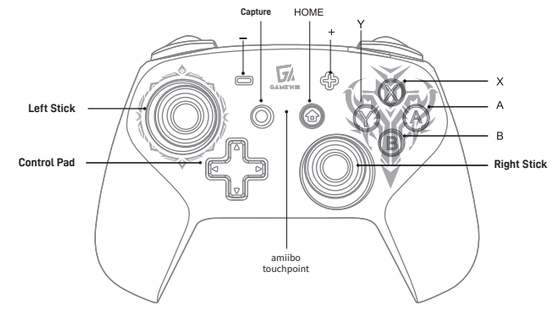

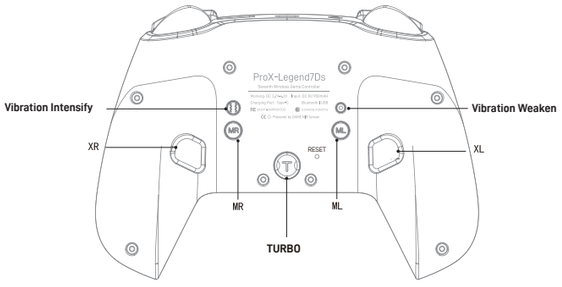

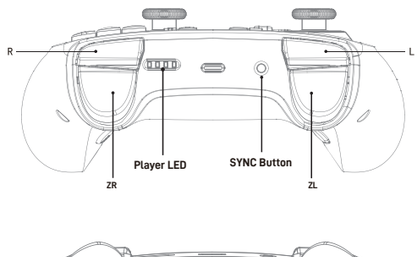

Game Device Pairing Method

Switch Console - Wireless Pairing With Bluetooth

First-time Pairing：
From the HOME Menu, select "Controllers", then "Change Grip and Order". Press and hold down the "SYNC Button" on the top of the controller for about 3-5 seconds until the indicator light flashes rapidly for pairing.

Subsequent connections + wake the Switch console:
After the first successful pairing, you only need to press the HOME button briefly when near the console, and after the indicator light flashes, you can connect and wake the Switch console.

Switch Console - Wired Pairing With USB

In TV Mode, connect the wireless controller to a Nintendo Switch dock via a USB to USB C charging cable to pair the controller and charge it as you play.
(Please make sure the"Pro Controller Wired Communication" option is enabled under System Settings > Controllers and Sensors.)

Android/ iOS/ Apple Arcade

1.Grab your device and launch the Settings app, then open the Bluetooth preference pane.
2.Press the button on the wireless controller for pairing：B+HOME Button for XBOX mode connection, or Y+HOME Button for NS mode connection.
3.Locate "XBOX Controller" or "Pro controller" in the available Bluetooth devices list.
4.Tap on it, then your device will now connect with and pair to the wireless controller.

*Before using the controller, make sure the game supports controller functionality.
*Most mobile devices prioritize XBOX mode as the primary mode, and not all mobile or tablet systems support NS mode.
mode as the primary mode.

NOTICE

When connecting the controller to different devices, you need to switch modes.
For example, when connecting the controller to iOS/Android devices, press X+Home key simultaneously to connect in the corresponding mode. To switch back to using it on a Switch, press Y+Home key simultaneously to change modes and connect.

The functionality of the controller (gyro aiming, pointer movement, vibration, etc.) within PC/STEAM/Android/iOS/Apple Arcade may vary depending on the specific game settings and supported features.

Game Device Pairing Method

STEAM | PC

A. Wired Connection Pairing with USB
Use the included charging cable or any USB A to USB C data cable to connect directly. In the wired state, the controller is detected as XBOX mode as the default. If you want to use the NS mode in the wired state, please press and hold R3 (press down on the Right Stick) and connect the USB cable to enabled the NS mode.

B. Wireless Connection Pairing with Bluetooth
If your computer (desktop/laptop) has Bluetooth functionality to receive controller signals or external Bluetooth antenna, it providing three connection modes to pairing.

NS mode
a. Press and hold the Y+HOME button for 2-3 seconds for pairing.
b. Launch the "Bluetooth" settings page and click on "Add device," then Locate the "Pro controller" in the available Bluetooth devices list.
c. Click to confirm pairing and connect.

XBOX mode
a. Press and hold the B+HOME button for 2-3 seconds for pairing.
b. Launch the "Bluetooth" settings page and click on "Add device," then Locate the "XBOX controller" in the available Bluetooth devices list.
c. Click to confirm pairing and connect.

GAMEPAD mode
a. Press and hold the X+Home button for 2-3 seconds for pairing.
b. Launch the "Bluetooth" settings page and click on "Add device," then Locate the "GAMEPAD" in the available Bluetooth devices list.
c. Click to confirm pairing and connect.

Auto Sleep Mode

Can switch to power-saving sleep after 5 minutes/30 minutes.
Operation method: Long press [L3 key + R3 key] for 5 seconds to switch, a successful switch will produce a vibration feedback.

*Extending sleep mode may slightly affect the controller's battery life, it is recommended to charge the controller for 1-2 hours after use to keep the battery sufficient.

ITEM MODEL

Product Name	GAME'NIR ProX Wireless Game Controller
Item Model	GN-ProX-Legend7Ds
Pack Contents	USB to USBC Charging Cable, User Manual
Functions	Wake Switch console, Support Amiibo accessory, Multiple TURBO combo, Button memory settings, Adjustablevibration mode, Dual analog joysticks, Sensitive six-axis somato sensory, Power-saving and auto sleep mode
Playing Time	24-30 hours / STANDBY TIME 1200 hours
Charging Time	2-5 hours
Input Voltage	DC 5V
Charging InPUT	USB C
Battery	950mAh (WORKING：DC3.7-4.12V)
Plateforms	Switch, PC/Steam,Steamdeck, Android, iOS
Connection Method	Bluetooth, USB A to USB C data cable
Material	New strengthen ABS
SIZE	15.2 x 11.3 x 5.9 cm
Supervision	GAME'NIR Taiwan
Country of Origin	China (Design by GAME'NIR Taiwan)


NOTICE

LOW BATTERY PROTECTION MECHANISM

The controller is equipped with a low battery protection mechanism. If a low battery warning occurs during gameplay, please charge the controller before continuing to use it. It is recommended not to use the controller until the battery is completely drained, as it may enter low battery protection mode (i.e., forced sleep mode) when the battery is fully depleted. Additionally, if the controller has not been used for a long time, it is suggested to charge it for about 0.5-1 hour before using it again to avoid entering the low battery protection mode.

OTHER

· It is recommended to charge the controller using a charger with a specification of 5V/1-2A or lower to avoid short-circuiting caused by excessive current.
· When the controller is wirelessly connected to a device, it is advised to avoid placing metal objects, thick walls, or using strong Wi-Fi or Bluetooth devices in the surrounding area. This helps to reduce environmental interference with the signal, which can lead to unstable connections or require a closer connection distance to avoid interference.

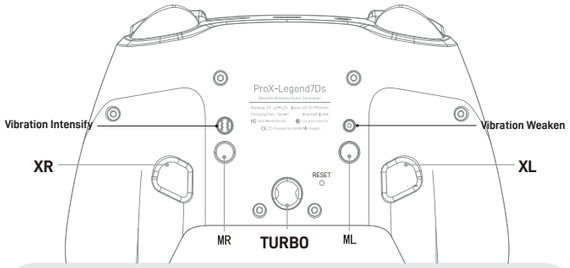

TURBO | Combo Function


How to trigger: Press and hold down the TURBO button (T button) + press A/B/X/Y/R/L/ZR/ZL action button to activate the combo function.
1. Long press combo: Press and hold down T button + press once action button
2. Auto combo: Press and hold down T button + press twice action button
*When activating auto combo mode, you can press the combo action button to pause the combo mode, and press it again to resume.
How to stop combo mode
1. If the button is during long press combo mode, you can press and hold down T button + press twice action button to stop the combo mode.
2. If the button is during auto combo mode, you can press and hold down T button + press once action button to stop the combo mode.
Remove all combo functions
Press and hold the T button for 5 seconds to clear all current combo functions.
Three frequency levels
Press T button and "+" button to increase the combo frequency, press T button and "-" button to decrease the combo frequency.
The three frequency levels are 5/12/20 clicks per second.

Vibration Intensity Adjustmen

Vibration Intensify (Left) **Vibration Weaken (Right)**

① Press and hold the right side of the vibration button on the back to increase the motor's vibration intensity.
② Press and hold the left side of the vibration button on the back to decrease the motor's vibration intensity.

There are a total of five intensities: 100%, 75%, 50%, 25%, and 0%.
*Only applicable for adjustments in SWITCH gameplay mode.

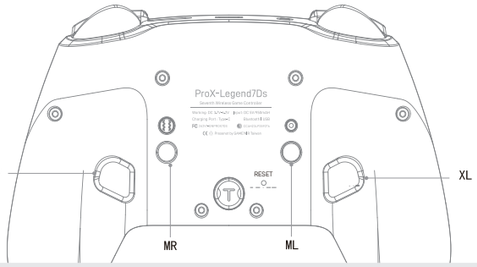

Button Memory | Macro Function

Single Button Setting »Copy
(1) Press MR/ML for 3 seconds , after vibration, start setting the copy button.
(2) Enter the "single button" you want to copy.
(3) Press MR/ML again to finish copying; the controller will vibrate , indicating a successful setup.action.
(4)Press the XR/XL button, it will be replaced with the previously copied button.

Macro Button Setting »memorized
(1) Press MR/ML for 3 seconds will vibrate to start recording the combo move
(2) input the steps of the combo you want to memorize.
(3) Press MR/ML again to finish memorize; the controller will vibrate once, indicating a successful setup
(4) Press the XR/ XL button to trigger the memorized multi-button action as macro.


*Up to 20 steps can be memorized for multi-button actions.
*The Action button that can be memorized for actions include A, B, X, Y, L, R, ZL, ZR, +, -, D-pad, and both joysticks (can be used for combo moves in games).
*This button memory function can be used in SWITCH mode, Android mode, iOS mode, PC wireless mode, PC wired mode, and XBOX mode.

Clearing Action Memory and Duplicating buttons

Press and hold the MR button without pressing any other button, and then release it. This will clear any duplicated buttons or memorized actions associated with the XR button. Similarly, following the same steps and pressing and holding the ML button will clear the memorized actions associated with the XL button.

Turn on and off | Marco function

Long press the "-" button and "R"or"L" button for 5 seconds, to turn on/off the Marco keys to avoid accidental triggering * Turning on/offwill be a vibration

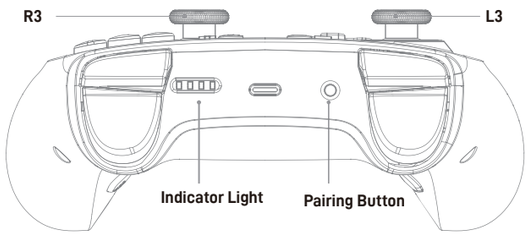

Indicator Light Instructions

① **Low battery reminder:**
During gameplay, the LED indicator light will slowly flash.
When in a low battery state, connection stability may be affected. It is recommended to charge the device in a timely manner for a better gaming experience.

② Charging display: The LED indicator light will flash.
③ Charging complete: The LED indicator light will remain on.
Pairing mode display: When pairing is successful, the indicator light will remain on.
Xbox mode (Xinput): LED indicators 1 and 4 will be on.
Switch mode (Dinput): LED indicators 2 and 3 will be on.

Gaming Atmosphere Light Control

Gaming Atmosphere Light Control
Joystick ring light mode control:
Press the T button on the back + L3 button (press the Left Stick):
T button + L3: Turn on RGB lights.
T button + double-click L3: Turn on Activate breathing light mode/ Turn off RGB lights.

Joystick Ring Light Brightness Adjustment:
Press the T button on the back + hold down "L3" (press the leftStick)
Adjustable light brightness, 4 levels: 25%, 50%, 75%, 100%.

ABXY Button Light Control:
Press the T button on the back + R3 button (press the Right Stick):
First press R3: Turn on Activate breathing light mode. Second press R3: Turn off the light.

FCC CAUTION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

NOTE:
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.
FCC ID:2A2VT-GNPROX7DS

FCC RF WARNING STATEMENT：
The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without restriction.

Youtube Video Tutorial
Scan the QR Code with your phone's camera or QR Code Scanner.