As you read this manual, you will find Information that is preceded by a symbol NOTICE. This information is intended to help you avoid damage to your vehicle, other property, or the environment.

Symbols ⚠⚠📖 on labels attached to your vehicle are to remind you to read this owner's manual for proper and safe operation of your vehicle.

⚠⚠ is colour-coded to indicate "danger" (red), "warning" (orange), or "caution" (amber).

➡ **Safety Labels** P. 94

A Few Words About Safety

Your safety, and the safety of others, is very important. And operating this vehicle safely is an important responsibility.

To help you make informed decisions about safety, we have provided operating procedures and other information on labels and in this manual. This information alerts you to potential hazards that could hurt you or others.

Of course, it is not practical or possible to warn you about all the hazards associated with operating or maintaining your vehicle. You must use your own good judgement.

You will find this important safety information in a variety of forms, including:

- **Safety Labels** - on the vehicle.
- **Safety Messages** - preceded by a safety alert symbol ⚠ and one of three signal words: **DANGER**, **WARNING**, or **CAUTION**. These signal words mean:

⚠DANGER	You WILL be KILLED or SERIOUSLY HURT if you don't follow instructions.
⚠WARNING	You CAN be KILLED or SERIOUSLY HURT if you don't follow instructions.
⚠⚠WARNING	You CAN be KILLED or SERIOUSLY HURT if you don't follow instructions.
⚠CAUTION	You CAN be HURT if you don't follow instructions.

- **Safety Headings** - such as Important Safety Precautions.
- **Safety Section** - such as Safe Driving.
- **Instructions** - how to use this vehicle correctly and safely.

This entire book is filled with important safety information - please read it carefully.

Foot Brake

Your vehicle is equipped with disc brakes at all four wheels. A vacuum power assist helps to reduce the effort needed on the brake pedal. The brake assist system increases the stopping force when you depress the brake pedal hard in an emergency situation. The anti-lock brake system (ABS) helps you retain steering control when braking very hard.

➔ **Brake Assist System** P. 618
➔ **Anti-lock Brake System (ABS)** P. 617

Foot Brake

Check the brakes after driving through deep water, or if there is a buildup of road surface water. If necessary, dry the brakes by lightly depressing the pedal several times.

If you hear a continuous metallic friction sound when applying the brakes, the brake pads need to be replaced. Have your vehicle checked by a dealer.

Constantly using the brake pedal while going down a long hill builds up heat, which reduces the brake effectiveness. Apply engine braking by taking your foot off the accelerator pedal and downshifting to a speed position.

Do not rest your foot on the brake pedal while driving, as it will lightly apply the brakes and cause them to lose effectiveness over time and reduce pad life. It will also confuse drivers behind you.

Continued

Handling Precautions

The turbocharger is a high-precision device to obtain greater horsepower by delivering a large volume of compressed air into the engine using a turbine driven by the engine's exhaust gas pressure.

- When the engine is cold just after starting, avoid revving the engine or sudden acceleration.

- Always replace the engine oil and engine oil filter according to the maintenance schedule. The turbine rotates at very high speeds over 100,000 rpm and its temperature reaches over 700°C. It is lubricated and cooled by engine oil. If you fail to replace the engine oil and filter at the scheduled distance or interval, deteriorated engine oil may cause failure such as sticking and abnormal noise of the turbine bearing.

Turbo Engine Vehicle

The scheduled maintenance intervals for replacing the engine oil and filter is indicated on the driver information interface. Follow the information on replacement timing.

Oil Monitor System P. 639
Recommended Engine Oil P. 654

The **Engine temperature too hot. Do not drive. Allow engine to cool.** or **Engine temperature near limit. Avoid heavy acceleration and high speed.**[*1]/**Engine temperature near limit. Avoid strong acceleration and high speed.**[*2] message may appear on the driver information interface when you restart the engine after driving under high load conditions such as at high speed or in hilly terrain. This is normal. The message goes off after you idle or drive the vehicle for about one minute.


Models with B-type meter

The temperature gauge pointer is at the upper level when you restart the engine after driving under high load conditions such as at high speed or in hilly terrain. This is normal. The gauge goes down after you idle or drive the vehicle for about one minute.

*1: Cambodian, Laotian and Philippine models
*2: Except Cambodian, Laotian and Philippine models

Maintenance

This chapter discusses basic maintenance.

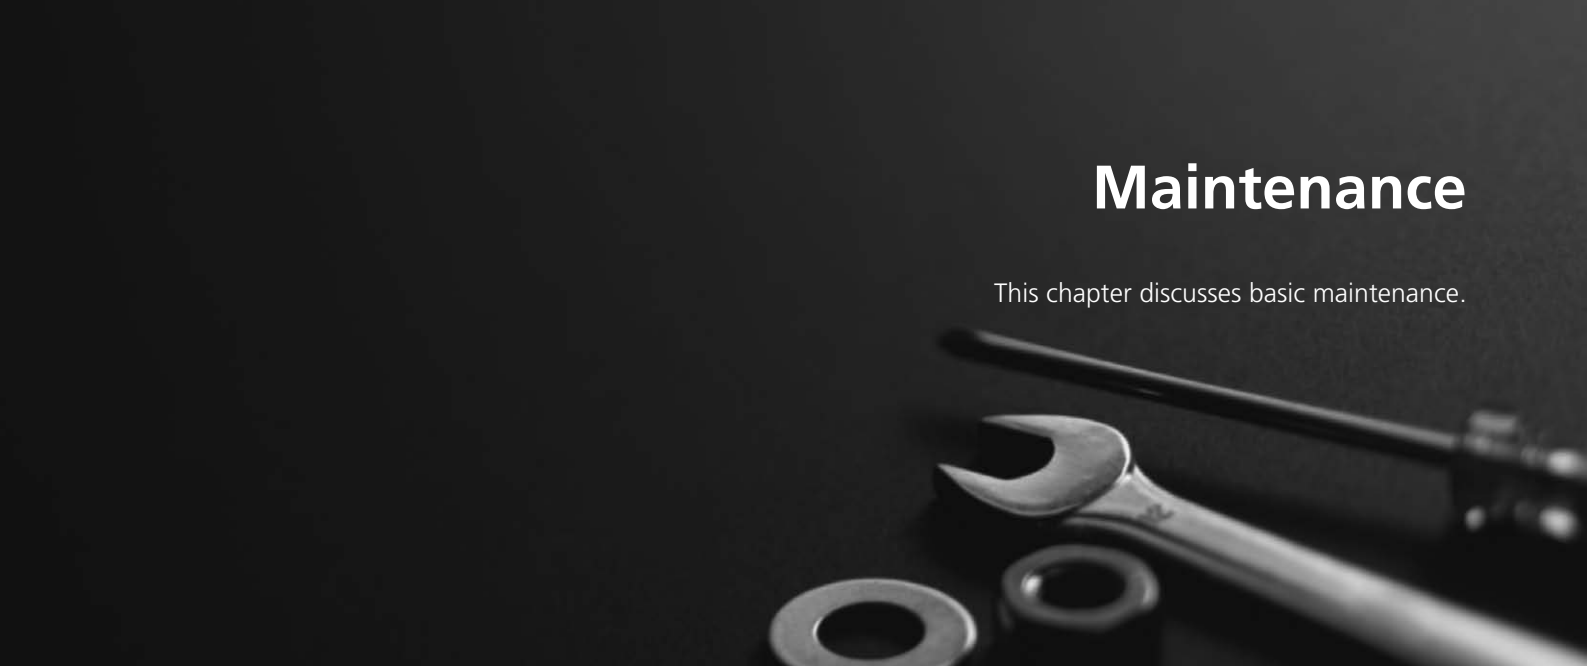

Before Performing Maintenance
- Inspection and Maintenance 636
- Safety When Performing Maintenance 637
- Parts and Fluids Used in Maintenance Service 638

Oil Monitor System 639
Maintenance Schedule 646
Maintenance Under the Bonnet
- Maintenance Items Under the Bonnet ...651
- Opening the Bonnet 652
- Recommended Engine Oil 654
- Oil Check 656
- Adding Engine Oil 657
- Engine Coolant 658
- Transmission Fluid 661
- Brake Fluid 662
- Refilling Window Washer Fluid 663
- Fuel Filter 663

Replacing Light Bulbs 664
Checking and Maintaining Wiper Blades 675
Checking and Maintaining Tyres
- Checking Tyres 677
- Wear Indicators 678
- Tyre Service Life 678
- Tyre and Wheel Replacement 679
- Tyre Rotation 680
- Snow Traction Devices 682

Battery 683
Remote Transmitter Care
- Replacing the Remote Battery 686

Climate Control System Maintenance 689
Cleaning
- Interior Care 691
- Exterior Care 694

Accessories and Modifications 697

Inspection and Maintenance

For your safety, perform all listed inspections and maintenance to keep your vehicle in good condition. If you become aware of any abnormality (noise, smell, insufficient brake fluid, oil residue on the ground, etc.), have your vehicle inspected by a dealer. Refer to the Service Book that came with your vehicle/maintenance schedule in this owner's manual for detailed maintenance and inspection information.

➡ **Maintenance Schedule** P. 646

■ Types of Inspection and Maintenance

■ Routine inspections

Perform inspections before long distance trips, when washing the vehicle, or when refueling.

■ Periodic inspections


- Check the brake fluid level monthly.
  ➡ **Brake Fluid** P. 662
- Check the tyre pressure monthly. Examine the tread for wear and foreign objects.
  ➡ **Checking and Maintaining Tyres** P. 677
- Check the operation of the exterior lights monthly.
  ➡ **Replacing Light Bulbs** P. 664
- Check the condition of the wiper blades at least every six months.
  ➡ **Checking and Maintaining Wiper Blades** P. 675

The warning message notifies you when to change the engine oil, or when to bring your vehicle to a dealer for indicated maintenance services.

Displaying the Oil Monitor System Information

Models with A-type meter

1. Set the power mode to ON.
2. Press the (home) button.
3. Roll the left selector wheel until is displayed.
4. Press the left selector wheel to go to the oil monitor system information screen. The engine oil life appears on the driver information interface.

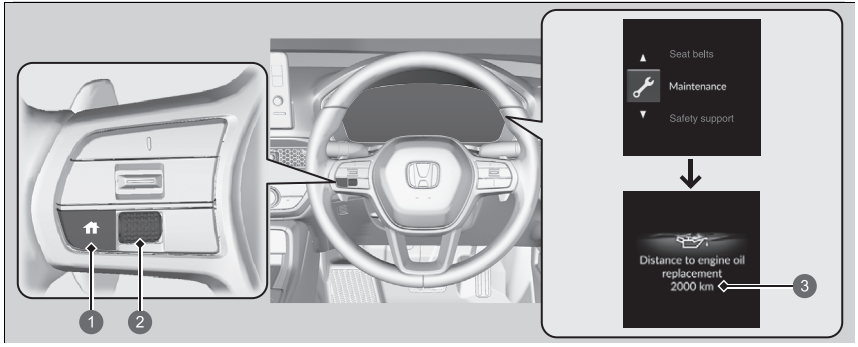

❶ (home) Button
❷ Left Selector Wheel
❸ Remaining distance to the next engine oil maintenance period

The system message indicator (ⓘ) stays on in the instrument panel after the maintenance period reached. Have the indicated maintenance done by a dealer immediately.

Continued

Displaying the Oil Monitor System Information

Based on the engine operating and engine oil conditions, the remaining distance to the next maintenance period is calculated and displayed.

By driving conditions, actual travel distance might be shorter than the displayed distance.


Regardless of what the oil monitor system information indicates, perform maintenance regularly. Please refer to the maintenance schedule for more details.

Maintenance Schedule P. 646

Models with B-type meter

1. Set the power mode to ON.



2. Roll the right selector wheel until the oil monitor system information screen is displayed. The engine oil life appears on the driver information interface.

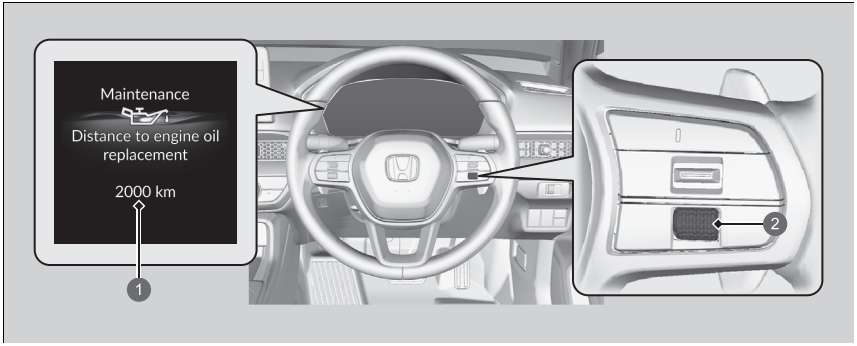





❶ Remaining distance to the next engine oil maintenance period
❷ Right Selector Wheel

The system message indicator (ⓘ) stays on in the instrument panel after the maintenance period reached. Have the indicated maintenance done by a dealer immediately.



Oil Monitor System Information on the Driver Information Interface

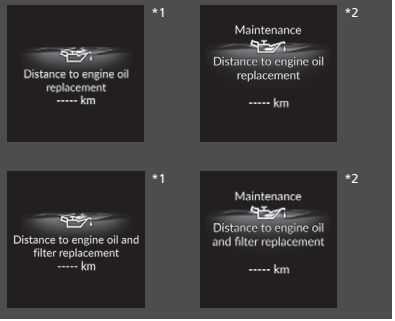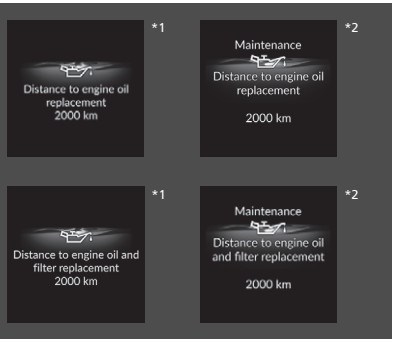Warning Message	Oil Life Display	Information
Normal —		When you reset the remaining distance after an oil change, a series of dots will appear in the oil life display. These dots will remain displayed until the system determines, based on the driving conditions, the remaining distance until the next oil change, or the next oil and filter change.
		When you select the oil monitor system information screen, the remaining engine oil life, or the remaining engine oil and oil filter life is displayed.

*1:Models with A-type meter
*2:Models with B-type meter

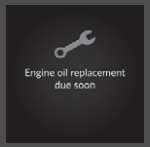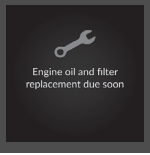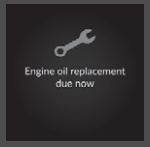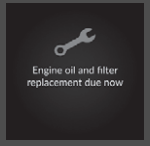Warning Message	Oil Life Display	Information
Replacement Due Soon  	   	The engine oil, or the engine oil and oil filter are approaching the end of their life.
Replacement Due Now  	   	The engine oil, or the engine oil and oil filter have almost reached the end of their service life, and the maintenance service item(s) should be inspected and serviced as soon as possible.

*1:Models with A-type meter
*2:Models with B-type meter

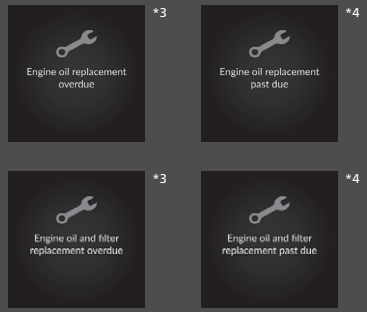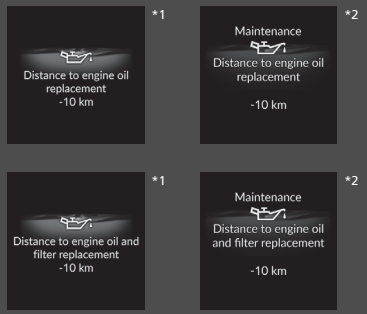Warning Message	Oil Life Display	Information
Replacement Overdue*3 **Replacement Past Due*4** 		The engine oil, or the engine oil and oil filter have passed their service life. The maintenance service item(s) must be inspected and serviced immediately.

*1:Models with A-type meter
*2:Models with B-type meter
*3:Except Cambodian, Laotian, and Philippine models
*4:Cambodian, Laotian, and Philippine models

■ Resetting the Display

Reset the engine oil monitor system information if you have performed the maintenance service.

Models with A-type meter

1. Set the power mode to ON.
2. Press the (home) button.
3. Roll the left selector wheel until is displayed.
4. Press the left selector wheel to go to the oil monitor system information screen.
5. Press and hold the left selector wheel for about 10 seconds to enter the reset mode.
6. Roll the left selector wheel to select **Reset** (You can also select **Cancel** to end the process).
7. Press the left selector wheel to reset the selected item.
▶ When the oil monitor system information display is reset, the engine oil life is reset to ----- km.



❶ (home) Button
❷ Left Selector Wheel

* Not available on all models

Resetting the Display

NOTICE
Failure to reset the engine oil life after a maintenance service results in the system showing incorrect maintenance intervals, which can lead to serious mechanical problems.

You can also reset the oil monitor system information display using the driver information interface or audio/information screen.

Models without Display Audio
Clock* & Vehicle Settings P. 138


Models with Display Audio without Google built-in
How to Customize the Vehicle Settings P. 367

Models with Display Audio with Google built-in
How to Customize the Vehicle Settings P. 465

The dealer will reset the engine oil life display after completing the required maintenance service. If someone other than a dealer performs maintenance service, reset the engine oil life display yourself.

Models with B-type meter

1. Set the power mode to ON.
2. Roll the right selector wheel until the oil monitor system information screen is displayed.
3. Press and hold the right selector wheel for about 10 seconds to enter the reset mode.
4. Roll the right selector wheel to select **Reset** (You can also select **Cancel** to end the process).
5. Press the right selector wheel to reset the selected item.
   ▶ When the oil monitor system information display is reset, the engine oil life is reset to ----- km.

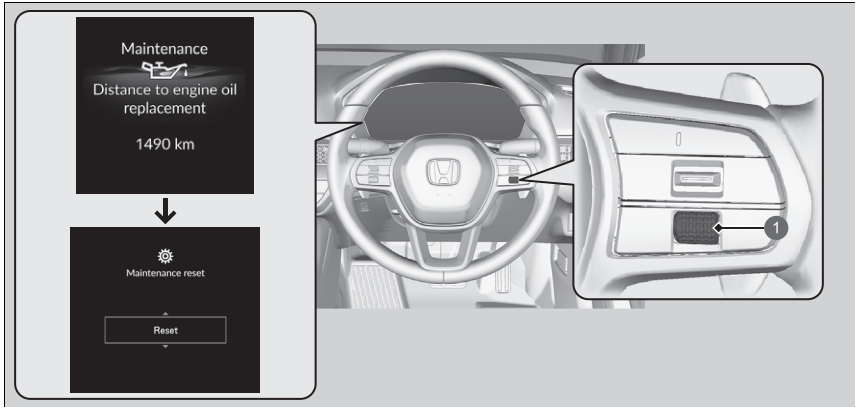

❶ Right Selector Wheel

Maintenance Schedule

If your vehicle comes with the service book, the maintenance schedule for your vehicle is available in the book. For vehicles without the service book, refer to the following maintenance schedules.

The maintenance schedule outlines the minimum required maintenance that you should perform to ensure the troublefree operation of your vehicle. Due to regional and climatic differences, some additional servicing may be required. Please consult the service information provided for your vehicle for a more detailed description.

Maintenance work should be performed by properly trained and equipped technicians. Your authorised dealer meets all of these requirements.

Except South African models

Service at the indicated distance or time - whichever comes first.	km X 1,000	20	40	60	80	100	120	140	160	180	200
	months	12	24	36	48	60	72	84	96	108	120
Replace engine oil		When indicator comes on or 1 year									
Replace engine oil filter		When indicator comes on or 2 years									
Replace air cleaner element		Every 30,000 km									
Inspect valve clearance	Except E85	Every 120,000 km*1									
	E85	Every 40,000 km									
Replace spark plugs	Except E85	Every 100,000 km									
	E85	Every 60,000 km									
Inspect drive belt			•		•		•		•		•
Replace engine coolant		At 200,000 km or 10 years, thereafter every 100,000 km or 5 years									
Add genuine injector cleaner agent*2		Every 10,000 km or 1 year									

*1:Sensory Method
Adjust the valves during service 120,000 km if they are noisy.
*2:Regular use of injector cleaner is required for models designated for Honduras, Nicaragua, Gambia, Nigeria, Cape Verde, Peru, Djibouti, Guinea, Guatemala, Venezuela, Haiti, Togo, Equatorial Guinea, Afghanistan, Iraq, Liberia, Philippines, Sierra Leone, Dominica, Grand Cayman, and Bangladesh.

Service at the indicated distance or time - whichever comes first.		km X 1,000	20	40	60	80	100	120	140	160	180	200
		months	12	24	36	48	60	72	84	96	108	120
Replace transmission fluid				•		•		•		•		•
Replace dust and pollen filter			•	•	•	•	•	•	•	•	•	•
Inspect front and rear brakes			Every 10,000 km or 1 year									
Replace brake fluid			Every 3 years									
Replace fuel filter in tank*3	Normal		Every 140,000 km									
	Severe		Every 90,000 km*5									
Replace fuel filter in tank*4	Normal		Every 120,000 km									
	Severe		Every 60,000 km*5									
Rotate tyres (Check tyre inflation and condition at least once per month)			Every 10,000 km									
Visually inspect the following items:												
Driveshaft boots Tie rod ends, steering gear box, and boots Suspension components			Every 10,000 km or 1 year									
Brake hoses and lines (including ABS/VSA) Exhaust system Fuel lines and connections All fluid levels and condition of fluid			•	•	•	•	•	•	•	•	•	•

*3:Except African (except South African) and South American (except Brazilian) and Indonesian models
*4:African (except South African) and South American (except Brazilian) and Indonesian models
*5:It is recommended that you replace the fuel filter if the fuel you are using is suspected to be contaminated with dust, etc. because the filter may be clogged sooner.


Severe Conditions

Follow the Severe Conditions Maintenance Schedule if you drive your car MAINLY under one or more of the following conditions:

- Driving less than 8 km per trip or, in freezing temperatures, driving less than 16 km per trip.
- Driving in extremely hot, over 35°C condition.
- Extensive idling or long periods of stop-and-go driving.
- Driving with a loaded car-top carrier or driving in mountainous conditions.
- Driving on muddy, dusty, or de-iced roads.

NOTE: If you only OCCASIONALLY drive under "severe" conditions, you should follow the Normal Conditions Maintenance Schedule.

Maintenance Items Under the Bonnet

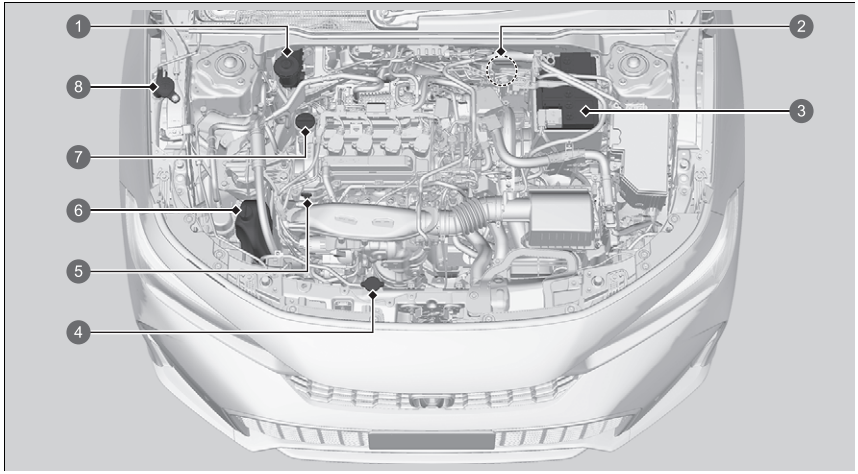

1. Brake Fluid (Black Cap) (Right-hand Drive Type)
2. Brake Fluid (Black Cap) (Left-hand Drive Type)
3. Battery
4. Radiator Cap
5. Engine Oil Dipstick (Orange)
6. Engine Coolant Reserve Tank
7. Engine Oil Fill Cap
8. Washer Fluid (Blue Cap)


Recommended Engine Oil


Use a genuine engine oil or another commercial engine oil of suitable type and viscosity (for the ambient temperature) as shown in the image that follows.

Oil is a major contributor to your engine's performance and longevity. If you drive the vehicle with insufficient or deteriorated oil, the engine may fail or be damaged.

Singaporean models

Genuine Engine Oil	Commercial Engine Oil
• Honda Genuine Motor Oil	• ACEA C2/C3/C5

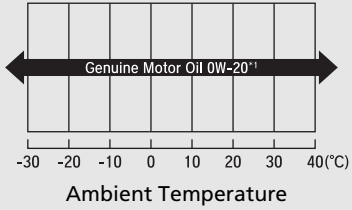

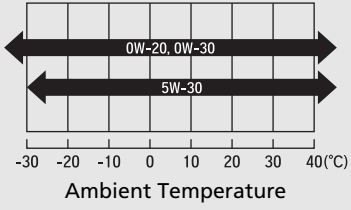

*1:Formulated to improve fuel economy.

Recommended Engine Oil

Engine Oil Additives

Singaporean models

You cannot use Engine Oil Additives.

Except Singaporean models

Your vehicle does not require oil additives. In fact, they may adversely affect the engine performance and durability.


Except Singaporean and Thai models


The following seal indicates the oil is energy conserving and that it meets the American Petroleum Institute's latest requirements.



Thai models

Genuine Engine Oil	Commercial Engine Oil
• Honda Engine Oil Type 2.0*1	• ACEA C2/C3

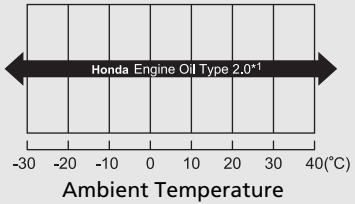


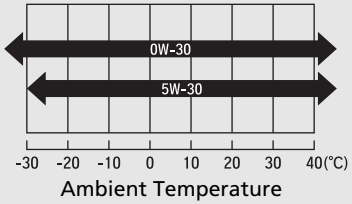


*1:Formulated to improve fuel economy.

Except Singaporean and Thai models

Genuine Engine Oil	Commercial Engine Oil
• Honda Genuine Motor Oil	• API service SN or higher grade fuel-efficient oil • ACEA A5/B5

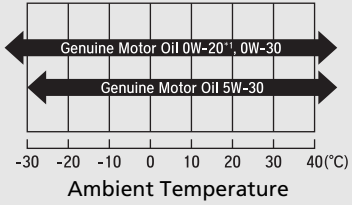

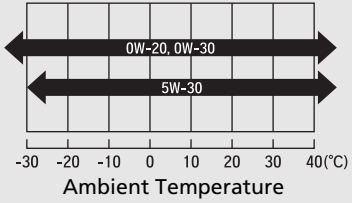


*1:Formulated to improve fuel economy.


Oil Check

We recommend that you check the engine oil level every time you refuel.
Park the vehicle on level ground.

Wait approximately three minutes after turning the engine off before you check the oil.

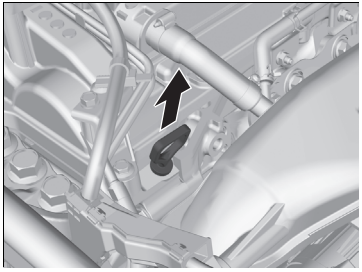

1. Remove the dipstick (orange).
2. Wipe the dipstick with a clean cloth or paper towel.
3. Insert the dipstick back all the way into its hole.

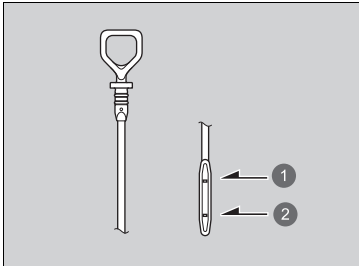


4. Remove the dipstick again, and check the level. It should be between the upper and lower marks. Add oil if necessary.

❶ Upper Mark
❷ Lower Mark

Oil Check

If the oil level is near or below the lower mark, slowly add oil, being careful not to overfill.

Adding Engine Oil

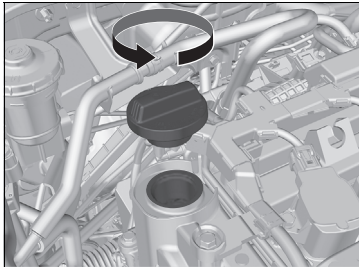

1. Unscrew and remove the engine oil fill cap.
2. Add oil slowly.
3. Reinstall the engine oil fill cap, and tighten it securely.
4. Wait for three minutes and recheck the engine oil dipstick.

Adding Engine Oil

NOTICE

Do not fill the engine oil above the upper mark. Overfilling the engine oil may result in leaks and engine damage.

If any oil spills, wipe it away immediately. Spilled oil may damage the engine compartment components.


Engine Coolant

Specified coolant: Honda All Season Antifreeze/Coolant Type 2

This coolant is premixed with 50% antifreeze and 50% water. Do not add any straight antifreeze or water.

We recommend you check the engine coolant level every time you refuel. Check the reserve tank first. If it is completely empty, also check the coolant level in the radiator. Add the engine coolant accordingly.

■ Reserve Tank

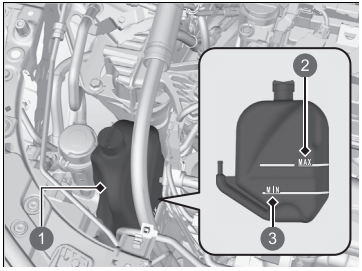

❶ Reserve Tank
❷ **MAX**
❸ **MIN**

1. **Make sure the engine and radiator are cool.**
2. Check the amount of coolant in the reserve tank.
   ▶ If the coolant level is below the **MIN** mark, add the specified coolant until it reaches the **MAX** mark.

Engine Coolant

⚠WARNING

Removing the radiator cap while the engine is hot can cause the coolant to spray out, seriously scalding you.


Always let the engine and radiator cool down before removing the radiator cap.

NOTICE

If temperatures consistently below -30°C are expected, the coolant mixture should be changed to a higher concentration. Consult your Honda dealer for details about a suitable coolant mixture.

If Honda antifreeze/coolant is not available, you may use another major brand of non-silicate coolant as a temporary replacement. Check that it is a high quality coolant recommended for aluminium engines. Continued use of any non-Honda coolant can result in corrosion, causing the cooling system to malfunction or fail. Have the cooling system flushed and refilled with Honda antifreeze/coolant as soon as possible.


Do not add rust inhibitors or other additives to your vehicle's cooling system. They may not be compatible with the coolant or with the engine components.

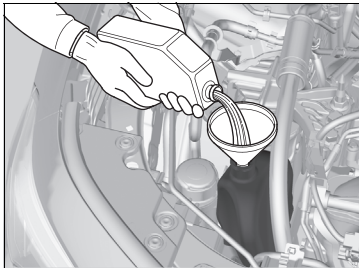

3. Inspect the cooling system for leaks.

Continued

■ Radiator

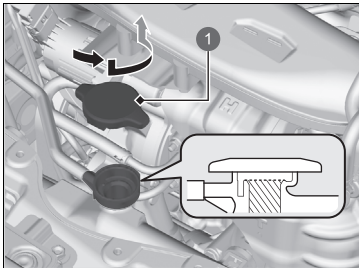


1 Radiator Cap

1. **Make sure the engine and radiator are cool.**
2. Turn the radiator cap 1/8th turn anticlockwise and relieve any pressure in the cooling system.
3. Push down and turn the radiator cap anticlockwise to remove it.
4. The coolant level should be up to the base of the filler neck. Add coolant if it is low.
5. Put the radiator cap back on, and tighten it fully.

■ Radiator Cap

Models with pictogram label

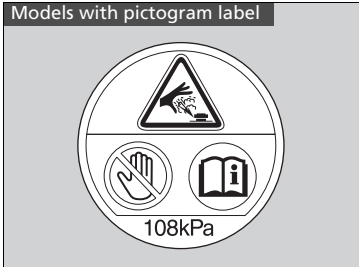

- Never open when hot.
- Hot coolant will scald you.
- Relief pressure valve begins to open at 108 kPa.

Radiator

NOTICE


Pour the fluid slowly and carefully so you do not spill any. Clean up any spills immediately; they can damage components in the engine compartment.

Brake Fluid

Specified fluid: Brake Fluid with DOT 3 or DOT 4

■ Checking the Brake Fluid


Left-hand Drive Type

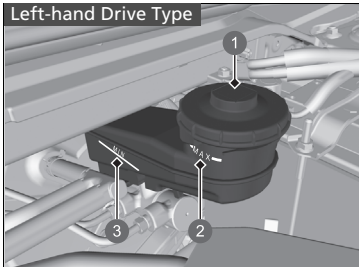

The fluid level should be between the **MIN** and **MAX** marks on the side of the reserve tank.

❶ Reserve Tank
❷ **MAX**
❸ **MIN**

Right-hand Drive Type

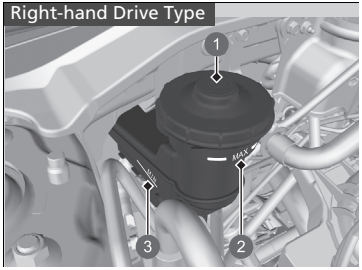

❶ Reserve Tank
❷ **MAX**
❸ **MIN**

Brake Fluid

NOTICE

Brake fluid marked DOT 5 is not compatible with your vehicle's braking system and can cause extensive damage.

We recommend using a genuine product.

If the brake fluid level is at or below the **MIN** mark, have a dealer inspect the vehicle for leaks or worn brake pads as soon as possible.

Checking Tyres

To safely operate your vehicle, your tyres must be of the proper type and size, in good condition with adequate tread, and properly inflated.

■ Inflation guidelines

Properly inflated tyres provide the best combination of handling, tread life, and comfort. Refer to the driver's doorjamb label for the specified pressure.

Underinflated tyres wear unevenly, adversely affect handling and fuel economy, and are more likely to fail from overheating.

Overinflated tyres make your vehicle ride harshly, are more prone to road hazards, and wear unevenly.

Every day before you drive, look at each of the tyres. If one looks lower than the others, check the pressure with a tyre gauge.

At least once a month or before long trips, use a gauge to measure the pressure in all tyres, including the spare. Even tyres in good condition can lose 10–20 kPa (0.1–0.2 bar, 1–2 psi) per month.

■ Inspection guidelines

Every time you check inflation, also examine the tyres and valve stems.
Look for:

- Bumps or bulges on the side or in the tread. Replace the tyre if you find any cuts, splits, or cracks in the side of the tyre. Replace it if you see fabric or cord.
- Remove any foreign objects and inspect for air leaks.
- Uneven tread wear. Have a dealer check the wheel alignment.
- Excessive tread wear.
  ➡ **Wear Indicators** P. 678
- Cracks or other damage around valve stem.

⚠WARNING

Using tyres that are excessively worn or improperly inflated can cause a crash in which you can be seriously hurt or killed.

Follow all instructions in this owner's manual regarding tyre inflation and maintenance.

Measure the air pressure when tyres are cold. This means the vehicle has been parked for at least three hours, or driven less than 1.6 km. If necessary, add or release air until the specified pressure is reached.

If checked when hot, tyre pressure can be as much as 30–40 kPa (0.3–0.4 bar, 4–6 psi) higher than if checked when cold.


High speed driving

Models with 215/50R17 91V tyres

We recommend that you do not drive faster than the posted speed limits and conditions allow. If you drive at sustained high speeds (over 160 km/h), adjust the cold tyre pressures as shown below to avoid excessive heat buildup and sudden tyre failure.

Tyre Size	215/50R17 91V
Pressure	Front: 240 kPa (2.4 bar, 35 psi) Rear: 230 kPa (2.3 bar, 33 psi)

Wear Indicators

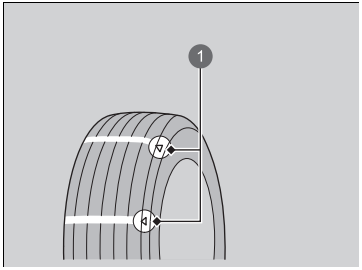

1 Example of a Wear Indicator mark

The groove where the wear indicator is located is about 1.6 mm shallower than elsewhere on the tyre. If the tread has worn so that the indicator is exposed, replace the tyre. **Worn out tyres have poor traction on wet roads.**

Tyre Service Life

The life of your tyres is dependent on many factors, including driving habits, road conditions, vehicle loading, inflation pressure, maintenance history, speed, and environmental conditions (even when the tyres are not in use).

In addition to regular inspections and inflation pressure maintenance, it is recommended that you have annual inspections performed once the tyres reach five years old. All tyres, including the spare, should be removed from service after 10 years from the date of manufacture, regardless of their condition or state of wear.

Checking Tyres

Whenever tyre pressure is adjusted, you must calibrate the deflation warning system*.

Deflation Warning System Calibration P. 537

Have a dealer check the tyres if you feel a consistent vibration while driving. New tyres and any that have been removed and reinstalled should be properly balanced.

* Not available on all models

Tyre and Wheel Replacement

Replace your tyres with radials of the same size, load range, speed rating, and maximum cold tyre pressure rating (as shown on the tyre's sidewall). Using tyres of a different size or construction can cause certain vehicle systems such as the ABS and Vehicle Stability Assist (VSA) system to work incorrectly.

It is best to replace all four tyres at the same time. If that isn't possible, replace the front or rear tyres in pairs.

Make sure that the wheel's specifications match those of the original wheels.

Tyre and Wheel Replacement

⚠WARNING

Installing improper tyres on your vehicle can affect handling and stability. This can cause a crash in which you can be seriously hurt or killed.

Always use the size and type of tyres recommended in the tyre information label on your vehicle.


Tyre Rotation

Rotating tyres according to the maintenance schedule helps to distribute wear more evenly and increase tyre life.

■ Your Vehicle's Tyre Rotation Pattern

Models with a compact spare tyre


Rotate the tyres as shown here.

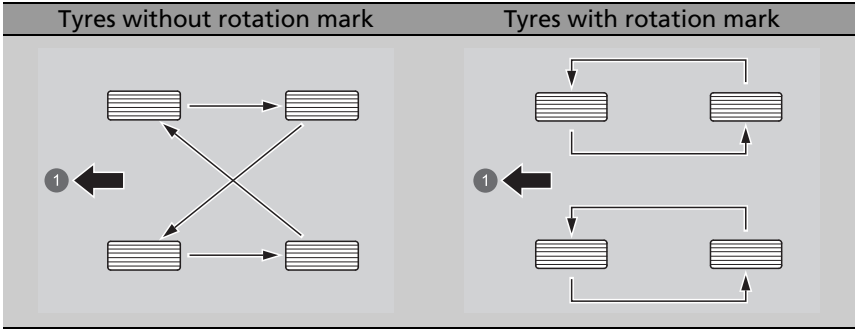

1 Front

Tyre Rotation

Tyres with directional tread patterns should only be rotated front to back (not from one side to the other). Directional tyres should be mounted with the rotation indication mark facing forward, as shown below.

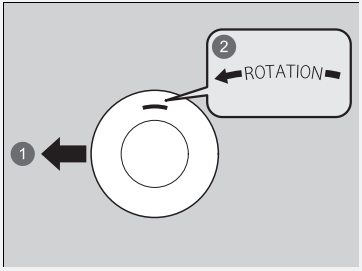

1 Front
2 Rotation Mark

When the tyres are rotated, make sure the air pressures are checked.

Wheel nut torque for the tyres that come standard-equipped with your vehicle is as follows.
Wheel nut torque:
108 N·m (11 kgf·m, 80 lbf·ft)


Whenever tyres are rotated, you must calibrate the deflation warning system*.

Deflation Warning System Calibration
P. 537

* Not available on all models

Models with a full-size spare tyre

Rotate the tyres, including a spare, as shown here.

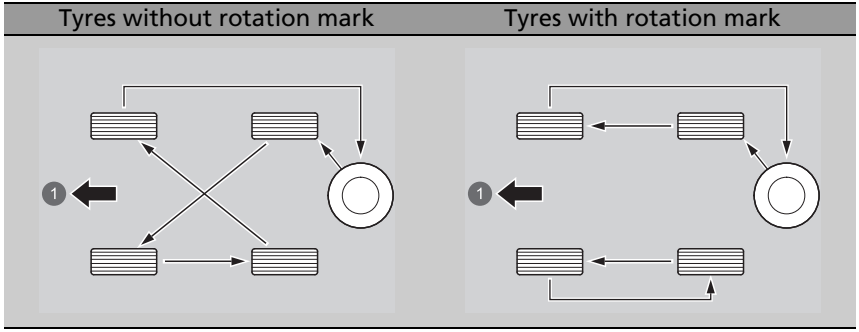

1 Front

■ Vehicle Specifications

Model	Civic
Curb Weight	See the certification label on the driver's doorjamb*1
	1,284 kg*2
	1,290 - 1,347 kg*3
	1,300 - 1,336 kg*4
	1,313 - 1,320 kg*5
	1,314 - 1,337 kg*6
	1,334 - 1,358 kg*7
	1,342 kg*8
	1,348 kg*9
Maximum Permissible Weight	See the certification label on the driver's doorjamb*1 See the certification label on the passenger's doorjamb*7, *9
	1,710 kg*2
	1,760 kg*4, *8
	1,740 kg*5
	1,750 kg*6
	1,720 kg*10
	1,770 kg*11
Maximum Permissible Axle Weight	See the certification label on the passenger's doorjamb*7, *9
Front	920 kg*2
	960 kg*1, *4, *6, *8
	950 kg*5
	930 kg*10
	970 kg*11
Rear	810 kg*1, *4, *6, *8
	800 kg*2, *5, *10
	820 kg*11

*1: Vietnamese models
*2: Singaporean models
*3: Pakistani models
*4: Bruneian, Bangladeshi, Bhutanese, Nepalese, Sri Lankan and Latin American models
*5: Thai models
*6: Cambodian, Laotian and Philippine models
*7: Malaysian models
*8: Indonesian models
*9: African models
*10: Pakistani models with 16 inch wheel
*11: Pakistani models with 17 inch wheel

■ Engine Specifications

Type	Water-cooled in-line 4-cylinder DOHC	
Bore x Stroke	73 × 89.5 mm	
Displacement	1498 cm³	
Compression Ratio	10.3 : 1	
Spark Plugs	NGK	DILKAR8P8DY*1 DILKAR8P8SY*2

*1: Thai models
*2: Except Thai models

■ Fuel

Fuel: Type	• EURO V/5 Unleaded petrol, manganese: maximum 2mg/Litre, research octane number 91 or higher*1 • Unleaded petrol/gasohol up to E85 (15% petrol and 85% ethanol), research octane number 91 or higher*2 • Unleaded petrol, research octane number 91 or higher*3
Fuel Tank Capacity	47 L

*1: Pakistani models
*2: Thai models
*3: Except Pakistani and Thai models

■ Battery

Capacity	48AH(5)/60AH(20)

■ Washer Fluid

Tank Capacity	1.5 L

■ Light Bulbs

Headlights (Low Beam)	55W (H11)* LED*
Headlights (High Beam)	60W (HB3)* LED*
Position/Daytime Running Lights	LED
Front Turn Signal Lights	21 W (Amber)* LED*
Side Turn Signal Lights (on Door Mirrors)	LED
Brake Lights	LED
Taillights	LED
Rear Turn Signal Lights	21 W (Amber)
Back-Up Lights	16 W
High-Mount Brake Light	21W* LED*
Rear Licence Plate Light	LED
Interior Lights	
Map lights	LED
Ceiling Light	LED
Ambient Lights*	LED
Foot Lights*	LED
Vanity Mirror Lights*	2W
Centre Console Light*	LED
Glove Box Light*	LED
Boot Light	5W

■ Air Conditioning

Refrigerant Type	HFC-134a (R-134a)
Charge Quantity	445 - 495 g*1 435 - 485 g*2

*1: Right-hand drive models
*2: Left-hand drive models

■ Brake Fluid

Specified	Brake Fluid with DOT 3 or DOT 4

■ Continuously Variable Transmission Fluid

Specified	Honda HCF-2	
Capacity	Change	2.7 L*1 3.5 L*2

*1: Singaporean and Pakistani models with halogen headlights
*2: Except Singaporean and Pakistani models with halogen headlights

■ Engine Oil

Recommended	Singaporean models Honda Genuine Motor Oil 0W-20 ACEA C2/C3/C5 0W-20, 0W-30, 5W-30 Thai models Honda Engine Oil Type 2.0 ACEA C2/C3 0W-30, 5W-30 Except Singaporean and Thai models Honda Genuine Motor Oil 0W-20, 0W-30, 5W-30 API service SN or higher grade or ACEA A5/B5 0W-20, 0W-30, 5W-30	
Capacity	Change	3.2 L
	Change including filter	3.5 L

* Not available on all models

Continued

■ Engine Coolant

Specified	Honda All Season Antifreeze/Coolant Type2
Ratio	50/50 with distilled water
Capacity	5.71 L*1 (change including the remaining 0.65 L in the reserve tank) 5.53 L*2 (change including the remaining 0.65 L in the reserve tank) 5.72 L*3 (change including the remaining 0.65 L in the reserve tank) 5.83 L*4 (change including the remaining 0.65 L in the reserve tank)

*1: Right-hand drive models except Thai, Singaporean and Pakistani models with halogen headlights
*2: Thai models
*3: Left-hand drive models
*4: Singaporean and Pakistani models with halogen headlights

■ Tyre

Regular	Size	215/55R16 93H*1 215/50R17 91V*2 235/40ZR18 95Y*3
	Pressure	See the label on driver's doorjamb
Compact Spare*	Size	T125/80D16 97M*1, *2 T125/85D16 99M*3
	Pressure	420 kPa (4.2 bar, 60 psi)
Spare* (Full-size tyre)	Size	215/55R16 93H*1 215/50R17 91V*2
	Pressure	Same as the regular tyre. See the label on driver's doorjamb
Wheel Size	Regular	16X7J*1 17X7J*2 18X8J*3
	Compact Spare*	16X4T
	Spare* (Full-size tyre)	16X7J*1 17X7J*2

*1: Models with 16 inch wheel
*2: Models with 17 inch wheel
*3: Models with 18 inch wheel

For the tyre size and pressure information, see the label on driver's doorjamb.

■ Brake

Type	Power assisted
Front	Ventilated disc
Rear	Solid disc
Parking	Electric parking brake system

■ Vehicle Dimensions

Length		4,681 mm*1, *2, *3, *4, *5, *8 4,686 mm*6 4,687 mm*7
Width		1,802 mm
Height		1,415 mm*1, *2, *3, *4, *5, *6, *8 1,432 mm*7
Wheelbase		2,733 mm*1, *2,*3,*6 2,735 mm*4, *5, *7, *8
Track	Front	1,547 mm*2, *5, *8, *9, *11, *13 1,543 mm*7 1,537 mm*6, *10, *12, *14
	Rear	1,587 mm*2, *9, *13 1,575 mm*5, *8, *11 1,569 mm*7 1,577 mm*6, *10, *14 1,565 mm*12

*1: Cambodian, Laotian and Philippine models
*2: Thai models
*3: Malaysian models
*4: Vietnamese models
*5: Indonesian models
*6: African models
*7: Pakistani models
*8: Singaporean models
*9: Malaysian models with 16 inch wheel or 17 inch wheel
*10: Malaysian models with 18 inch wheel
*11: Vietnamese models with 17 inch wheel
*12: Vietnamese models with 18 inch wheel
*13: Cambodian, Laotian and Philippine models with 17 inch wheel
*14: Cambodian, Laotian and Philippine models with 18 inch wheel

* Not available on all models