

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Touch Display
Manufacturer: Newline Interactive
Firmware Version: N/A
Model(s): TT-6521Q, TT-7521Q, TT-8621Q, TT-9821Q

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.17.0000-b002	2.22.0.4

Version History

Module Version	Date	Notes
1_1_0_0	7/17/2024	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- It is recommended to have a minimum of 15 seconds between Update commands.

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='TT-6521Q')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='TT-6521Q')</code>
EthernetClass
<code>InterfaceName = ModuleName.EthernetClass('192.168.254.254', 6688, Model='TT-6521Q')</code>

Control Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command	Value		
AudioMute	'Toggle'		
# AudioMute example InterfaceName.Set('AudioMute', 'Toggle')			
Command	Value	Value	
Freeze	'On'	'Off'	
# Freeze example InterfaceName.Set('Freeze', 'On')			
Command	Value	Value	Value
Input	'HDMI 1'	'HDMI 2'	'HDMI 3'
	'USB C 1'	'USB C 2'	'DisplayPort'
	'Internal PC'		
# Input example InterfaceName.Set('Input', 'HDMI 1')			
Command	Value	Value	Value
MenuNavigation	'Up'	'Down'	'Left'
	'Right'	'Menu'	'OK'
	'Return'	'Settings'	
# MenuNavigation example InterfaceName.Set('MenuNavigation', 'Up')			
Command	Value	Value	
Power	'On'	'Off'	
# Power example InterfaceName.Set('Power', 'On')			
Command	Value		
Volume	0 to 100 in steps of 1		
# Volume example InterfaceName.Set('Volume', 100)			

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})  
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})  
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'},  
FeedbackHandler)
```

FeedbackHandler will be called only when the specified qualifier gets a new status.

Format without Qualifier:

```
InterfaceName.Update(Command)  
Value = InterfaceName.ReadStatus(Command)  
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)  
FeedbackHandler will be called when any qualifier gets a new status.
```

Command	Value	Value	Value
AudioMute	'Toggle'	'On'	'Off'
# AudioMute example InterfaceName.Update('AudioMute') Value = InterfaceName.ReadStatus('AudioMute') InterfaceName.SubscribeStatus('AudioMute', None, FeedbackHandler)			
Command	Value	Value	
ConnectionStatus	'Connected'	'Disconnected'	
# ConnectionStatus example Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command	Value	Value	Value
Input	'HDMI 1'	'HDMI 2'	'HDMI 3'
	'USB C 1'	'USB C 2'	'DisplayPort'
	'Internal PC'		
# Input example InterfaceName.Update('Input') Value = InterfaceName.ReadStatus('Input') InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)			
Command	Value	Value	
Power	'On'	'Off'	
# Power example InterfaceName.Update('Power') Value = InterfaceName.ReadStatus('Power') InterfaceName.SubscribeStatus('Power', None, FeedbackHandler)			
Command	Value		
Volume	0 to 100 in steps of 1		
# Volume example InterfaceName.Update('Volume') Value = InterfaceName.ReadStatus('Volume') InterfaceName.SubscribeStatus('Volume', None, FeedbackHandler)			

Cable and Adapter Requirements

Captive Screw to Male DB9 RS-232 Serial Cable

Notes for the Device

Serial communication

Port Type: RS-232

Baud Rate: 19200


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

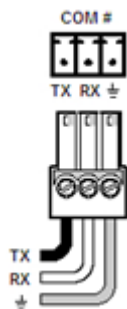

Signal	Main Cable	Pin	Signal
TxD	→	2	RxD
RxD	←	3	TxD
GND	→	5	GND

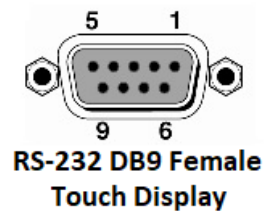

Network Communication

When configuring the Ethernet module, be sure device settings match those of the Global Scriptor ethernet interface.

Port Type: Ethernet (TCP)

Default Port: 6688

Logon Credentials Supported: No

Multi-Connection Capabilities: Undetermined

Port Changeability: No

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

Appendix A. Set Commands

Audio Mute Toggle	\x7F\x08\x99\xA2\xB3\xC4\x02\xFF\x01\x02\xCF
Freeze Off	\x7F\x09\x99\xA2\xB3\xC4\x02\xFF\x0B\x01\xCF
Freeze On	\x7F\x09\x99\xA2\xB3\xC4\x02\xFF\x0B\x00\xCF
Input DisplayPort	\x7F\x08\x99\xA2\xB3\xC4\x02\xFF\x01V\xCF
Input HDMI 1	\x7F\x08\x99\xA2\xB3\xC4\x02\xFF\x01\x0A\xCF
Input HDMI 2	\x7F\x08\x99\xA2\xB3\xC4\x02\xFF\x01R\xCF
Input HDMI 3	\x7F\x08\x99\xA2\xB3\xC4\x02\xFF\x01S\xCF
Input Internal PC	\x7F\x08\x99\xA2\xB3\xC4\x02\xFF\x018\xCF
Input USB C 1	\x7F\x08\x99\xA2\xB3\xC4\x02\xFF\x01T\xCF
Input USB C 2	\x7F\x08\x99\xA2\xB3\xC4\x02\xFF\x01U\xCF
Menu Navigation Down	\x7F\x08\x99\xA2\xB3\xC4\x02\xFF\x01/\xCF
Menu Navigation Left	\x7F\x08\x99\xA2\xB3\xC4\x02\xFF\x01,\xCF
Menu Navigation Menu	\x7F\x08\x99\xA2\xB3\xC4\x02\xFF\x01\x1B\xCF
Menu Navigation OK	\x7F\x08\x99\xA2\xB3\xC4\x02\xFF\x01+\xCF
Menu Navigation Return	\x7F\x08\x99\xA2\xB3\xC4\x02\xFF\x01\x1D\xCF
Menu Navigation Right	\x7F\x08\x99\xA2\xB3\xC4\x02\xFF\x01-\xCF
Menu Navigation Settings	\x7F\x08\x99\xA2\xB3\xC4\x02\xFF\x01 \xCF
Menu Navigation Up	\x7F\x08\x99\xA2\xB3\xC4\x02\xFF\x01.\xCF
Power Off	\x7F\x08\x99\xA2\xB3\xC4\x02\xFF\x01\x01\xCF
Power On	\x7F\x08\x99\xA2\xB3\xC4\x02\xFF\x01\x00\xCF
Volume 0	\x7F\x08\x99\xA2\xB3\xC4\x02\xFF\x05\x00\xCF
Volume 100	\x7F\x08\x99\xA2\xB3\xC4\x02\xFF\x05d\xCF

Appendix B. Update Commands

Audio Mute	\x7F\x08\x99\xA2\xB3\xC4\x02\xFF\x01\x82\xCF
Input	\x7F\x08\x99\xA2\xB3\xC4\x02\xFF\x01P\xCF
Power	\x7F\x08\x99\xA2\xB3\xC4\x02\xFF\x017\xCF
Volume	\x7F\x08\x99\xA2\xB3\xC4\x02\xFF\x013\xCF