

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Video Projector
Manufacturer: Sony
Firmware Version: N/A
Model(s): VPL-PHZ60, VPL-P620HZ, VPL-PHZ50, VPL-P520HZ

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.13.0000-b006	2.9.0

Version History

Module Version	Date	Notes
1_0_1_0	6/7/2021	Fixed module. Added 9600 baud rate.
1_0_0_0	1/13/2021	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- If login credentials are required, devicePassword must be set accordingly.
Example: `InterfaceName.devicePassword = 'extron'`
- It is recommended that, when using the ethernet module, the serial connection on the projector is not used, otherwise the module's ethernet connectivity with the device becomes unstable.

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='VPL-PHZ60')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='VPL-PHZ60')</code>
EthernetClass
<code>InterfaceName = ModuleName.EthernetClass('192.168.254.254', 53595, Model='VPL-PHZ60')</code>

Control Commands

Format with Qualifier:

InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})

Format without Qualifier:

InterfaceName.Set(Command, Value)

Command AspectRatio ²	Value '4:3' 'Full 2' 'Full'	Value '16:9' 'Full 3' 'Zoom'	Value 'Full 1' 'Normal'
# AspectRatio example InterfaceName.Set('AspectRatio', '4:3')			
Command AudioMute	Value 'On'	Value 'Off'	
# AudioMute example InterfaceName.Set('AudioMute', 'On')			
Command ClosedCaption ¹	Value 'Off' 'CC3' 'Text2'	Value 'CC1' 'CC4' 'Text3'	Value 'CC2' 'Text1' 'Text4'
# ClosedCaption example InterfaceName.Set('ClosedCaption', 'Off')			
Command ExecutiveMode ¹	Value 'On'	Value 'Off'	
# ExecutiveMode example InterfaceName.Set('ExecutiveMode', 'On')			
Command Freeze	Value 'On'	Value 'Off'	
# Freeze example InterfaceName.Set('Freeze', 'On')			
Command Input	Value 'Video' 'HDMI 2'	Value 'RGB' 'HDBaseT'	Value 'HDMI 1'
# Input example InterfaceName.Set('Input', 'Video')			
Command MenuNavigation	Value 'Menu' 'Left' 'Return'	Value 'Up' 'Right'	Value 'Down' 'Enter'
# MenuNavigation example InterfaceName.Set('MenuNavigation', 'Menu')			
Command Power	Value 'On'	Value 'Off'	
# Power example InterfaceName.Set('Power', 'On')			
Command VideoMute	Value 'On'	Value 'Off'	
# VideoMute example InterfaceName.Set('VideoMute', 'On')			

Command	Value
Volume	0 to 100 in steps of 1
# Volume example InterfaceName.Set('Volume', 100)	

¹ Only available for serial control.

² Availability of states depend on the Input and requires an active signal.

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'},
```

FeedbackHandler)

FeedbackHandler will be called only when the specified qualifier gets a new status.

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command AspectRatio ²	Value '4:3' 'Full 2' 'Full'	Value '16:9' 'Full 3' 'Zoom'	Value 'Full 1' 'Normal'
# AspectRatio example InterfaceName.Update('AspectRatio') Value = InterfaceName.ReadStatus('AspectRatio') InterfaceName.SubscribeStatus('AspectRatio', None, FeedbackHandler)			
Command AudioMute	Value 'On'	Value 'Off'	
# AudioMute example InterfaceName.Update('AudioMute') Value = InterfaceName.ReadStatus('AudioMute') InterfaceName.SubscribeStatus('AudioMute', None, FeedbackHandler)			
Command ConnectionStatus	Value 'Connected'	Value 'Disconnected'	
# ConnectionStatus example Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command ExecutiveMode ¹	Value 'On'	Value 'Off'	
# ExecutiveMode example InterfaceName.Update('ExecutiveMode') Value = InterfaceName.ReadStatus('ExecutiveMode') InterfaceName.SubscribeStatus('ExecutiveMode', None, FeedbackHandler)			
Command Freeze	Value 'On'	Value 'Off'	
# Freeze example InterfaceName.Update('Freeze') Value = InterfaceName.ReadStatus('Freeze') InterfaceName.SubscribeStatus('Freeze', None, FeedbackHandler)			
Command Input	Value 'Video' 'HDMI 2'	Value 'RGB' 'HDBaseT'	Value 'HDMI 1'
# Input example InterfaceName.Update('Input') Value = InterfaceName.ReadStatus('Input') InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)			

Command	Value	
LampUsage	Hours	
# LampUsage example InterfaceName.Update('LampUsage') Value = InterfaceName.ReadStatus('LampUsage') InterfaceName.SubscribeStatus('LampUsage', None, FeedbackHandler)		
Command	Value	Value
Power	'On'	'Off'
# Power example InterfaceName.Update('Power') Value = InterfaceName.ReadStatus('Power') InterfaceName.SubscribeStatus('Power', None, FeedbackHandler)		
Command	Value	Value
VideoMute	'On'	'Off'
# VideoMute example InterfaceName.Update('VideoMute') Value = InterfaceName.ReadStatus('VideoMute') InterfaceName.SubscribeStatus('VideoMute', None, FeedbackHandler)		
Command	Value	
Volume	0 to 100 in steps of 1	
# Volume example InterfaceName.Update('Volume') Value = InterfaceName.ReadStatus('Volume') InterfaceName.SubscribeStatus('Volume', None, FeedbackHandler)		

¹ Only available for serial control.² Availability of states depend on the Input and requires an active signal.

Cable and Adapter Requirements

Captive Screw to Female DB9 RS-232 Serial Cable

Notes for the Device

To ensure the functionality of the module, please set the following:

- Menu → Connection/Power → ECO → Standby Mode → Normal
- Depending if you are using RS-232C or HDBaseT communication
 - Menu → Connection/Power → HDBaseT Setting → RS-232C Setting → RS-232C
 - Menu → Connection/Power → HDBaseT Setting → RS-232C Setting → via HDBaseT

The baud rate is different depending on which communication method you select. When connecting via HDBaseT, the connection is at 9,600 bps. When using the RS-232C Terminal of the main unit, you can connect at 38,400 bps.

Serial communication

Port Type: RS-232

Baud Rate: 38400


Data Bits: 8

Parity: Even


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

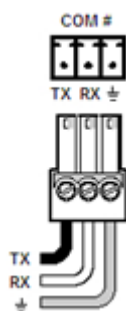

Signal	Main Cable	Pin	Signal
TxD	→	2	RxD
RxD	←	3	TxD
GND	→	5	GND

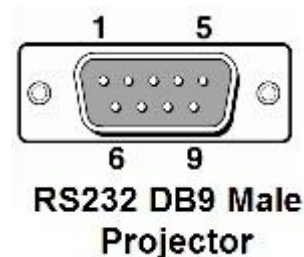

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scriptor ethernet interface.

Port Type: Ethernet (TCP)

Default Port: 53595

Logon Credentials Supported: Yes

Default Password: Projector

Multi-Connection: No

Capabilities:

Port Changeability: Yes

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

To ensure the functionality of the module, please set the following:

1. Access projector's web page by typing in the projector's IP address in a web browser and enable ADCP → **Start ADCP Service**.
2. On the same page, enable **Requires Authentication** if you require a password. If you don't require a password, disable this setting. Note that the password is the same as the administrator password required when gaining access to the ADCP page.
3. Set the following settings in the projector's OSD menu:
 - Menu → Connection/Power → ECO → Standby Mode → Normal
 - Menu → Connection/Power → HDBaseT Setting → LAN Setting → LAN Port

It is recommended that, when using the ethernet module, the serial connection on the projector is not used, otherwise the module's ethernet connectivity with the device becomes unstable.

Appendix A. Set Commands

Aspect Ratio 16:9	aspect "16:9"\x0D\x0A
Aspect Ratio 4:3	aspect "4:3"\x0D\x0A
Aspect Ratio Full	aspect "full"\x0D\x0A
Aspect Ratio Full 1	aspect "full1"\x0D\x0A
Aspect Ratio Full 2	aspect "full2"\x0D\x0A
Aspect Ratio Full 3	aspect "full3"\x0D\x0A
Aspect Ratio Normal	aspect "normal"\x0D\x0A
Aspect Ratio Zoom	aspect "zoom"\x0D\x0A
Audio Mute Off	muting "off"\x0D\x0A
Audio Mute On	muting "on"\x0D\x0A
Closed Caption CC1	cc_display "cc1"\x0D\x0A
Closed Caption CC2	cc_display "cc2"\x0D\x0A
Closed Caption CC3	cc_display "cc3"\x0D\x0A
Closed Caption CC4	cc_display "cc4"\x0D\x0A
Closed Caption Off	cc_display "off"\x0D\x0A
Closed Caption Text1	cc_display "text1"\x0D\x0A
Closed Caption Text2	cc_display "text2"\x0D\x0A
Closed Caption Text3	cc_display "text3"\x0D\x0A
Closed Caption Text4	cc_display "text4"\x0D\x0A
Executive Mode Off	controlkey_lock "off"\x0D\x0A
Executive Mode On	controlkey_lock "on"\x0D\x0A
Freeze Off	freeze "off"\x0D\x0A
Freeze On	freeze "on"\x0D\x0A
Input HDBaseT	input "hdbaset1"\x0D\x0A
Input HDMI 1	input "hdmi1"\x0D\x0A
Input HDMI 2	input "hdmi2"\x0D\x0A
Input RGB	input "rgb1"\x0D\x0A
Input Video	input "video1"\x0D\x0A
Menu Navigation Down	key "down"\x0D\x0A
Menu Navigation Enter	key "enter"\x0D\x0A
Menu Navigation Left	key "left"\x0D\x0A
Menu Navigation Menu	key "menu"\x0D\x0A
Menu Navigation Return	key "return"\x0D\x0A
Menu Navigation Right	key "right"\x0D\x0A
Menu Navigation Up	key "up"\x0D\x0A
Power Off	power "off"\x0D\x0A
Power On	power "on"\x0D\x0A
Video Mute Off	blank "off"\x0D\x0A
Video Mute On	blank "on"\x0D\x0A
Volume 0	volume 0\x0D\x0A
Volume 100	volume 100\x0D\x0A

Appendix B. Update Commands

Aspect Ratio	aspect ?\x0D\x0A
Audio Mute	muting ?\x0D\x0A
Executive Mode	controlkey_lock ?\x0D\x0A
Freeze	freeze ?\x0D\x0A
Input	input ?\x0D\x0A
Lamp Usage	timer ?\x0D\x0A
Power	power_status ?\x0D\x0A
Video Mute	blank ?\x0D\x0A
Volume	volume ?\x0D\x0A