

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Camera
Manufacturer: AVer
Firmware Version: N/A
Model(s): CAM570

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.17.0000-b002	2.20.0.16

Version History

Module Version	Date	Notes
1_0_0_0	8/22/2023	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- DeviceID variable must be set accordingly. Default value is '1'. DeviceID ranges from '1' to '7'.
Example: `InterfaceName.DeviceID = '1'`

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='CAM570')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='CAM570')</code>
EthernetClass
<code>InterfaceName = ModuleName.EthernetClass('192.168.254.254', 52381, Model='CAM570')</code>

Control Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command Focus	Value 'Stop'	Value 'Far'	Value 'Near'
# Focus example InterfaceName.Set('Focus', 'Stop')			
Command FocusMode	Value 'Manual'	Value 'Auto'	
# FocusMode example InterfaceName.Set('FocusMode', 'Manual')			
Command PanTilt	Value 'Stop' 'Left' 'Up Right'	Value 'Up' 'Right' 'Down Left'	Value 'Down' 'Up Left' 'Down Right'
Qualifier Key 'Pan Speed'	Qualifier Value 0 – 15		
Qualifier Key 'Tilt Speed'	Qualifier Value 0 – 15		
# PanTilt example InterfaceName.Set('PanTilt', 'Stop', {'Pan Speed': 15, 'Tilt Speed': 15})			
Command PIPHDMI	Value 'PTZ Lens' 'PTZ + Left Up AI' 'AI + Left Up PTZ'	Value 'AI Lens' 'Left PTZ + Right AI' 'Left AI + Right PTZ'	Value 'PTZ + Right Down AI' 'AI + Right Down PTZ'
# PIPHDMI example InterfaceName.Set('PIPHDMI', 'PTZ Lens')			
Command PIPUSB	Value 'PTZ Lens' 'PTZ + Left Up AI' 'AI + Left Up PTZ'	Value 'AI Lens' 'Left PTZ + Right AI' 'Left AI + Right PTZ'	Value 'PTZ + Right Down AI' 'AI + Right Down PTZ'
# PIPUSB example InterfaceName.Set('PIPUSB', 'PTZ Lens')			
Command Power	Value 'On'	Value 'Off'	Value 'Reboot'
# Power example InterfaceName.Set('Power', 'On')			
Command Preset	Value '0' – '127'		
Qualifier Key 'Action'	Qualifier Value 'Save'	Qualifier Value 'Recall'	
# Preset example InterfaceName.Set('Preset', '0', {'Action': 'Save'})			

Global Scripter Module Communication Sheet

Command TrackingMode	Value 'Trigger' 'Manual Frame' 'Audio Preset'	Value 'Off' 'Audio Tracking' 'Presentation Mode'	Value 'Auto Frame' 'Audio Frame' 'Preset Frame'
# TrackingMode example InterfaceName.Set('TrackingMode', 'Trigger')			
Command Zoom	Value 'Stop'	Value 'Tele'	Value 'Wide'
# Zoom example InterfaceName.Set('Zoom', 'Stop')			

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'},
```

FeedbackHandler)

FeedbackHandler will be called only when the specified qualifier gets a new status.

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command	Value	Value	
ConnectionStatus	'Connected'	'Disconnected'	
# ConnectionStatus example Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command	Value	Value	Value
TrackingMode	'Trigger'	'Off'	'Auto Frame'
	'Manual Frame'	'Audio Tracking'	'Audio Frame'
	'Audio Preset'	'Presentation Mode'	'Preset Frame'
# TrackingMode example InterfaceName.Update('TrackingMode') Value = InterfaceName.ReadStatus('TrackingMode') InterfaceName.SubscribeStatus('TrackingMode', None, FeedbackHandler)			

Cable and Adapter Requirements

Captive Screw to 9 pin DIN Serial Cable

Notes for the Device

To ensure the functionality of the module, please access the device's web UI and set Setting → RS232 → Protocol to Visca.

Serial communication

Port Type: RS-232

Baud Rate: 9600


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

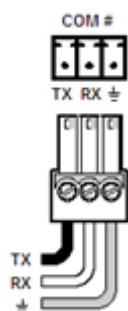

Signal	Main Cable	Pin	Signal
TxD	↗	3	TxD
RxD	↖	6	RxD
GND	—	5	GND

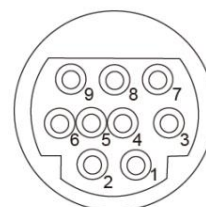

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scripter ethernet interface.

Port Type:	Ethernet (UDP)
Device Listen Port:	52381
Device Reply Port:	52381
Logon Credentials Supported:	No
Multi-Connection Capabilities:	Undetermined
Listen Port Changeability:	No
Listen Port Changeability:	Yes

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

When using multiple UDP modules within the same configuration each module should have a unique 'Reply on Port' number due to the nature of UDP communication. If you have a module with a fixed 'Reply on Port' number, only one instance of the module can be used within the configuration.

Notes for the Device

To ensure the functionality of the module, please access the device's web UI and set Setting → RS232 → Visca Over IP to On.

Appendix A. Set Commands (Serial, Device ID: 1)

Focus Far	\x81\x01\x04\x080\xff
Focus Mode Auto	\x81\x01\x048\x02\xff
Focus Mode Manual	\x81\x01\x048\x03\xff
Focus Near	\x81\x01\x04\x08\x00\xff
Focus Stop	\x81\x01\x04\x08 \xff
Pan Tilt Down Left Pan Speed 0 Tilt Speed 0	\x81\x01\x06\x01\x00\x00\x01\x02\xff
Pan Tilt Down Left Pan Speed 0 Tilt Speed 15	\x81\x01\x06\x01\x00\x0F\x01\x02\xff
Pan Tilt Down Left Pan Speed 15 Tilt Speed 0	\x81\x01\x06\x01\x0F\x00\x01\x02\xff
Pan Tilt Down Left Pan Speed 15 Tilt Speed 15	\x81\x01\x06\x01\x0F\x0F\x01\x02\xff
Pan Tilt Down Pan Speed 0 Tilt Speed 0	\x81\x01\x06\x01\x00\x00\x03\x02\xff
Pan Tilt Down Pan Speed 0 Tilt Speed 15	\x81\x01\x06\x01\x00\x0F\x03\x02\xff
Pan Tilt Down Pan Speed 15 Tilt Speed 0	\x81\x01\x06\x01\x0F\x00\x03\x02\xff
Pan Tilt Down Pan Speed 15 Tilt Speed 15	\x81\x01\x06\x01\x0F\x0F\x03\x02\xff
Pan Tilt Down Right Pan Speed 0 Tilt Speed 0	\x81\x01\x06\x01\x00\x00\x02\x02\xff
Pan Tilt Down Right Pan Speed 0 Tilt Speed 15	\x81\x01\x06\x01\x00\x0F\x02\x02\xff
Pan Tilt Down Right Pan Speed 15 Tilt Speed 0	\x81\x01\x06\x01\x0F\x00\x02\x02\xff
Pan Tilt Down Right Pan Speed 15 Tilt Speed 15	\x81\x01\x06\x01\x0F\x0F\x02\x02\xff
Pan Tilt Left Pan Speed 0 Tilt Speed 0	\x81\x01\x06\x01\x00\x00\x01\x03\xff
Pan Tilt Left Pan Speed 0 Tilt Speed 15	\x81\x01\x06\x01\x00\x0F\x01\x03\xff
Pan Tilt Left Pan Speed 15 Tilt Speed 0	\x81\x01\x06\x01\x0F\x00\x01\x03\xff
Pan Tilt Left Pan Speed 15 Tilt Speed 15	\x81\x01\x06\x01\x0F\x0F\x01\x03\xff
Pan Tilt Right Pan Speed 0 Tilt Speed 0	\x81\x01\x06\x01\x00\x00\x02\x03\xff
Pan Tilt Right Pan Speed 0 Tilt Speed 15	\x81\x01\x06\x01\x00\x0F\x02\x03\xff
Pan Tilt Right Pan Speed 15 Tilt Speed 0	\x81\x01\x06\x01\x0F\x00\x02\x03\xff
Pan Tilt Right Pan Speed 15 Tilt Speed 15	\x81\x01\x06\x01\x0F\x0F\x02\x03\xff
Pan Tilt Stop Pan Speed 0 Tilt Speed 0	\x81\x01\x06\x01\x00\x00\x03\x03\xff
Pan Tilt Stop Pan Speed 0 Tilt Speed 15	\x81\x01\x06\x01\x00\x00\x03\x03\xff
Pan Tilt Stop Pan Speed 15 Tilt Speed 0	\x81\x01\x06\x01\x00\x00\x03\x03\xff
Pan Tilt Stop Pan Speed 15 Tilt Speed 15	\x81\x01\x06\x01\x00\x00\x03\x03\xff
Pan Tilt Up Left Pan Speed 0 Tilt Speed 0	\x81\x01\x06\x01\x00\x00\x01\x01\xff
Pan Tilt Up Left Pan Speed 0 Tilt Speed 15	\x81\x01\x06\x01\x00\x0F\x01\x01\xff
Pan Tilt Up Left Pan Speed 15 Tilt Speed 0	\x81\x01\x06\x01\x0F\x00\x01\x01\xff
Pan Tilt Up Left Pan Speed 15 Tilt Speed 15	\x81\x01\x06\x01\x0F\x0F\x01\x01\xff
Pan Tilt Up Pan Speed 0 Tilt Speed 0	\x81\x01\x06\x01\x00\x00\x03\x01\xff
Pan Tilt Up Pan Speed 0 Tilt Speed 15	\x81\x01\x06\x01\x00\x0F\x03\x01\xff
Pan Tilt Up Pan Speed 15 Tilt Speed 0	\x81\x01\x06\x01\x0F\x00\x03\x01\xff
Pan Tilt Up Pan Speed 15 Tilt Speed 15	\x81\x01\x06\x01\x0F\x0F\x03\x01\xff
Pan Tilt Up Right Pan Speed 0 Tilt Speed 0	\x81\x01\x06\x01\x00\x00\x02\x01\xff
Pan Tilt Up Right Pan Speed 0 Tilt Speed 15	\x81\x01\x06\x01\x00\x0F\x02\x01\xff
Pan Tilt Up Right Pan Speed 15 Tilt Speed 0	\x81\x01\x06\x01\x0F\x00\x02\x01\xff
Pan Tilt Up Right Pan Speed 15 Tilt Speed 15	\x81\x01\x06\x01\x0F\x0F\x02\x01\xff
PIP HDMI AI + Left Up PTZ	\x81\x01\x04\x7F\x01\x13\xff

Global Scriptor Module Communication Sheet

PIP HDMI AI + Right Down PTZ	\x81\x01\x04\x7F\x01\x12\xFF
PIP HDMI AI Lens	\x81\x01\x04\x7F\x01\x01\xFF
PIP HDMI Left AI + Right PTZ	\x81\x01\x04\x7F\x01\x14\xFF
PIP HDMI Left PTZ + Right AI	\x81\x01\x04\x7F\x01\x04\xFF
PIP HDMI PTZ + Left Up AI	\x81\x01\x04\x7F\x01\x03\xFF
PIP HDMI PTZ + Right Down AI	\x81\x01\x04\x7F\x01\x02\xFF
PIP HDMI PTZ Lens	\x81\x01\x04\x7F\x01\x00\xFF
PIP USB AI + Left Up PTZ	\x81\x01\x04\x7F\x00\x13\xFF
PIP USB AI + Right Down PTZ	\x81\x01\x04\x7F\x00\x12\xFF
PIP USB AI Lens	\x81\x01\x04\x7F\x00\x01\xFF
PIP USB Left AI + Right PTZ	\x81\x01\x04\x7F\x00\x14\xFF
PIP USB Left PTZ + Right AI	\x81\x01\x04\x7F\x00\x04\xFF
PIP USB PTZ + Left Up AI	\x81\x01\x04\x7F\x00\x03\xFF
PIP USB PTZ + Right Down AI	\x81\x01\x04\x7F\x00\x02\xFF
PIP USB PTZ Lens	\x81\x01\x04\x7F\x00\x00\xFF
Power Off	\x81\x01\x04\x00\x03\xFF
Power On	\x81\x01\x04\x00\x02\xFF
Power Reboot	\x81\x01\x04\x00\x00\xFF
Preset 0 Action Recall	\x81\x01\x04?\x02\x00\xFF
Preset 0 Action Save	\x81\x01\x04?\x01\x00\xFF
Preset 127 Action Recall	\x81\x01\x04?\x02\x7F\xFF
Preset 127 Action Save	\x81\x01\x04?\x01\x7F\xFF
Tracking Mode Audio Frame	\x81\x01\x04}\x05\x00\xFF
Tracking Mode Audio Preset	\x81\x01\x04}\x06\x00\xFF
Tracking Mode Audio Tracking	\x81\x01\x04}\x04\x00\xFF
Tracking Mode Auto Frame	\x81\x01\x04}\x02\x00\xFF
Tracking Mode Manual Frame	\x81\x01\x04}\x03\x00\xFF
Tracking Mode Off	\x81\x01\x04}\x01\x00\xFF
Tracking Mode Presentation Mode	\x81\x01\x04}\x07\x00\xFF
Tracking Mode Preset Frame	\x81\x01\x04}\x08\x00\xFF
Tracking Mode Trigger	\x81\x01\x04}\x00\x00\xFF
Zoom Stop	\x81\x01\x04\x07\x00\xFF
Zoom Tele	\x81\x01\x04\x07 \xFF
Zoom Wide	\x81\x01\x04\x070\xFF

Appendix B. Update Commands (Serial, Device ID: 1)

Tracking Mode	\x81\x09\x04}\xFF
---------------	-------------------

Appendix C. Set Commands (Ethernet)

Focus Mode Auto	\x01\x00\x00\x06\x00\x00\x00\x01\x81\x01\x048\x02\xFF
Focus Mode Manual	\x01\x00\x00\x06\x00\x00\x00\x01\x81\x01\x048\x03\xFF
Focus Near	\x01\x00\x00\x06\x00\x00\x00\x01\x81\x01\x04\x08\x00\xFF
Focus Stop	\x01\x00\x00\x06\x00\x00\x00\x01\x81\x01\x04\x08 \xFF
Pan Tilt Down Left Pan Speed 0 Tilt Speed 0	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x00\x00\x01\x02\xFF
Pan Tilt Down Left Pan Speed 0 Tilt Speed 15	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x00\x0F\x01\x02\xFF
Pan Tilt Down Left Pan Speed 15 Tilt Speed 0	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x0F\x00\x01\x02\xFF
Pan Tilt Down Left Pan Speed 15 Tilt Speed 15	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x0F\x0F\x01\x02\xFF
Pan Tilt Down Pan Speed 0 Tilt Speed 0	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x00\x00\x03\x02\xFF
Pan Tilt Down Pan Speed 0 Tilt Speed 15	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x00\x0F\x03\x02\xFF
Pan Tilt Down Pan Speed 15 Tilt Speed 0	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x0F\x00\x03\x02\xFF
Pan Tilt Down Pan Speed 15 Tilt Speed 15	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x0F\x0F\x03\x02\xFF
Pan Tilt Down Right Pan Speed 0 Tilt Speed 0	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x00\x00\x02\x02\xFF
Pan Tilt Down Right Pan Speed 0 Tilt Speed 15	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x00\x0F\x02\x02\xFF
Pan Tilt Down Right Pan Speed 15 Tilt Speed 0	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x0F\x00\x02\x02\xFF
Pan Tilt Down Right Pan Speed 15 Tilt Speed 15	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x0F\x0F\x02\x02\xFF
Pan Tilt Left Pan Speed 0 Tilt Speed 0	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x00\x00\x01\x03\xFF
Pan Tilt Left Pan Speed 0 Tilt Speed 15	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x00\x0F\x01\x03\xFF
Pan Tilt Left Pan Speed 15 Tilt Speed 0	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x0F\x00\x01\x03\xFF
Pan Tilt Left Pan Speed 15 Tilt Speed 15	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x0F\x0F\x01\x03\xFF
Pan Tilt Right Pan Speed 0 Tilt Speed 0	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x00\x00\x02\x03\xFF
Pan Tilt Right Pan Speed 0 Tilt Speed 15	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x00\x0F\x02\x03\xFF
Pan Tilt Right Pan Speed 15 Tilt Speed 0	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x0F\x00\x02\x03\xFF
Pan Tilt Right Pan Speed 15 Tilt Speed 15	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x0F\x0F\x02\x03\xFF

Global Scriptor Module Communication Sheet

Revision: 8/22/2023

Pan Tilt Stop Pan Speed 0 Tilt Speed 0	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x00\x00\x03\x03\xFF
Pan Tilt Stop Pan Speed 0 Tilt Speed 15	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x00\x00\x03\x03\xFF
Pan Tilt Stop Pan Speed 15 Tilt Speed 0	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x00\x00\x03\x03\xFF
Pan Tilt Stop Pan Speed 15 Tilt Speed 15	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x00\x00\x03\x03\xFF
Pan Tilt Up Left Pan Speed 0 Tilt Speed 0	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x00\x00\x01\x01\xFF
Pan Tilt Up Left Pan Speed 0 Tilt Speed 15	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x00\x0F\x01\x01\xFF
Pan Tilt Up Left Pan Speed 15 Tilt Speed 0	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x0F\x00\x01\x01\xFF
Pan Tilt Up Left Pan Speed 15 Tilt Speed 15	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x0F\x0F\x01\x01\xFF
Pan Tilt Up Pan Speed 0 Tilt Speed 0	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x00\x00\x03\x01\xFF
Pan Tilt Up Pan Speed 0 Tilt Speed 15	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x00\x0F\x03\x01\xFF
Pan Tilt Up Pan Speed 15 Tilt Speed 0	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x0F\x00\x03\x01\xFF
Pan Tilt Up Pan Speed 15 Tilt Speed 15	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x0F\x0F\x03\x01\xFF
Pan Tilt Up Right Pan Speed 0 Tilt Speed 0	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x00\x00\x02\x01\xFF
Pan Tilt Up Right Pan Speed 0 Tilt Speed 15	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x00\x0F\x02\x01\xFF
Pan Tilt Up Right Pan Speed 15 Tilt Speed 0	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x0F\x00\x02\x01\xFF
Pan Tilt Up Right Pan Speed 15 Tilt Speed 15	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x0F\x0F\x02\x01\xFF
PIP HDMI AI + Left Up PTZ	\x01\x00\x00\x07\x00\x00\x00\x01\x81\x01\x04\x7F\x01\x13\xFF
PIP HDMI AI + Right Down PTZ	\x01\x00\x00\x07\x00\x00\x00\x01\x81\x01\x04\x7F\x01\x12\xFF
PIP HDMI AI Lens	\x01\x00\x00\x07\x00\x00\x00\x01\x81\x01\x04\x7F\x01\x01\xFF
PIP HDMI Left AI + Right PTZ	\x01\x00\x00\x07\x00\x00\x00\x01\x81\x01\x04\x7F\x01\x14\xFF
PIP HDMI Left PTZ + Right AI	\x01\x00\x00\x07\x00\x00\x00\x01\x81\x01\x04\x7F\x01\x04\xFF
PIP HDMI PTZ + Left Up AI	\x01\x00\x00\x07\x00\x00\x00\x01\x81\x01\x04\x7F\x01\x03\xFF
PIP HDMI PTZ + Right Down AI	\x01\x00\x00\x07\x00\x00\x00\x01\x81\x01\x04\x7F\x01\x02\xFF
PIP HDMI PTZ Lens	\x01\x00\x00\x07\x00\x00\x00\x01\x81\x01\x04\x7F\x01\x00\xFF
PIP USB AI + Left Up PTZ	\x01\x00\x00\x07\x00\x00\x00\x01\x81\x01\x04\x7F\x00\x13\xFF
PIP USB AI + Right Down PTZ	\x01\x00\x00\x07\x00\x00\x00\x01\x81\x01\x04\x7F\x00\x12\xFF
PIP USB AI Lens	\x01\x00\x00\x07\x00\x00\x00\x01\x81\x01\x04\x7F\x00\x01\xFF
PIP USB Left AI + Right PTZ	\x01\x00\x00\x07\x00\x00\x00\x01\x81\x01\x04\x7F\x00\x14\xFF
PIP USB Left PTZ + Right AI	\x01\x00\x00\x07\x00\x00\x00\x01\x81\x01\x04\x7F\x00\x04\xFF
PIP USB PTZ + Left Up AI	\x01\x00\x00\x07\x00\x00\x00\x01\x81\x01\x04\x7F\x00\x03\xFF

Global Scripter Module Communication Sheet

Revision: 8/22/2023

PIP USB PTZ + Right Down AI	\x01\x00\x00\x07\x00\x00\x00\x01\x81\x01\x04\x7F\x00\x02\xFF
PIP USB PTZ Lens	\x01\x00\x00\x07\x00\x00\x00\x01\x81\x01\x04\x7F\x00\x00\xFF
Power Off	\x01\x00\x00\x06\x00\x00\x00\x01\x81\x01\x04\x00\x03\xFF
Power On	\x01\x00\x00\x06\x00\x00\x00\x01\x81\x01\x04\x00\x02\xFF
Power Reboot	\x01\x00\x00\x06\x00\x00\x00\x01\x81\x01\x04\x00\x00\xFF
Preset 0 Action Recall	\x01\x00\x00\x07\x00\x00\x00\x01\x81\x01\x04?\x02\x00\xFF
Preset 0 Action Save	\x01\x00\x00\x07\x00\x00\x00\x01\x81\x01\x04?\x01\x00\xFF
Preset 127 Action Recall	\x01\x00\x00\x07\x00\x00\x00\x01\x81\x01\x04?\x02\x7F\xFF
Preset 127 Action Save	\x01\x00\x00\x07\x00\x00\x00\x01\x81\x01\x04?\x01\x7F\xFF
Tracking Mode Audio Frame	\x01\x00\x00\x07\x00\x00\x00\x01\x81\x01\x04}\x05\x00\xFF
Tracking Mode Audio Preset	\x01\x00\x00\x07\x00\x00\x00\x01\x81\x01\x04}\x06\x00\xFF
Tracking Mode Audio Tracking	\x01\x00\x00\x07\x00\x00\x00\x01\x81\x01\x04}\x04\x00\xFF
Tracking Mode Auto Frame	\x01\x00\x00\x07\x00\x00\x00\x01\x81\x01\x04}\x02\x00\xFF
Tracking Mode Manual Frame	\x01\x00\x00\x07\x00\x00\x00\x01\x81\x01\x04}\x03\x00\xFF
Tracking Mode Off	\x01\x00\x00\x07\x00\x00\x00\x01\x81\x01\x04}\x01\x00\xFF
Tracking Mode Presentation Mode	\x01\x00\x00\x07\x00\x00\x00\x01\x81\x01\x04}\x07\x00\xFF
Tracking Mode Preset Frame	\x01\x00\x00\x07\x00\x00\x00\x01\x81\x01\x04}\x08\x00\xFF
Tracking Mode Trigger	\x01\x00\x00\x07\x00\x00\x00\x01\x81\x01\x04}\x00\x00\xFF
Zoom Stop	\x01\x00\x00\x06\x00\x00\x00\x01\x81\x01\x04\x07\x00\xFF
Zoom Tele	\x01\x00\x00\x06\x00\x00\x00\x01\x81\x01\x04\x07 \xFF
Zoom Wide	\x01\x00\x00\x06\x00\x00\x00\x01\x81\x01\x04\x070\xFF

Appendix D. Update Commands (Ethernet)

Tracking Mode	\x01\x10\x00\x05\x00\x00\x00\x01\x81\x09\x04}\xFF
---------------	---