

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Video Projector
 Manufacturer: Epson
 Firmware Version: N/A
 Model(s): EB-L610W, EB-L610U, EB-L615U, EB-L510U, EB-L600U, EB-L400U, EB-L500W, PowerLite L610W, PowerLite L500W, PowerLite L400U, PowerLite L510U, PowerLite L610U, PowerLite L615U

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
2.08.0002-b001	1.4.2

Version History

Module Version	Date	Notes
1_0_1_0	8/1/2018	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: InterfaceName.Unidirectional = 'True'
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: InterfaceName.connectionCounter = 5

Supported Classes and Examples

SerialClass
InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='EB-L610W')
SerialOverEthernetClass
InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='EB-L610W')
EthernetClass
InterfaceName = ModuleName.EthernetClass('192.168.254.254', 3629, Model='EB-L610W')

Control Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command AspectRatio ¹	Value 'Normal' ² 'Full' 'V-Zoom'	Value '16:9' 'H-Zoom' '4:3'	Value 'Auto' 'Native'
# AspectRatio example InterfaceName.Set('AspectRatio', 'Normal')			
Command AutoImage ³	Value None		
# AutoImage example InterfaceName.Set('AutoImage', None)			
Command AVMute	Value 'On'	Value 'Off'	
# AVMute example InterfaceName.Set('AVMute', 'On')			
Command Freeze	Value 'On'	Value 'Off'	
# Freeze example InterfaceName.Set('Freeze', 'On')			
Command Input	Value 'Computer 1 (RGB)' 'Computer 2 (Component)' 'LAN'	Value 'Computer 1 (Component)' 'HDMI 1' 'HDMI 2'	Value 'Computer 2 (RGB)' 'USB' 'HDBaseT' ⁴
# Input example InterfaceName.Set('Input', 'Computer 1 (RGB)')			
Command LampMode	Value 'Normal'	Value 'Quiet'	Value 'Long'
# LampMode example InterfaceName.Set('LampMode', 'Normal')			
Command MenuNavigation	Value 'Menu' 'Up' 'Right'	Value 'Escape' 'Down'	Value 'Enter' 'Left'
# MenuNavigation example InterfaceName.Set('MenuNavigation', 'Menu')			

Global Scripter Module Communication Sheet

Command Power	Value 'On'	Value 'Off'	
# Power example InterfaceName.Set('Power', 'On')			
Command SplitScreen	Value 'On'	Value 'Off'	
# SplitScreen example InterfaceName.Set('SplitScreen', 'On')			
Command SplitScreenSource	Value 'Computer 1 (RGB)' 'Computer 2 (Component)' 'LAN'	Value 'Computer 1 (Component)' 'HDMI 1' 'HDMI 2'	Value 'Computer 2 (RGB)' 'USB' 'HDBaseT' ⁴
Qualifier Key 'Side'	Qualifier Value 'Left'	Qualifier Value 'Right'	
# SplitScreenSource example InterfaceName.Set('SplitScreenSource', 'Computer 1 (RGB)', {'Side': 'Left'})			
Command SplitScreenSwap	Value None		
# SplitScreenSwap example InterfaceName.Set('SplitScreenSwap', None)			
Command Volume	Value 0 to 20 in steps of 1		
# Volume example InterfaceName.Set('Volume', 20)			

¹ Aspect Ratio varies depending on the Screen Type setting found on Menu > Extended > Display > Screen

² Not available if input is set to HDMI or HDBaseT.

³ Command is only valid on RGB input.

⁴ Not available for models EB-L500W, EB-L500 and EB-L610

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command AspectRatio ¹	Value 'Normal' ² 'Full' 'V-Zoom'	Value '16:9' 'H-Zoom' '4:3'	Value 'Auto' 'Native'
# AspectRatio examples InterfaceName.Update('AspectRatio') Value = InterfaceName.ReadStatus('AspectRatio') InterfaceName.SubscribeStatus('AspectRatio', None, FeedbackHandler)			
Command AVMute	Value 'On'	Value 'Off'	
# AVMute examples InterfaceName.Update('AVMute') Value = InterfaceName.ReadStatus('AVMute') InterfaceName.SubscribeStatus('AVMute', None, FeedbackHandler)			
Command ConnectionStatus	Value 'Connected'	Value 'Disconnected'	
# ConnectionStatus examples Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command DeviceStatus ⁴	Value 'Normal' 'Lamp Error' 'EDL Capacitor Disconnected' 'Low Air Flow Error'	Value 'Fan Error' 'Lamp Cover Error' 'Auto Iris Error' 'Air Flow Error'	Value 'Internal Temperature is Abnormally High' 'Cinema Filter Error' 'Subsystem Error' 'Power Supply Error'

Global Scripter Module Communication Sheet

Revision: 8/1/2018

	'Shutter Failure'	'Cooling System Error'	'Cooling System Error (Pump)'
	'Lamp Failure at power on'		
<pre># DeviceStatus examples InterfaceName.Update('DeviceStatus') Value = InterfaceName.ReadStatus('DeviceStatus') InterfaceName.SubscribeStatus('DeviceStatus', None, FeedbackHandler)</pre>			
Command Freeze	Value 'On'	Value 'Off'	
<pre># Freeze examples InterfaceName.Update('Freeze') Value = InterfaceName.ReadStatus('Freeze') InterfaceName.SubscribeStatus('Freeze', None, FeedbackHandler)</pre>			
Command Input	Value 'Computer 1 (RGB)' 'Computer 2 (Component)' 'LAN'	Value 'Computer 1 (Component)' 'HDMI 1' 'HDMI 2'	Value 'Computer 2 (RGB)' 'USB' 'HDBaseT' ³
<pre># Input examples InterfaceName.Update('Input') Value = InterfaceName.ReadStatus('Input') InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)</pre>			
Command LampMode	Value 'Normal'	Value 'Quiet'	Value 'Long'
<pre># LampMode examples InterfaceName.Update('LampMode') Value = InterfaceName.ReadStatus('LampMode') InterfaceName.SubscribeStatus('LampMode', None, FeedbackHandler)</pre>			
Command LampUsage	Value Hours		
<pre># LampUsage examples InterfaceName.Update('LampUsage') Value = InterfaceName.ReadStatus('LampUsage') InterfaceName.SubscribeStatus('LampUsage', None, FeedbackHandler)</pre>			
Command OperationHours	Value Hours		
<pre># OperationHours examples InterfaceName.Update('OperationHours') Value = InterfaceName.ReadStatus('OperationHours') InterfaceName.SubscribeStatus('OperationHours', None, FeedbackHandler)</pre>			
Command Power	Value 'On' 'Cooling Down'	Value 'Off'	Value 'Warming Up'
<pre># Power examples InterfaceName.Update('Power')</pre>			

<pre>Value = InterfaceName.ReadStatus('Power') InterfaceName.SubscribeStatus('Power', None, FeedbackHandler)</pre>	
Command Volume	Value 0 to 20 in steps of 1
<pre># Volume examples InterfaceName.Update('Volume') Value = InterfaceName.ReadStatus('Volume') InterfaceName.SubscribeStatus('Volume', None, FeedbackHandler)</pre>	

¹ Aspect Ratio varies depending on the Screen Type setting found on Menu > Extended > Display > Screen

² Not available if input is set to HDMI or HDBaseT.

³ Not available for models EB-L500W, EB-L500 and EB-L610

⁴ Not supported for Ethernet.

Cable and Adapter Requirements

Captive Screw to Female DB9 RS-232 Serial Cable

Notes for the Device

For the module to work, ensure the following settings are set in the projector's Menu.

- Standby Mode setting is set to Communication On in ECO menu.
- HDBaseT setting is set to Off for both Control Communications and Extron XTP in Extended menu.

Serial communication

Port Type: RS-232

Baud Rate: 9600


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

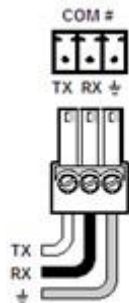

Signal	Main Cable	Pin	Signal
TxD	→	2	RxD
RxD	←	3	TxD
GND	→	5	GND

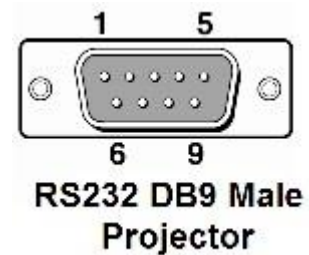

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scriptor ethernet interface

Port Type:	Ethernet
Default Port:	3629
Logon Credentials Supported:	No
Multi-Connection Capabilities:	Undetermined
Port Changeability:	Undetermined

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

For the module to work, ensure the following settings are set in the projector's Menu.

- Standby Mode setting is set to Communication On in ECO menu.
- HDBaseT setting is set to Off for both Control Communications and Extron XTP in Extended menu.

Appendix A. Set Commands

Aspect Ratio 16:9	ASPECT 20\x0D
Aspect Ratio 4:3	ASPECT 10\x0D
Aspect Ratio Auto	ASPECT 30\x0D
Aspect Ratio Full	ASPECT 40\x0D
Aspect Ratio H-Zoom	ASPECT 50\x0D
Aspect Ratio Native	ASPECT 60\x0D
Aspect Ratio Normal	ASPECT 00\x0D
Aspect Ratio V-Zoom	ASPECT A0\x0D
Auto Image None	KEY 4A\x0D
AV Mute Off	MUTE OFF\x0D
AV Mute On	MUTE ON\x0D
Freeze Off	FREEZE OFF\x0D
Freeze On	FREEZE ON\x0D
Input Computer 1 (Component)	SOURCE 14\x0D
Input Computer 1 (RGB)	SOURCE 11\x0D
Input Computer 2 (Component)	SOURCE 24\x0D
Input Computer 2 (RGB)	SOURCE 21\x0D
Input HDBaseT	SOURCE 80\x0D
Input HDMI 1	SOURCE 30\x0D
Input HDMI 2	SOURCE A0\x0D
Input LAN	SOURCE 53\x0D
Input USB	SOURCE 52\x0D
Lamp Mode Long	LUMINANCE 04\x0D
Lamp Mode Normal	LUMINANCE 00\x0D
Lamp Mode Quiet	LUMINANCE 01\x0D
Menu Navigation Down	KEY 36\x0D
Menu Navigation Enter	KEY 16\x0D
Menu Navigation Escape	KEY 05\x0D
Menu Navigation Left	KEY 37\x0D
Menu Navigation Menu	KEY 03\x0D
Menu Navigation Right	KEY 38\x0D
Menu Navigation Up	KEY 35\x0D
Split Screen Off	SPS 01 00\x0D
Split Screen On	SPS 01 01\x0D
Split Screen Source Computer 1 (Component) Side Left	SPS 03 14\x0D

Global Scripter Module Communication Sheet

Revision: 8/1/2018

Split Screen Source Computer 1 (Component) Side Right	SPS 04 14\x0D
Split Screen Source Computer 1 (RGB) Side Left	SPS 03 11\x0D
Split Screen Source Computer 1 (RGB) Side Right	SPS 04 11\x0D
Split Screen Source Computer 2 (Component) Side Left	SPS 03 24\x0D
Split Screen Source Computer 2 (Component) Side Right	SPS 04 24\x0D
Split Screen Source Computer 2 (RGB) Side Left	SPS 03 21\x0D
Split Screen Source Computer 2 (RGB) Side Right	SPS 04 21\x0D
Split Screen Source HDBaseT Side Left	SPS 03 80\x0D
Split Screen Source HDBaseT Side Right	SPS 04 80\x0D
Split Screen Source HDMI 1 Side Left	SPS 03 30\x0D
Split Screen Source HDMI 1 Side Right	SPS 04 30\x0D
Split Screen Source HDMI 2 Side Left	SPS 03 A0\x0D
Split Screen Source HDMI 2 Side Right	SPS 04 A0\x0D
Split Screen Source LAN Side Left	SPS 03 53\x0D
Split Screen Source LAN Side Right	SPS 04 53\x0D
Split Screen Source USB Side Left	SPS 03 52\x0D
Split Screen Source USB Side Right	SPS 04 52\x0D
Split Screen Swap None	SPS 05\x0D
Volume 0	VOL 0\x0D
Volume 20	VOL 243\x0D

Appendix B. Update Commands

Aspect Ratio	ASPECT?\x0D
AV Mute	MUTE?\x0D
Device Status	ERR?\x0D
Freeze	FREEZE?\x0D
Input	SOURCE?\x0D
Lamp Mode	LUMINANCE?\x0D
Lamp Usage	LAMP?\x0D
Operation Hours	ONTIME?\x0D
Power	PWR?\x0D
Volume	VOL?\x0D