

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Touch Display
Manufacturer: InFocus
Firmware Version: N/A
Model(s): INF6500, INF7500, INF8600, INF9800, INF5500

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.17.0000-b002	2.20.0.16

Version History

Module Version	Date	Notes
1_0_0_0	1/3/2024	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`

Supported Classes and Examples

SerialClass

```
InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='INF6500')
```

SerialOverEthernetClass

```
InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='INF6500')
```

EthernetClass

```
InterfaceName = ModuleName.EthernetClass('192.168.254.254', 4660, Model='INF6500')
```

Control Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command AspectRatio	Value 'Full (16:9)' 'Panorama'	Value 'Normal (4:3)' 'Real (Just Scan/PC)'	Value 'Auto'
# AspectRatio example InterfaceName.Set('AspectRatio', 'Full (16:9)')			
Command AudioMute	Value 'On'	Value 'Off'	
# AudioMute example InterfaceName.Set('AudioMute', 'On')			
Command Input	Value 'ATV' 'YPbPr' 'HDMI 2' 'DisplayPort'	Value 'DTV' 'HDMI' 'VGA' 'Launcher/Main (Android)'	Value 'AV' 'HDMI 1' 'OPS'
# Input example InterfaceName.Set('Input', 'ATV')			
Command Keypad	Value '0' – '9'		
# Keypad example InterfaceName.Set('Keypad', '0')			
Command MenuNavigation	Value 'Menu' 'Left' 'Exit'	Value 'Up' 'Right'	Value 'Down' 'Enter'
# MenuNavigation example InterfaceName.Set('MenuNavigation', 'Menu')			
Command Power	Value 'On'	Value 'Off'	
# Power example InterfaceName.Set('Power', 'On')			
Command Volume	Value 0 to 100 in steps of 1		
# Volume example InterfaceName.Set('Volume', 100)			

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'},
```

FeedbackHandler)

FeedbackHandler will be called only when the specified qualifier gets a new status.

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command	Value	Value	
AudioMute	'On'	'Off'	
# AudioMute example InterfaceName.Update('AudioMute') Value = InterfaceName.ReadStatus('AudioMute') InterfaceName.SubscribeStatus('AudioMute', None, FeedbackHandler)			
Command	Value	Value	
ConnectionStatus	'Connected'	'Disconnected'	
# ConnectionStatus example Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command	Value	Value	Value
Input	'ATV'	'DTV'	'AV'
	'YPbPr'	'HDMI'	'HDMI 1'
	'HDMI 2'	'VGA'	'OPS'
	'DisplayPort'	'Launcher/Main (Android)'	
# Input example InterfaceName.Update('Input') Value = InterfaceName.ReadStatus('Input') InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)			
Command	Value	Value	
Power	'On'	'Off'	
# Power example InterfaceName.Update('Power') Value = InterfaceName.ReadStatus('Power') InterfaceName.SubscribeStatus('Power', None, FeedbackHandler)			
Command	Value		
Volume	0 to 100 in steps of 1		
# Volume example InterfaceName.Update('Volume') Value = InterfaceName.ReadStatus('Volume') InterfaceName.SubscribeStatus('Volume', None, FeedbackHandler)			

Cable and Adapter Requirements

Contact manufacturer for cable and adapter requirements.

Notes for the Device

Serial communication

Port Type: RS-232

Baud Rate: 38400


Data Bits: 8

Parity: None

Stop Bits: One

Flow Control: None

Pin Assignments Diagram

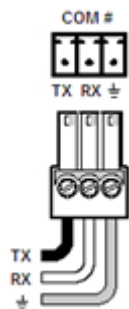

Contact manufacturer for pin assignments diagram and connector type.

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scriptor ethernet interface.

Port Type: Ethernet (TCP)

Default Port: 4660

Logon Credentials Supported: No

Multi-Connection Capabilities: Undetermined

Port Changeability: No

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

Appendix A. Set Commands

Aspect Ratio Auto	k01sM002\x0D
Aspect Ratio Full (16:9)	k01sM000\x0D
Aspect Ratio Normal (4:3)	k01sM001\x0D
Aspect Ratio Panorama	k01sM003\x0D
Aspect Ratio Real (Just Scan/PC)	k01sM004\x0D
Audio Mute Off	k01sQ000\x0D
Audio Mute On	k01sQ001\x0D
Input ATV	k01sB000\x0D
Input AV	k01sB001\x0D
Input DisplayPort	k01sB009\x0D
Input DTV	k01sB010\x0D
Input HDMI	k01sB004\x0D
Input HDMI 1	k01sB014\x0D
Input HDMI 2	k01sB024\x0D
Input Launcher/Main (Android)	k01sB00A\x0D
Input OPS	k01sB007\x0D
Input VGA	k01sB006\x0D
Input YPbPr	k01sB003\x0D
Keypad 0	k01sT000\x0D
Keypad 9	k01sT009\x0D
Menu Navigation Down	k01sU001\x0D
Menu Navigation Enter	k01sU004\x0D
Menu Navigation Exit	k01sU007\x0D
Menu Navigation Left	k01sU002\x0D
Menu Navigation Menu	k01sU006\x0D
Menu Navigation Right	k01sU003\x0D
Menu Navigation Up	k01sU000\x0D
Power Off	k01sA000\x0D
Power On	k01sA001\x0D
Volume 0	k01sP000\x0D
Volume 100	k01sP100\x0D

Appendix B. Update Commands

Audio Mute	k01gg000\x0D
Input	k01gh000\x0D
Power	k01gi000\x0D
Volume	k01gf000\x0D