

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Video Projector
Manufacturer: Panasonic
Firmware Version: N/A
Model(s): PT-EZ770Z, PT-EW540L, PT-SLX80CL, PT-SLX75C, PT-SLX75CL, PT-SLW65C, PT-SLW65CL, PT-SLX62C, PT-SLX62CL, PT-EZ770ZL, PT-EW730Z, PT-EW730ZL, PT-EX800Z, PT-EX800ZL, PT-EZ580, PT-EZ580L, PT-EW640, PT-EW640L, PT-EX610, PT-EX610L, PT-EX510, PT-EX510L, PT-SLZ77C, PT-SLZ77CL, PT-SLW83C, PT-SLW83CL, PT-EZ770ZE, PT-EW540E

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
2.08.0002-b001	1.4.2

Version History

Module Version	Date	Notes
1_3_0_0	6/1/2018	- Added Device Status for Serial Control. - Renamed Input values from 'Computer 1' to 'RGB 1', 'Computer 2' to 'RGB 2', 'Display Port' to 'DisplayPort' for Serial control. - Removed Video Mute command for Ethernet control. - Renamed PIPInput value 'Display Port' to 'DisplayPort'.
1_1_7_0	1/18/2017	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- If login credentials are required for Ethernet control, devicePassword and deviceUsername must be set accordingly. devicePassword and deviceUsername default values are 'panasonic' and 'admin1' respectively.
Example: `InterfaceName.devicePassword = 'panasonic'`
`InterfaceName.deviceUsername = 'admin1'`
- DeviceID variable must be set accordingly for serial control. Default value is '1'. Device ID ranges from '1' to '64' or it can be set to 'Broadcast'. When device is set to 'Broadcast', status is not available.
Example: `InterfaceName.DeviceID = '1'`
- Not all models support Ethernet and Serial control.
 - Serial Only
 - PT-EW540L
 - PT-EW640L
 - PT-510L
 - PT-EX610L
 - PT-EZ580L
 - PT-SLW65C
 - PT-SLW65CL
 - PT-SLW83C
 - PT-SLW83CL
 - PT-SLX62C
 - PTSLX62CL
 - PT-SLX75C
 - PT-SLX75CL
 - PT-SLX80C
 - PT-SLX80CL
 - PT-SLZ77C
 - PT-SLZ77CL
 - Ethernet Only
 - PT-EZ770ZE

Supported Classes and Examples

SerialClass
InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='PT-EZ770Z')
SerialOverEthernetClass
InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='PT-EZ770Z')
EthernetClass
InterfaceName = ModuleName.EthernetClass('192.168.254.254', 1024, Model='PT-EZ770Z')

Set Commands – Serial Control

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command AspectRatio	Value 'Normal' 'Native' 'V Fit'	Value '4:3' 'Full'	Value 'Wide' 'H Fit'
# AspectRatio example InterfaceName.Set('AspectRatio', 'Normal')			
Command AutoImage	Value 'String'		
# AutoImage example InterfaceName.Set('AutoImage', 'String')			
Command ClosedCaption	Value 'CC1' 'CC4'	Value 'CC2' 'Off'	Value 'CC3'
# ClosedCaption example InterfaceName.Set('ClosedCaption', 'CC1')			
Command Freeze	Value 'On'	Value 'Off'	
# Freeze example InterfaceName.Set('Freeze', 'On')			
Command Input	Value 'Video' 'DVI' 'DisplayPort' ¹	Value 'RGB 1' 'HDMI'	Value 'RGB 2' 'Digital Link' ¹
# Input example InterfaceName.Set('Input', 'Video')			
Command LampPower	Value 'Normal' 'Auto'	Value 'Eco 1' ³ 'Eco' ²	Value 'Eco 2' ³
# LampPower example InterfaceName.Set('LampPower', 'Normal')			
Command MenuNavigation	Value 'Up' 'Right'	Value 'Down' 'Enter'	Value 'Left' 'Menu'
# MenuNavigation example			

Global Scripter Module Communication Sheet

Revision: 6/1/2018

InterfaceName.Set('MenuNavigation', 'Up')			
Command	Value	Value	Value
PictureMode	'Natural'	'Standard'	'Dynamic'
	'Cinema'	'Dicom Sim'	
# PictureMode example InterfaceName.Set('PictureMode', 'Natural')			
Command	Value	Value	
PIPFramelock	'Main Window'	'Sub Window'	
# PIPFrameLock example InterfaceName.Set('PIPFramelock', 'Main Window')			
Command	Value	Value	Value
PIPHandVMagnification	'10'	'20'	'30'
	'40'	'50'	'60'
	'70'	'80'	'90'
	'100'		
Qualifier Key	Qualifier Value	Qualifier Value	
'PIP Type'	'Main'	'Sub'	
# PIPHandVMagnification example InterfaceName.Set('PIPHandVMagnification', '10', {'PIP Type': 'Main'})			
Command	Value	Value	Value
PIPIInput	'RGB 1'	'RGB 2'	'Video'
	'DVI'	'HDMI'	'DisplayPort' ¹
	'Digital Link' ¹		
Qualifier Key	Qualifier Value	Qualifier Value	
'PIP Type'	'Main'	'Sub'	
# PIPInput example InterfaceName.Set('PIPIInput', 'RGB 1', {'PIP Type': 'Main'})			
Command	Value	Value	Value
PIPMODE	'User 1'	'User 2'	'User 3'
	'Off'		
# PIPMode example InterfaceName.Set('PIPMODE', 'User 1')			
Command	Value	Value	
Power	'On'	'Off'	
# Power example InterfaceName.Set('Power', 'On')			
Command	Value	Value	
Shutter ⁴	'On'	'Off'	
# Shutter example InterfaceName.Set('Shutter', 'On')			
Command	Value		

Volume	0 to 63 in steps of 1
# Volume example InterfaceName.Set('Volume', 63)	

¹ These inputs are not supported by the following models: PT-SLX75C/L, EW540/L/E, EX510/L, SLW65C/L and SLX62C/L.

² This setting is only supported by the following models: PT-EZ580/L, EW640/L, EX610/L, SLZ69C/L, SLW75C/L, SLX72C/L, EW540/L/E, EX510/L, SLW65C/L and SLX62C/L.

³ These settings are only supported by the following models: PT-EZ770/L, EW730Z/L, EX800Z/L, SLZ77C/L, SLW83C/L, SLX80C/L and SLX75C/L.

⁴ This command is the same as AV Mute for models PT-EW540/L/E and PT-EX510/L.

Status Available – Serial Control

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command AspectRatio	Value 'Normal' 'Native' 'V Fit'	Value '4:3' 'Full'	Value 'Wide' 'H Fit'
# AspectRatio examples InterfaceName.Update('AspectRatio') Value = InterfaceName.ReadStatus('AspectRatio') InterfaceName.SubscribeStatus('AspectRatio', None, FeedbackHandler)			
Command ClosedCaption	Value 'CC1' 'CC4'	Value 'CC2' 'Off'	Value 'CC3'
# ClosedCaption examples InterfaceName.Update('ClosedCaption') Value = InterfaceName.ReadStatus('ClosedCaption') InterfaceName.SubscribeStatus('ClosedCaption', None, FeedbackHandler)			
Command ConnectionStatus	Value 'Connected'	Value 'Disconnected'	
# ConnectionStatus examples Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command DeviceStatus	Value 'Intake Air Temperature Warning' 'Exhaust Temperature Error' 'Lamp Error'	Value 'Exhaust Temperature Warning' 'Lamp Warning' 'Lamp Ignition Error'	Value 'Intake Air Temperature Error' 'Lamp Runtime Error (Shut Down)' 'Lamp Mounting Error'

Global Scripter Module Communication Sheet

Revision: 6/1/2018

	'Lamp Cover Error'	'Disconnect Intake Fan Temperature Sensor'	'Disconnect Exhaust Fan Temperature Sensor'
	'Disconnect Clogged Sensor Cable'	'Air Filter Clogged'	'Clock Battery Low'
	'Angle Sensor Error'	'No Air Filter Installed'	'Fan 1 Error'
	'Fan 2 Error'	'Fan 3 Error'	'Fan 4 Error'
	'Fan 5 Error'	'Fan 6 Error'	'Fan 7 Error'
	'Fan 8 Error'	'Shutter Error'	'Iris Error'
	'Lamp Not Initialized'	'FPGA1 Configure Error'	'Lens Mounter Operation Error'
	'Ballast Communication Error'	'Optical Output Limitation'	'Gamma Data Not Saved'
	'Color Shading Correction Data Not Saved'	'Pressure Sensor Error'	'Portrait Warning'
	'Network CPU Communication Error'	'Sub CPU Communication Error'	'Internal Communication Error'
	'A-PRINT Not Initialized'	'Internal Error'	'Multiple Errors'
	'No Errors'		
# DeviceStatus examples InterfaceName.Update('DeviceStatus') Value = InterfaceName.ReadStatus('DeviceStatus') InterfaceName.SubscribeStatus('DeviceStatus', None, FeedbackHandler)			
Command Freeze	Value 'On'	Value 'Off'	
# Freeze examples InterfaceName.Update('Freeze') Value = InterfaceName.ReadStatus('Freeze') InterfaceName.SubscribeStatus('Freeze', None, FeedbackHandler)			
Command Input	Value 'Video' 'DVI' 'DisplayPort' ¹	Value 'RGB 1' 'HDMI'	Value 'RGB 2' 'Digital Link' ¹
# Input examples InterfaceName.Update('Input') Value = InterfaceName.ReadStatus('Input') InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)			
Command LampPower	Value 'Normal' 'Auto'	Value 'Eco 1' ³ 'Eco 2' ²	Value 'Eco 2' ³
# LampPower examples InterfaceName.Update('LampPower')			

Global Scripter Module Communication Sheet

Value = InterfaceName.ReadStatus('LampPower') InterfaceName.SubscribeStatus('LampPower', None, FeedbackHandler)			
Command LampUsage	Value Hours		
# LampUsage examples InterfaceName.Update('LampUsage') Value = InterfaceName.ReadStatus('LampUsage') InterfaceName.SubscribeStatus('LampUsage', None, FeedbackHandler)			
Command OperationHours	Value Hours		
# OperationHours examples InterfaceName.Update('OperationHours') Value = InterfaceName.ReadStatus('OperationHours') InterfaceName.SubscribeStatus('OperationHours', None, FeedbackHandler)			
Command PictureMode	Value 'Natural' 'Cinema'	Value 'Standard' 'Dicom Sim'	Value 'Dynamic'
# PictureMode examples InterfaceName.Update('PictureMode') Value = InterfaceName.ReadStatus('PictureMode') InterfaceName.SubscribeStatus('PictureMode', None, FeedbackHandler)			
Command PIPFramelock	Value 'Main Window'	Value 'Sub Window'	
# PIPFrameLock examples InterfaceName.Update('PIPFramelock') Value = InterfaceName.ReadStatus('PIPFramelock') InterfaceName.SubscribeStatus('PIPFramelock', None, FeedbackHandler)			
Command PIPIInput	Value 'RGB 1' 'DVI' 'Digital Link' ¹	Value 'RGB 2' 'HDMI'	Value 'Video' 'DisplayPort' ¹
Qualifier Key 'PIP Type'	Qualifier Value 'Main'	Qualifier Value 'Sub'	
# PIPInput examples InterfaceName.Update('PIPIInput', {'PIP Type': 'Main'}) Value = InterfaceName.ReadStatus('PIPIInput', {'PIP Type': 'Main'}) InterfaceName.SubscribeStatus('PIPIInput', None, FeedbackHandler)			
Command PIPMode	Value 'User 1' 'Off'	Value 'User 2'	Value 'User 3'
# PIPMode examples InterfaceName.Update('PIPMode') Value = InterfaceName.ReadStatus('PIPMode') InterfaceName.SubscribeStatus('PIPMode', None, FeedbackHandler)			

Global Scripter Module Communication Sheet

Revision: 6/1/2018

Command Power	Value 'On' 'Cooling Down'	Value 'Off'	Value 'Warming Up'
<pre># Power examples InterfaceName.Update('Power') Value = InterfaceName.ReadStatus('Power') InterfaceName.SubscribeStatus('Power', None, FeedbackHandler)</pre>			
Command Shutter ⁴	Value 'On'	Value 'Off'	
<pre># Shutter examples InterfaceName.Update('Shutter') Value = InterfaceName.ReadStatus('Shutter') InterfaceName.SubscribeStatus('Shutter', None, FeedbackHandler)</pre>			
Command Volume	Value 0 to 63 in steps of 1		
<pre># Volume examples InterfaceName.Update('Volume') Value = InterfaceName.ReadStatus('Volume') InterfaceName.SubscribeStatus('Volume', None, FeedbackHandler)</pre>			

¹ These inputs are not supported by the following models: PT-SLX75C/L, EW540/L/E, EX510/L, SLW65C/L and SLX62C/L.

² This setting is only supported by the following models: PT-EZ580/L, EW640/L, EX610/L, SLZ69C/L, SLW75C/L, SLX72C/L, EW540/L/E, EX510/L, SLW65C/L and SLX62C/L.

³ These settings are only supported by the following models: PT-EZ770/L, EW730Z/L, EX800Z/L, SLZ77C/L, SLW83C/L, SLX80C/L and SLX75C/L.

⁴ This command is the same as AV Mute for models PT-EW540/L/E and PT-EX510/L.

Set Commands – Ethernet Control

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command AspectRatio	Value 'Normal' 'Native' 'V Fit'	Value '4:3' 'Full'	Value 'Wide' 'H Fit'
# AspectRatio example InterfaceName.Set('AspectRatio', 'Normal')			
Command ClosedCaption	Value 'CC1' 'CC4'	Value 'CC2' 'Off'	Value 'CC3'
# ClosedCaption example InterfaceName.Set('ClosedCaption', 'CC1')			
1Command Input	Value 'Video' 'DVI' 'DisplayPort' ¹	Value 'RGB 1' 'HDMI'	Value 'RGB 2' 'Digital Link' ¹
# Input example InterfaceName.Set('Input', 'Video')			
Command PIPMode	Value 'User 1' 'Off'	Value 'User 2'	Value 'User 3'
# PIPMode example InterfaceName.Set('PIPMode', 'User 1')			
Command Power	Value 'On'	Value 'Off'	
# Power example InterfaceName.Set('Power', 'On')			
Command Shutter ²	Value 'On'	Value 'Off'	
# Shutter example InterfaceName.Set('Shutter', 'On')			

¹ These inputs are not supported by the following models: PT-SLX75C/L, EW540/L/E, EX510/L, SLW65C/L and SLX62C/L.

² This command is the same as AV Mute for models PT-EW540/L/E and PT-EX510/L.

Cable and Adapter Requirements

Captive Screw to Male DB9 RS-232 Serial Cable

Notes for the Device

For this module to work properly, ensure that:

1. [STANDBY MODE] is set to [NORMAL]
2. If not using an optional Digital Interface Box, make sure [RS-232C] is set to [PROJECTOR]. Otherwise, set it to [DIGITAL INTERFACE BOX].

Serial communication

Port Type: RS-232

Baud Rate: 9600


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

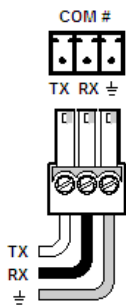

Signal	Main Cable	Pin	Signal
TxD	→	3	RxD
RxD	←	2	TxD
GND	→	5	GND

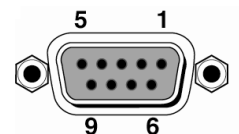

RS232 DB9, Female
Projector

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scripter ethernet interface

Port Type:	Ethernet
Default Port:	1024
Logon Credentials Supported:	Yes
Default Username:	admin1
Default Password:	panasonic
Multi-Connection Capabilities:	Undetermined
Port Changeability:	No

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

For the module to work properly, ensure that:

1. [STANDBY MODE] is set to [NORMAL]
2. [NETWORK CONTROL]: [COMMAND CONTROL] is set to [ON]

Appendix A. Set Commands (Serial)

Commands below only work when Device ID is set to '1'.

Aspect Ratio 4:3	\x02AD01;VSE:1\x03
Aspect Ratio Full	\x02AD01;VSE:6\x03
Aspect Ratio H Fit	\x02AD01;VSE:9\x03
Aspect Ratio Native	\x02AD01;VSE:5\x03
Aspect Ratio Normal	\x02AD01;VSE:0\x03
Aspect Ratio V Fit	\x02AD01;VSE:10\x03
Aspect Ratio Wide	\x02AD01;VSE:2\x03
Auto Image None	\x02AD01;OAS\x03
Closed Caption CC1	\x02AD01;OCC:1\x03
Closed Caption CC2	\x02AD01;OCC:2\x03
Closed Caption CC3	\x02AD01;OCC:3\x03
Closed Caption CC4	\x02AD01;OCC:4\x03
Closed Caption Off	\x02AD01;OCC:0\x03
Freeze Off	\x02AD01;OFZ:0\x03
Freeze On	\x02AD01;OFZ:1\x03
Input DVI	\x02AD01;IIS:DVI\x03
Input HDMI	\x02AD01;IIS:HD1\x03
Input RGB 1	\x02AD01;IIS:RG1\x03
Input RGB 2	\x02AD01;IIS:RG2\x03
Input Video	\x02AD01;IIS:VID\x03
Input Digital Link	\x02AD01;IIS:DL1\x03
Input DisplayPort	\x02AD01;IIS:DP1\x03
Lamp Power Auto	\x02AD01;VXX:LPWI1=+00030\x03
Lamp Power Normal	\x02AD01;VXX:LPWI1=+00001\x03
Lamp Power Eco 1	\x02AD01;VXX:LPWI1=+00020\x03
Lamp Power Eco 2	\x02AD01;VXX:LPWI1=+00021\x03
Lamp Power Eco	\x02AD01;VXX:LPWI1=+00000\x03
Menu Navigation Down	\x02AD01;OCD\x03
Menu Navigation Enter	\x02AD01;OEN\x03
Menu Navigation Left	\x02AD01;OCL\x03
Menu Navigation Menu	\x02AD01;OMN\x03
Menu Navigation Right	\x02AD01;OCR\x03
Menu Navigation Up	\x02AD01;OCU\x03
PIP Frame Lock Main Window	\x02AD01;PFL:0\x03
PIP Frame Lock Sub Window	\x02AD01;PFL:1\x03
PIP H and V Magnification 10 PIP Type Main	\x02AD01;MSZ:010\x03

Global Scripter Module Communication Sheet

Revision: 6/1/2018

PIP H and V Magnification 20 PIP Type Main	\x02AD01;MSZ:020\x03
PIP H and V Magnification 30 PIP Type Main	\x02AD01;MSZ:030\x03
PIP H and V Magnification 40 PIP Type Main	\x02AD01;MSZ:040\x03
PIP H and V Magnification 50 PIP Type Main	\x02AD01;MSZ:050\x03
PIP H and V Magnification 60 PIP Type Main	\x02AD01;MSZ:060\x03
PIP H and V Magnification 70 PIP Type Main	\x02AD01;MSZ:070\x03
PIP H and V Magnification 80 PIP Type Main	\x02AD01;MSZ:080\x03
PIP H and V Magnification 90 PIP Type Main	\x02AD01;MSZ:090\x03
PIP H and V Magnification 100 PIP Type Main	\x02AD01;MSZ:100\x03
PIP H and V Magnification 10 PIP Type Sub	\x02AD01;SSZ:010\x03
PIP H and V Magnification 20 PIP Type Sub	\x02AD01;SSZ:020\x03
PIP H and V Magnification 30 PIP Type Sub	\x02AD01;SSZ:030\x03
PIP H and V Magnification 40 PIP Type Sub	\x02AD01;SSZ:040\x03
PIP H and V Magnification 50 PIP Type Sub	\x02AD01;SSZ:050\x03
PIP H and V Magnification 60 PIP Type Sub	\x02AD01;SSZ:060\x03
PIP H and V Magnification 70 PIP Type Sub	\x02AD01;SSZ:070\x03
PIP H and V Magnification 80 PIP Type Sub	\x02AD01;SSZ:080\x03
PIP H and V Magnification 90 PIP Type Sub	\x02AD01;SSZ:090\x03
PIP H and V Magnification 100 PIP Type Sub	\x02AD01;SSZ:100\x03
PIP Input DVI PIP Type Main	\x02AD01;MSI:DVI\x03
PIP Input Digital Link PIP Type Main	\x02AD01;MSI:DL1\x03
PIP Input DisplayPort PIP Type Main	\x02AD01;MSI:DP1\x03
PIP Input HDMI PIP Type Main	\x02AD01;MSI:HD1\x03
PIP Input RGB 1 PIP Type Main	\x02AD01;MSI:RG1\x03
PIP Input RGB 2 PIP Type Main	\x02AD01;MSI:RG2\x03
PIP Input Video PIP Type Main	\x02AD01;MSI:VID\x03
PIP Input DVI PIP Type Sub	\x02AD01;SIS:DVI\x03
PIP Input Digital Link PIP Type Sub	\x02AD01;SIS:DL1\x03
PIP Input DisplayPort PIP Type Sub	\x02AD01;SIS:DP1\x03
PIP Input HDMI PIP Type Sub	\x02AD01;SIS:HD1\x03
PIP Input RGB 1 PIP Type Sub	\x02AD01;SIS:RG1\x03
PIP Input RGB 2 PIP Type Sub	\x02AD01;SIS:RG2\x03
PIP Input Video PIP Type Sub	\x02AD01;SIS:VID\x03
PIP Mode Off	\x02AD01;OPP:0\x03
PIP Mode User 1	\x02AD01;OPP:1\x03
PIP Mode User 2	\x02AD01;OPP:2\x03
PIP Mode User 3	\x02AD01;OPP:3\x03
Picture Mode Cinema	\x02AD01;VPM:CIN\x03
Picture Mode Dicom Sim	\x02AD01;VPM:DIC\x03

Global Scripter Module Communication Sheet

Revision: 6/1/2018

Picture Mode Dynamic	\x02AD01;VPM:DYN\x03
Picture Mode Natural	\x02AD01;VPM:NAT\x03
Picture Mode Standard	\x02AD01;VPM:STD\x03
Power Off	\x02AD01;POF\x03
Power On	\x02AD01;PON\x03
Shutter Off	\x02AD01;OSH:0\x03
Shutter On	\x02AD01;OSH:1\x03
Volume 0	\x02AD01;AVL:000\x03
Volume 63	\x02AD01;AVL:063\x03

Appendix B. Update Commands (Serial)

Command below only works when Device ID is set to '1'.

Aspect Ratio	\x02AD01;QSE\x03
Closed Caption	\x02AD01;QCC\x03
Device Status	\x02\x00\xFE\x03
Freeze	\x02AD01;QFZ\x03
Input	\x02AD01;QIN\x03
Lamp Power	\x02AD01;QVX:LPWI1\x03
Lamp Usage	\x02AD01;Q\$L:1\x03
Operation Hours	\x02AD01;QST\x03
PIP Frame Lock	\x02AD01;QPF\x03
PIP Input PIP Type Main	\x02AD01;QIM\x03
PIP Input PIP Type Sub	\x02AD01;QIS\x03
PIP Mode	\x02AD01;QPP\x03
Picture Mode	\x02AD01;QPM\x03
Power	\x02AD01;Q\$S\x03
Shutter	\x02AD01;QSH\x03
Volume	\x02AD01;QAV\x03

Appendix C. Set Commands (Ethernet)

Aspect Ratio 4:3	00VSE:1\x0D
Aspect Ratio Full	00VSE:6\x0D
Aspect Ratio H Fit	00VSE:9\x0D
Aspect Ratio Native	00VSE:5\x0D
Aspect Ratio Normal	00VSE:0\x0D
Aspect Ratio V Fit	00VSE:10\x0D
Aspect Ratio Wide	00VSE:2\x0D
Input DVI	00IIS:DVI\x0D
Input HDMI	00IIS:HD1\x0D
Input RGB 1	00IIS:RG1\x0D
Input RGB 2	00IIS:RG2\x0D
Input Video	00IIS:VID\x0D
Input Digital Link	00IIS:DL1\x0D
Input DisplayPort	00IIS:DP1\x0D
PIP Mode Off	00OPP:0\x0D
PIP Mode User 1	00OPP:1\x0D
PIP Mode User 2	00OPP:2\x0D
PIP Mode User 3	00OPP:3\x0D
Power Off	00POF\x0D
Power On	00PON\x0D
Shutter Off	00OSH:0\x0D
Shutter On	00OSH:1\x0D