

This document provides additional assistance with wiring your Extron IPL PRO enabled product to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instruction, refer to the user's manual for the specific Extron IPL PRO enabled product or the controlled device manufacturer supplied documentation.

Device Specifications:

Device Type: Video Projector
 Manufacturer: Panasonic
 Firmware Version: N/A
 Model(s): PT-RZ570, PT-RZ570B, PT-RZ570BA, PT-RZ570BD, PT-RZ570BT, PT-RZ570BU, PT-RZ570W, PT-RZ570WA, PT-RZ570WD, PT-RZ570WT, PT-RZ570WU, PT-RZ570, PT-RZ570B, PT-RZ570BA, PT-RZ570BD, PT-RZ570BT, PT-RZ570BU, PT-RZ570W, PT-RZ570WA, PT-RZ570WD, PT-RZ570WT, PT-RZ570WU

Tested on the Following Software and Firmware Versions:

IP Link Pro Control Processor Firmware	Touch Link Panel Firmware	GS Version
2.01.0000-b004	2.01.0000-b003	1.0.3

Version History

Module Version	Date	Notes
1_0_0_0	5/25/2016	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'. Example:
InterfaceName.Unidirectional = 'True'
- ConnectionCounter variable must be set the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15. Example:
InterfaceName.ConnectionCounter = 5
- DisplayID must be set for Set and Update command to work properly. To set DisplayID, call the function SetDisplayID(str). This must be done before calling the Set and Update functions. DisplayID is only required for Serial control. Example: InterfaceName.SetDisplayID('1').
- If login credentials are required, deviceUsername and devicePassword variables must be set to the Username and Password set to access the device. Default value for Username and Password are admin1 and Panasonic respectively. Login credentials are only required for Ethernet control. Example:
InterfaceName.devicePassword = 'pana'.

Control Commands, States, and Qualifiers:

AspectRatio	'Auto' 'Native (Through)' 'V-Fit'	'Normal (4:3)' 'Full (HV Fit)'	'Wide (16:9)' 'H-Fit'
AutoImage	None		
ClosedCaption	'CC1' 'CC4'	'CC2' 'Off'	'CC3'
Freeze	'On'	'Off'	
Input	'Computer 1' 'DVI' 'Digital Link' 'Digital Link Video'	'Computer 2' 'HDMI 1' 'Digital Link Computer 1' 'Digital Link HDMI 1'	'Video' 'HDMI 2' 'Digital Link Computer 2' 'Digital Link HDMI 2'
MenuNavigation	'Menu' 'Left' 'Return'	'Up' 'Right'	'Down' 'Enter'
OnScreenDisplay	'On'	'Off'	
OperationMode	'Normal' 'User'	'Eco'	'Silent'
PictureMode	'Dynamic' 'Cinema' 'REC709'	'Natural' 'Graphic'	'Standard' 'DICOM SIM'
PIPMode	'Off' 'User 3'	'User 1'	'User 2'
Power	'On'	'Off'	
Shutter	'Open'	'Close'	
Volume	0 to 63 in steps of 1		

Status Available:

AspectRatio	'Auto' 'Native (Through)' 'V-Fit'	'Normal (4:3)' 'Full (HV Fit)'	'Wide (16:9)' 'H-Fit'
ClosedCaption	'CC1' 'CC4'	'CC2' 'Off'	'CC3'
ConnectionStatus	'Connected'	'Disconnected'	
Freeze	'On'	'Off'	
Input	'Computer 1' 'DVI' 'Digital Link' 'Digital Link Video'	'Computer 2' 'HDMI 1' 'Digital Link Computer 1' 'Digital Link HDMI 1'	'Video' 'HDMI 2' 'Digital Link Computer 2' 'Digital Link HDMI 2'
LampUsage	Hours		
OnScreenDisplay	'On'	'Off'	
OperationMode	'Normal' 'User'	'Eco'	'Silent'
PictureMode	'Dynamic' 'Cinema' 'REC709'	'Natural' 'Graphic'	'Standard' 'DICOM SIM'
PIPMODE	'Off' 'User 3'	'User 1'	'User 2'
Power	'On'	'Off'	
Shutter	'Open'	'Close'	
Volume	0 to 63 in steps of 1		

Cable and Adapter Requirements:

Captive Screw to Female DB9 RS-232 Serial Cable

Notes for the Device:

The destination of [RS-232C] must be set to PROJECTOR to perform the RS-232C communication with the <SERIAL IN> terminal of the projector (page 106 of user manual).

Serial communication:

Port Type: RS-232

Parity: None


Baud Rate: 9600

Stop Bits: One

Data Bits: 8

Flow Control: None

Pin Assignments Diagram

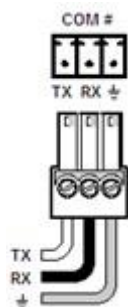

Signal	Main Cable	Pin	Signal
TxD	→	2	RxD
RxD	←	3	TxD
GND	→	5	GND



General Notes:

Network communication:

When configuring the Ethernet module, be sure device settings match that of the GCP configuration.

Port Type:	Ethernet
Default Port:	1024
Logon Credentials Supported:	Yes
Default Username:	admin1
Default Password:	panasonic
Multi-Connection Capabilities:	No
Port Changeability:	No

Ethernet Module Configuration Description:

Please refer to user manual for settings and changes to the network communication

Notes for the Device: