

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Display
Manufacturer: Sharp
Firmware Version: N/A
Model(s): 4P-B75EJ2U, 4P-B65EJ2U, 4P-B55EJ2U, 4P-B50EJ2U, 4P-B43EJ2U, 4P-B86EJ2U

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.17.0000-b002	2.20.0.16

Version History

Module Version	Date	Notes
1_0_2_0	10/13/2023	Initial Version

Module Notes

- If login credentials are required, devicePassword and deviceUsername must be set accordingly.
Example: InterfaceName.devicePassword = 'extron'
- It is recommended to have a pacing time of 0.2 seconds between all commands.

Supported Classes and Examples

SerialClass
InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='4P-B75EJ2U')
SerialOverEthernetClass
InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='4P-B75EJ2U')
EthernetClass
InterfaceName = ModuleName.EthernetClass('192.168.254.254', 10008, Model='4P-B75EJ2U')

Control Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command AspectRatio	Value 'Auto' 'Dot by Dot' '16:9'	Value 'Normal' '4:3'	Value 'Zoom' '14:9'
# AspectRatio example InterfaceName.Set('AspectRatio', 'Auto')			
Command Input	Value 'TV' 'HDMI 2' 'Home'	Value 'Composite' 'HDMI 3'	Value 'HDMI 1' 'USB'
# Input example InterfaceName.Set('Input', 'TV')			
Command Mute	Value 'On'	Value 'Off'	
# Mute example InterfaceName.Set('Mute', 'On')			
Command Power ^{2,3}	Value 'On'	Value 'Off'	
# Power example InterfaceName.Set('Power', 'On')			
Command PowerOff ¹	Value None		
# PowerOff example InterfaceName.Set('PowerOff', None)			
Command Volume	Value 1 to 100 in steps of 1		
# Volume example InterfaceName.Set('Volume', 100)			

¹ Only supported for Ethernet control

² Only supported for Serial control

³ For serial control, when the display is powered off via Power Off command please wait approximately 30 seconds before sending the Power On command

Cable and Adapter Requirements

Captive Screw to 3.5mm TRRS connector

Notes for the Device

Serial communication

Port Type: RS-232

Baud Rate: 9600


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

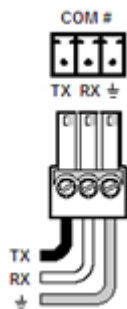

Signal	Main Cable	Pin	Signal
TxD	→	R2	RxD
RxD	←	R1	TxD
GND	→	S	GND

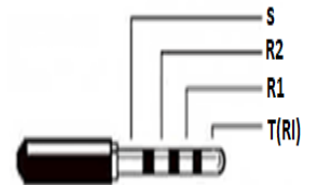

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scriptor ethernet interface.

Port Type: Ethernet (TCP)

Default Port: 10008

Logon Credentials Supported: Yes

Multi-Connection Capabilities: Undetermined

Port Changeability: Yes

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

To ensure the functionality of the module, please set the following if applicable:

- Menu → Network Settings → IP Control
- Enable authentication by setting a username and password on the device, and supply the credentials to the module.

To turn the display back on, please use Wake-on-LAN with this module.

Appendix A. Set Commands

Aspect Ratio 14:9	WIDE 6\x0D
Aspect Ratio 16:9	WIDE 7\x0D
Aspect Ratio 4:3	WIDE 5\x0D
Aspect Ratio Auto	WIDE 1\x0D
Aspect Ratio Dot by Dot	WIDE 4\x0D
Aspect Ratio Normal	WIDE 2\x0D
Aspect Ratio Zoom	WIDE 3\x0D
Input Composite	INPS 1\x0D
Input HDMI 1	INPS 2\x0D
Input HDMI 2	INPS 3\x0D
Input HDMI 3	INPS 4\x0D
Input Home	INPS 6\x0D
Input TV	INPS 0\x0D
Input USB	INPS 5\x0D
Mute Off	MUTE 0\x0D
Mute On	MUTE 1\x0D
Power Off	POWR 0\x0D
Power On	POWR 1\x0D
Power Off None	POWR 0\x0D
Volume 1	VOLM 1\x0D
Volume 100	VOLM 100\x0D