NOTES

1. SIGHT GLASS MUST BE CONNECTED ONLY WHEN VENTING OPERATION FOR RCS FILLING IS REQUIRED. DURING ALL MODES OF OPERATION EXCEPT ABOVE OPERATION, THE STRAIGHT REMOVAL SPOOL WITHOUT SIGHT GLASS MUST BE CONNECTED.

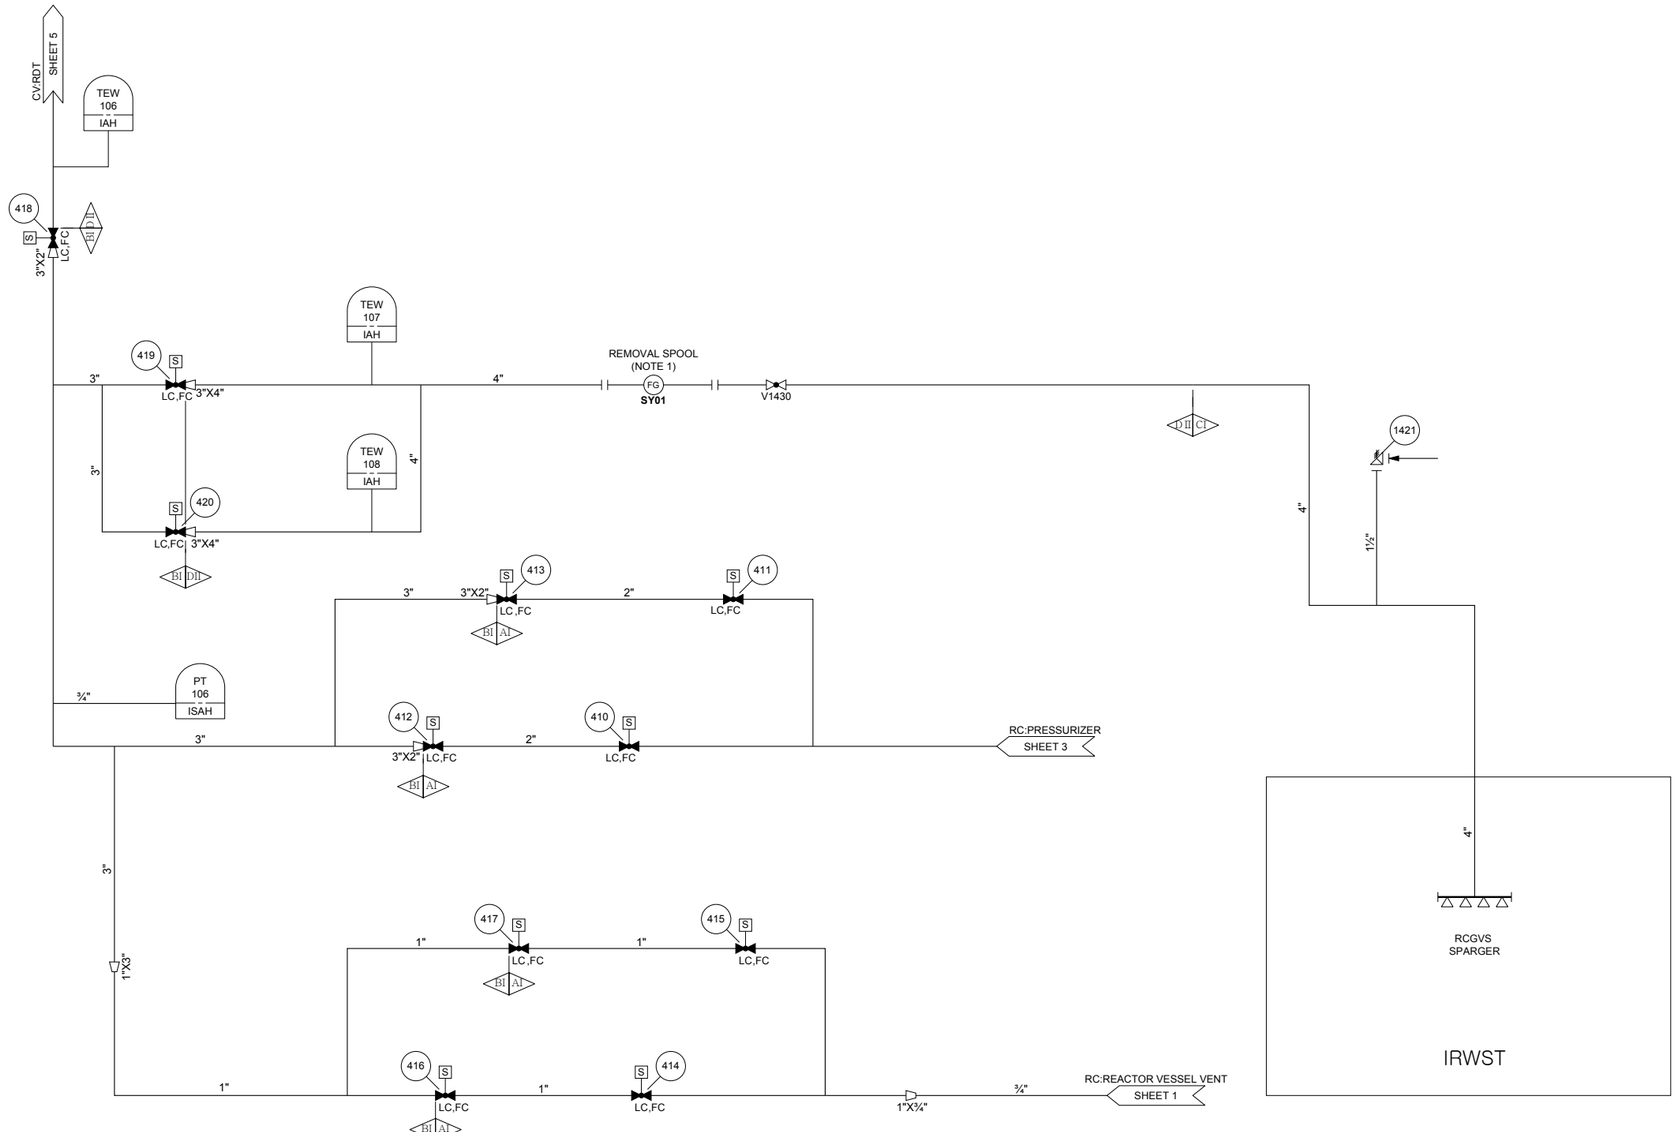


Figure 5.4.12-1 Reactor Coolant Gas Vent System Flow Diagram