ResQ-Vision

Electrical assembly

Selected STM32 hardware and logical cable functions. Connector assignments remain under review.

ELECTRICAL / B

21 OCT 2026

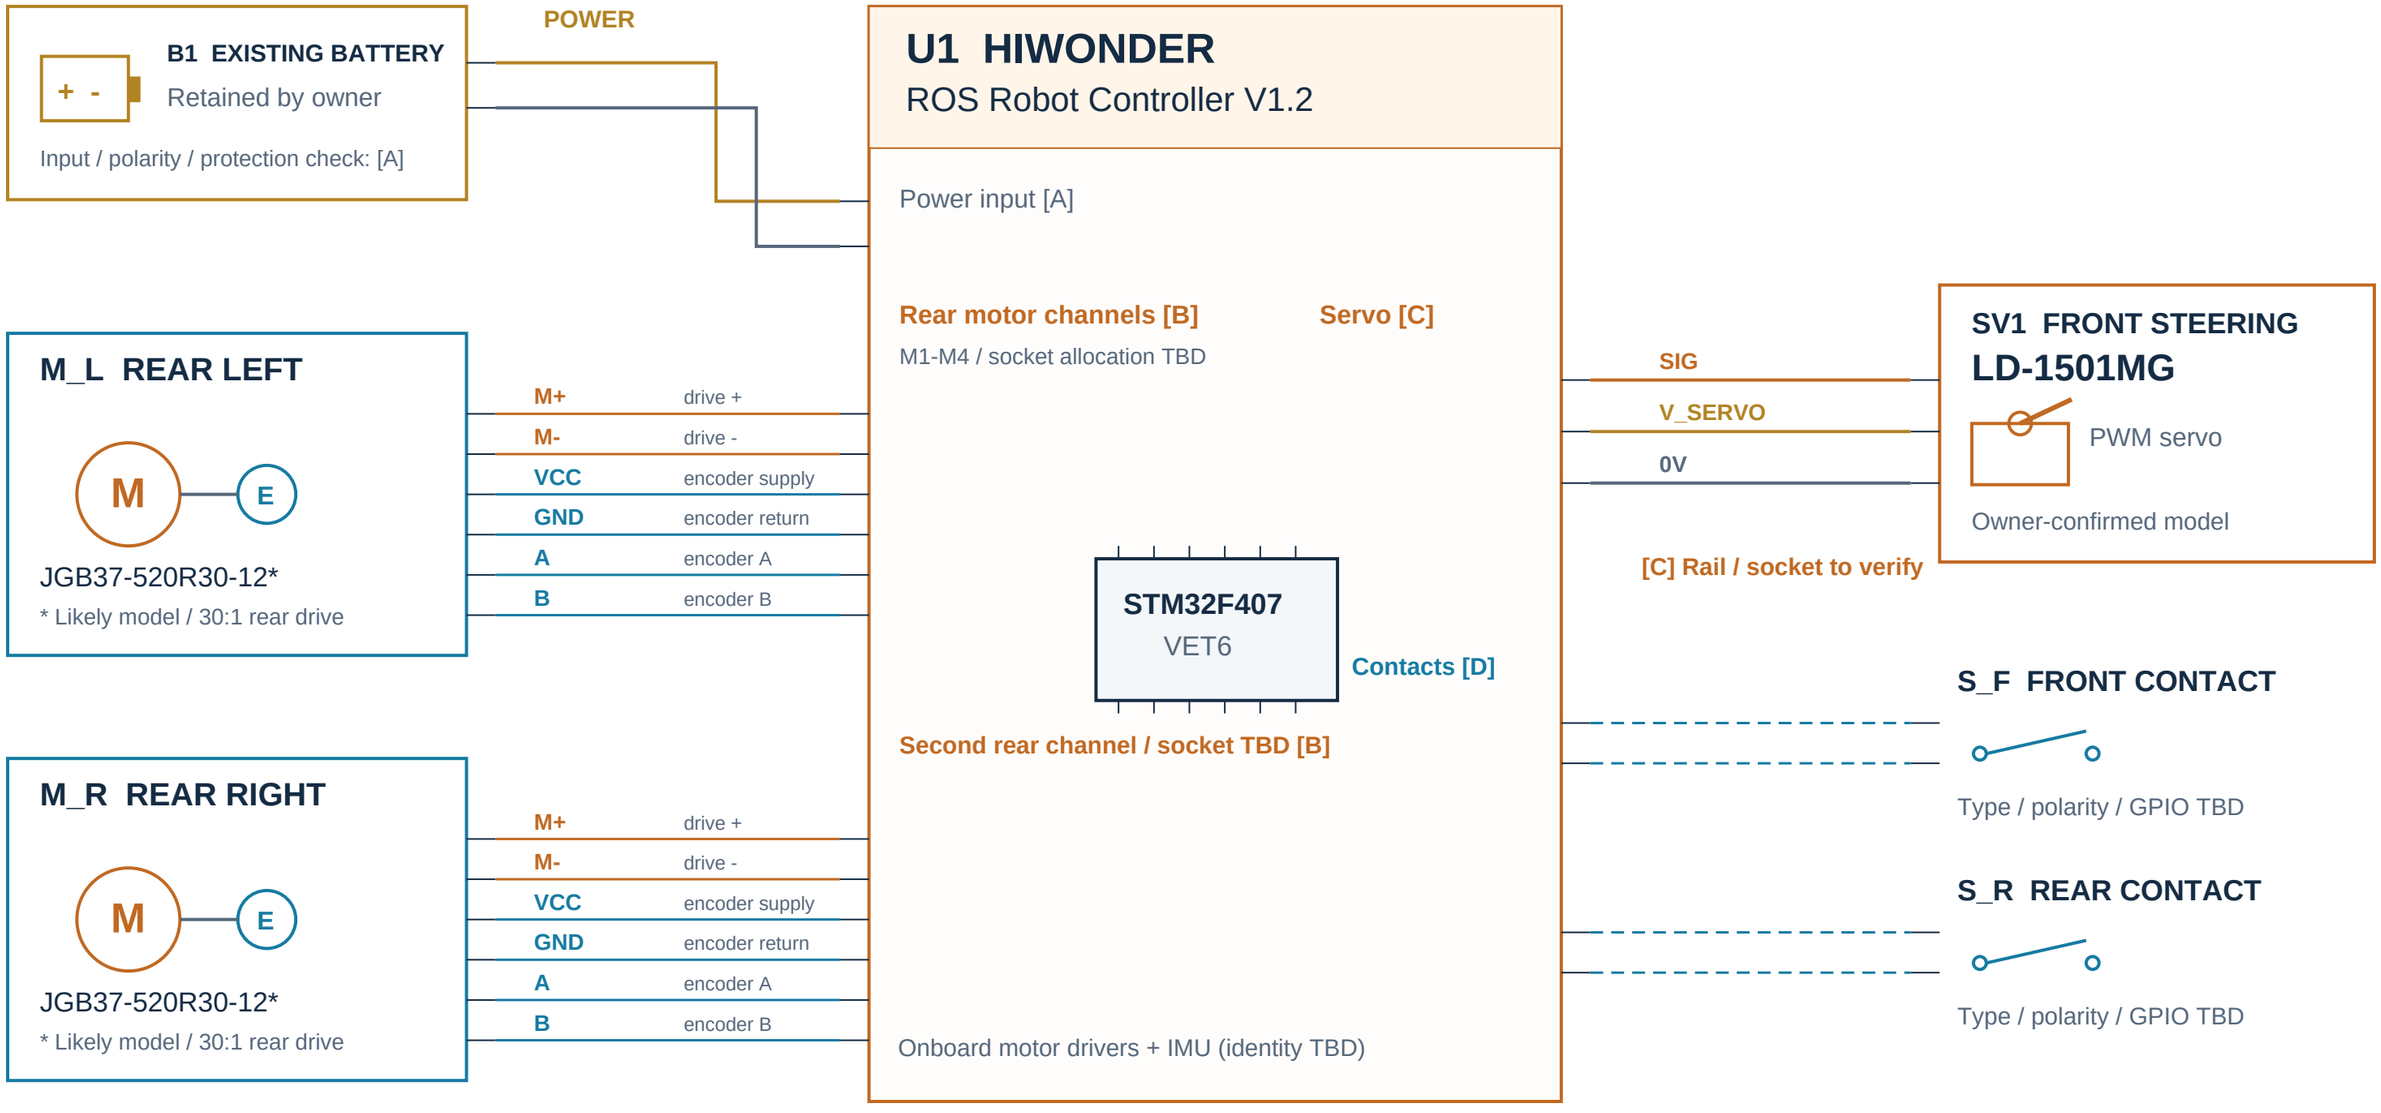

LOCAL STOP AUTHORITY

STM32 must stop locally on contact / command loss; physical inhibit circuit is unresolved [E].

READ WITH SHEET 2

Logical terminals, not a V1.2 pin-number map.

ResQ-Vision

Interfaces and connector reference

Confirmed components, planned data paths and the checks needed to complete the V1.2 wiring.

ELECTRICAL / B

21 OCT 2026

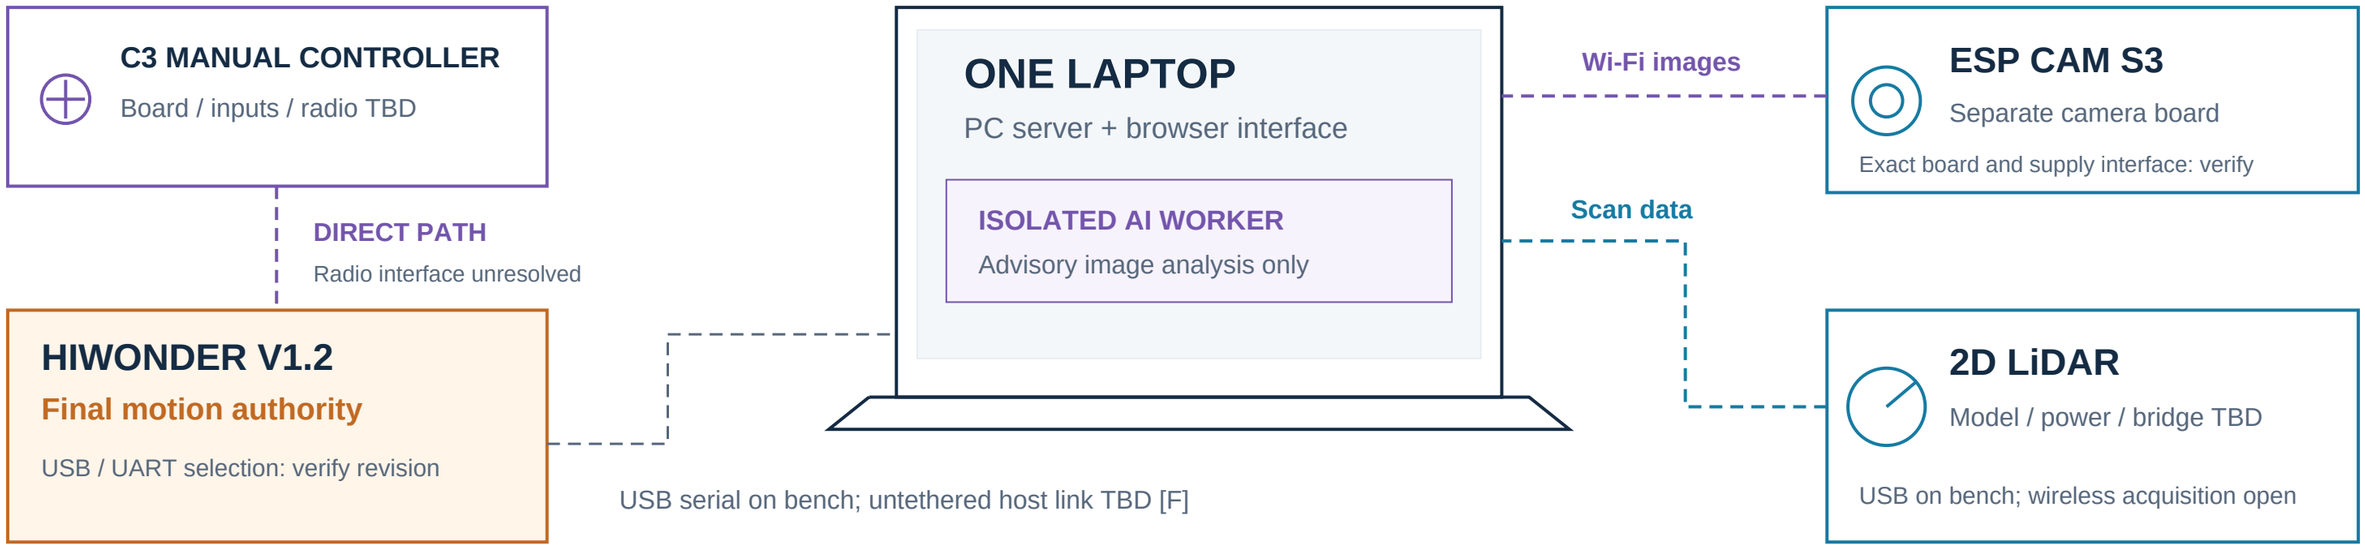

Dashed lines = planned data / unassigned contact interface, never copper. No extra radio board is assumed.

MOTOR HARNESS FUNCTIONS

Vendor family reference, not physical pin order

M+ / M-	Motor drive pair
VCC / GND	Hall supply / return
A / B	Quadrature feedback

[B] Verify plug order, levels and rear-channel allocation on the actual V1.2 board.

Source [2]; motor model remains inferred.

LD-1501MG STEERING

White	PWM signal
Red	Servo supply
Black	Ground / return

Vendor range: 6-8.4 V [2]

[C] Check V1.2 socket, rail and current.
Do not assume 5 V or raw battery routing.

Steering travel must be calibrated mechanically.

V1.2 COMPLETION CHECKS

[A] Battery input / polarity / protection

[B] Driver limits / harness / encoder levels

[C] Servo rail / socket / signal threshold

[D] Contact polarity / bias / assigned GPIO

[E] Independent inhibit / local stop evidence

[F] Host + C3 radio / LiDAR acquisition

[1] GitHub ADR 0006 / PR #20 [2] Hiwonder Ackermann chassis, STM32 guide [3] Hardware review: Issues #2, #3, #4, #9