

RRC-Raptor-V4H

磁碟規劃

- User's Manual: Software

V0.0.1

Contents

i.	VERSION LIST	4
ii.	HASHTAG	5
1.	Overview.....	6
1.1.	Overview.....	6
2.	eMMC Arrange	7
3.	Use fdisk to partition disks	8
4.	Format the partitions	9
5.	APPENDIX	10

LIST OF FIGURES

找不到圖表目錄。

i. VERSION LIST

Description	Version	Date	Author
磁碟規劃	V0.0.1	2024/08/19	Jerry

ii. HASHTAG

#V4H


#Partition

#BSP

1. Overview

1.1. Overview

2. eMMC Arrange

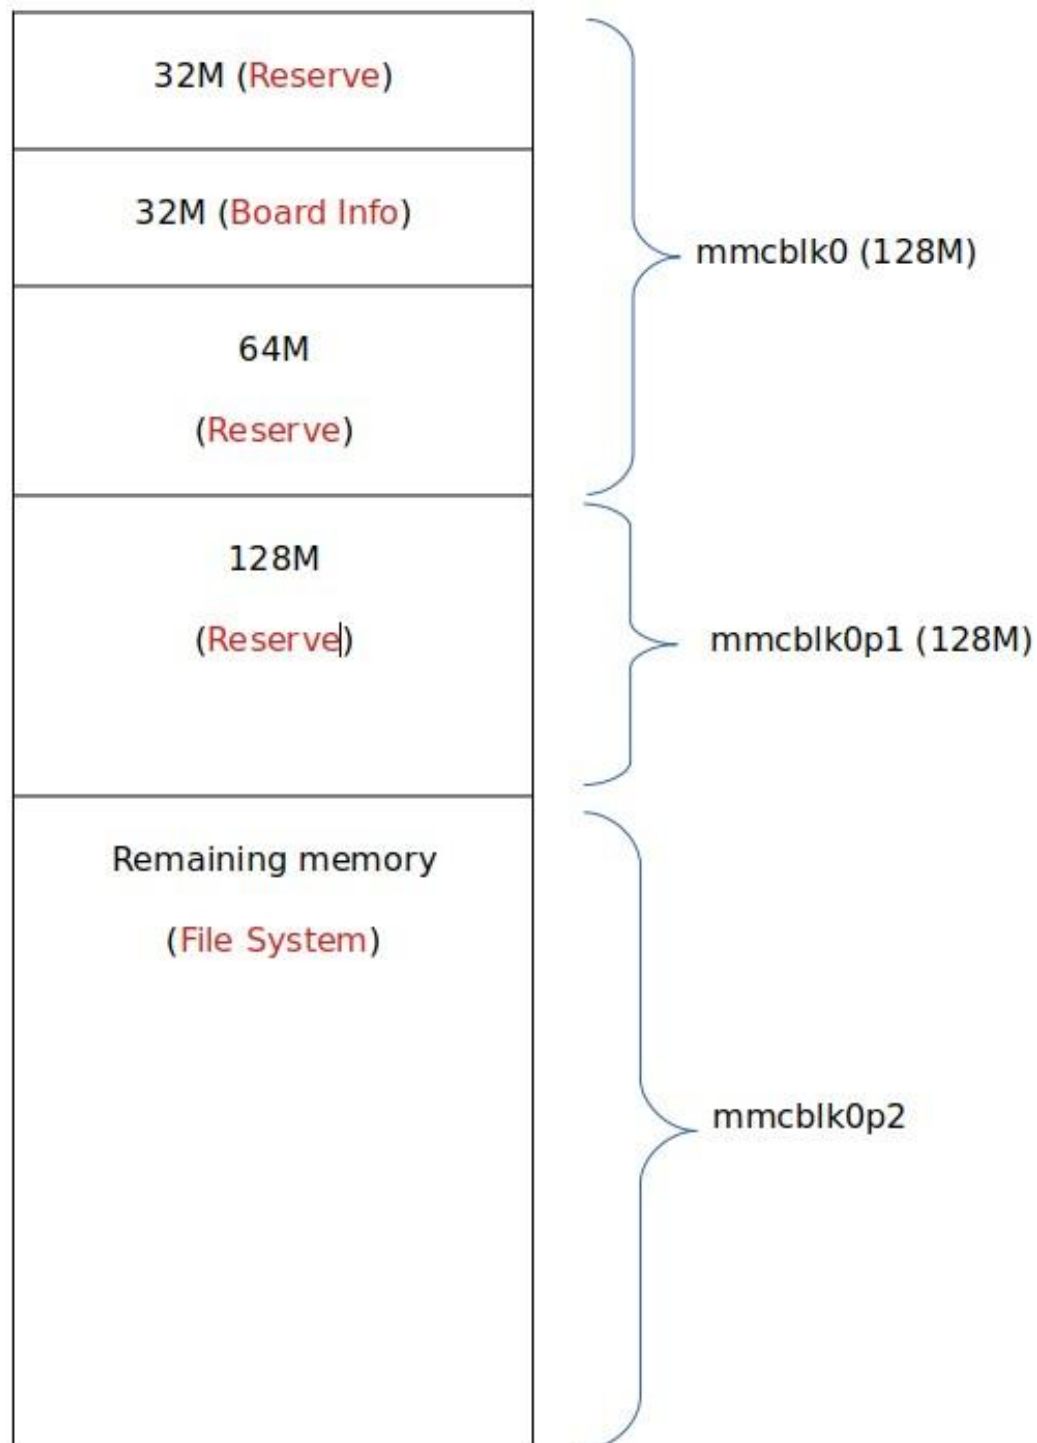

3. Use fdisk to partition disks

mmcblk0 : 128M
mmcblk0p1 : 128M
mmcblk0p2 : Remaining memory

分割完資訊如下：

```
root@v3x:~# fdisk -l /dev/mmcblk0
Disk /dev/mmcblk0: 59.62 GiB, 63996690432 bytes, 124993536 sectors
Units: sectors of 1 * 512 = 512 bytes
Sector size (logical/physical): 512 bytes / 512 bytes
I/O size (minimum/optimal): 512 bytes / 512 bytes
Disklabel type: dos
Disk identifier: 0x1a5f0675

Device           Boot  Start      End  Sectors  Size Id Type
/dev/mmcblk0p1    262144    524287    262144   128M 83 Linux
/dev/mmcblk0p2    524288 124993535 124469248 59.4G 83 Linux
```

4. Format the partitions

mmcblk0 : 128M
mmcblk0p1 : EXT4 : 128M
mmcblk0p2 : EXT4 : Remaining memory

5. APPENDIX