

Rexy Bridge 3.4 — User Guide

A panel-by-panel tour of every control, in the order they appear in the app. Setup and UE connection are covered in **GETTING_STARTED.md**; this guide assumes you're connected and driving a camera.



v3.0.0-beta.1

REXYWHEELS
DEVICEWS
CONNECTEDUE —
waiting...

UNITS

M /
CMFT
/ IN

OUTPUT

OSC
/ UE

FREED

SCRIPT HOST

127.0.0.1

WS PORT

9000

UES HOST

127.0.0.1

UES OSC PORT

8000

BASE PATH

/rexy

CONFIG

EXPORT

IMPORT

ACTIVE CAMERA

— none found · expose a property per camera —

APPLY BINDINGS TO ALL

SAVE BINDINGS

SCAN UE

REXY WHEELS — CAMERA HEAD

ABSOLUTE


RELATIVE

Pan

/rexy/pan

+96.6°

live —



PAD1:AX3

HOLD

INV

RESET


S 1. C 1. D 0 F 0
MIN (*) -180 MAX (*) 180

Tilt

/rexy/tilt

+0.0°

live —



A / D

HOLD

INV

RESET

S 0. C 1. D 0 F 16
MIN (*) -90 MAX (*) 90

Roll

/rexy/roll

+0.0°

live —



BIND

HOLD

INV

RESET

S 1. C 1. D 0 F 0
MIN (*) -45 MAX (*) 45

FUNCTIONS

Autolevel Roll

TRIGGER

BIND

TIME (S)

1.5

F

0.5

MoCo · Rec

TRIGGER

BIND

MoCo · Play / Stop

TRIGGER

BIND

MoCo · Home

TRIGGER

BIND

MoCo · Mark (all tracks)

TRIGGER

M

Lens · Tighter

TRIGGER

BIND

Lens · Wider

TRIGGER

BIND

REXY FOCUS — LENS & BODY

FOCUS UNITS

M / CM

FT / IN

CAMERA BODY / FILMBACK

16:9 Digital Film

LENS

24-70mm Zoom f/2.8

+ ADD CUSTOM LENS

LENS BOX

3 LENSES

A primes (imported)

new box name

+ CREATE LENS BOX

+ Add lens to box...

SAVE

EXPORT

IMPORT

DELETE

25mm 25mm prime

X

30mm 30mm Prime f/1.4

X

50mm 50mm Prime f/1.8

X

◀ WIDER

BIND

TIGHTER ▶

BIND

FAVOURITE LENSES

+ Add favourite...

— none yet —

FOCUS

56'10"

INV

BIND

S 1.0 C 1.5 D 0 F 0

IRIS

F/8.7

INV

BIND

S 1.0 C 1.5 D 0 F 0

ZOOM

72MM

INV

BIND

S 1.0 C 1.5 D 0 F 0

REXY GRIP

CRANE

DOLLY


DRONE

Crane Yaw

/rexy/craneYaw

+0.0°

live —



BIND

INV

RESET


S 1. C 1. D 0 F 0
MIN (*) -180 MAX (*) 180

Scope

/rexy/scope

5.50m

live —



BIND

INV

RESET


S 1. C 1. D 0 F 0
MIN (CM) 100 MAX (CM) 1000

Crane Pitch

/rexy/cranePitch

+0.0°

live —



BIND

INV

RESET

S 1. C 1. D 0 F 0
MIN (*) -45 MAX (*) 45

Core concepts (read this first)

Binding. Almost every control has a **Bind** button. Click it, then actuate the input you want — a wheel, a stick, a keyboard key, a MIDI knob, or an OSC/FreeD channel. For continuous controls, push it the way you want to be "positive" first; for keys/buttons it captures a two-stage *increase* then *decrease*. Right-click a Bind button to clear it.


Per-camera bindings. Every camera you select keeps its **own** set of bindings. Switch cameras and your inputs re-map to that camera's saved layout.

S / C / D / F tuning. Wherever you see these four little boxes, they shape how an input drives the value:

- **S — Sensitivity / Speed.** Multiplies how fast the control moves the value. Works for analogue *and* keyboard/button inputs (higher = faster).
- **C — Curve.** Response gamma. `1.0` = linear; higher = "fluid-head" feel (gentle at first, faster as you push); lower = punchy.
- **D — Deadband.** Ignores tiny inputs near centre — kills stick/wheel drift. (Not relevant to keyboard/button inputs.)
- **F — Feather.** Smooths the start and stop so motion eases in and out instead of snapping.

Inv / Hold / Reset. **Inv** flips a binding's direction. **Hold** (on wheels) freezes that axis so its binding is ignored. **Reset** returns the control to centre/default.

1. Top bar



- **Version badge** (`v3.3.0-beta`) — the running build. If it's missing or wrong after an update, press **Ctrl+Shift+R**.
 - **HARDWARE** dot — your gamepad/wheels. Wakes when you click the window and press a physical button.
 - **WS** dot — the internal app↔bridge link.
 - **UE RC** dot — the Unreal Remote Control connection.
 - **Units** — global metric (m/cm) vs imperial (ft/in) for distances and positions.
 - **Dark / Light** — switches the whole interface between the default dark theme and a pale blue-grey light theme. Your choice is remembered, and every accent colour stays the same in both.
 - **Check for updates** — manually checks the release server for a newer build; if one exists it downloads in the background and offers **Restart to update**. Nothing is ever checked automatically on launch.
 - **Font** — S / M / L text size for the whole interface; your choice is remembered.
-

2. Output mode & network

The **osc / ue** vs **freed** toggle chooses what REXY Bridge drives, and the network fields beneath it change to match.

- **osc / ue** (default) — drives Unreal directly via Remote Control. The fields show the UE/OSC target host and port.

A dark-themed UI panel for OSC / UE configuration. It contains five input fields: 'SCRIPT HOST' (127.0.0.1), 'WS PORT' (9000), 'UES HOST' (127.0.0.1), 'UES OSC PORT' (8000), and 'BASE PATH' (/rexxy). On the right, there is a 'CONFIG' section with 'EXPORT' and 'IMPORT' buttons.

- **freed** — broadcasts a **FreeD** camera-tracking stream on the network so any FreeD-compatible app can consume it (no UE writes). The fields switch to the FreeD stream host/port.

A dark-themed UI panel for Freed configuration. It contains six input fields: 'SCRIPT HOST' (127.0.0.1), 'WS PORT' (9000), 'FREED HOST' (127.0.0.1), 'FREED PORT' (40000), 'CAM ID' (1), and 'FPS' (30). On the right, there is a 'CONFIG' section with 'EXPORT' and 'IMPORT' buttons.

Your connection settings, along with every binding and tuning value, save and reload from the Config controls — export a `.json` to move a whole setup between machines.

3. Cameras — Scan & select


Before scanning, the camera row is empty and waiting.

A dark-themed UI panel titled 'ACTIVE CAMERA'. Below the title is a status message: '— none found · expose a property per camera —'. On the right, there are three buttons: 'APPLY BINDINGS TO ALL', 'SAVE BINDINGS', and 'SCAN UE'.


Click ▶ **Scan UE** to auto-discover every Cine Camera Actor and CameraRig_Crane in your open level — no REXYControl preset, no `mappings.json` editing. Actors are matched by **class**, so it finds them whatever you've named them in the Outliner. Review the result, then **Apply** for this session or **Apply + Save** to persist it.

A dark-themed UI panel titled 'AUTO-SCAN RESULT' with a subtitle 'method: actor-search (no preset needed)'. It displays a list of discovered cameras and cranes. Under 'Cameras (4)', there are four entries: 'CineCameraActor_6' (free (not on a crane)), 'CineCameraActor_3' (free (not on a crane)), 'CineCameraActor_1' (on CameraRig_Crane_1), and 'CineCameraActor_2' (on CameraRig_Crane_2). Under 'Cranes (2)', there are two entries: 'CameraRig_Crane_1' (grip rig) and 'CameraRig_Crane_2' (grip rig). At the bottom right, there are three buttons: 'APPLY (SESSION)', 'APPLY + SAVE', and 'CANCEL'.

Discovered cameras appear as buttons. Click one to make it the **active** camera; its bindings and profile load.


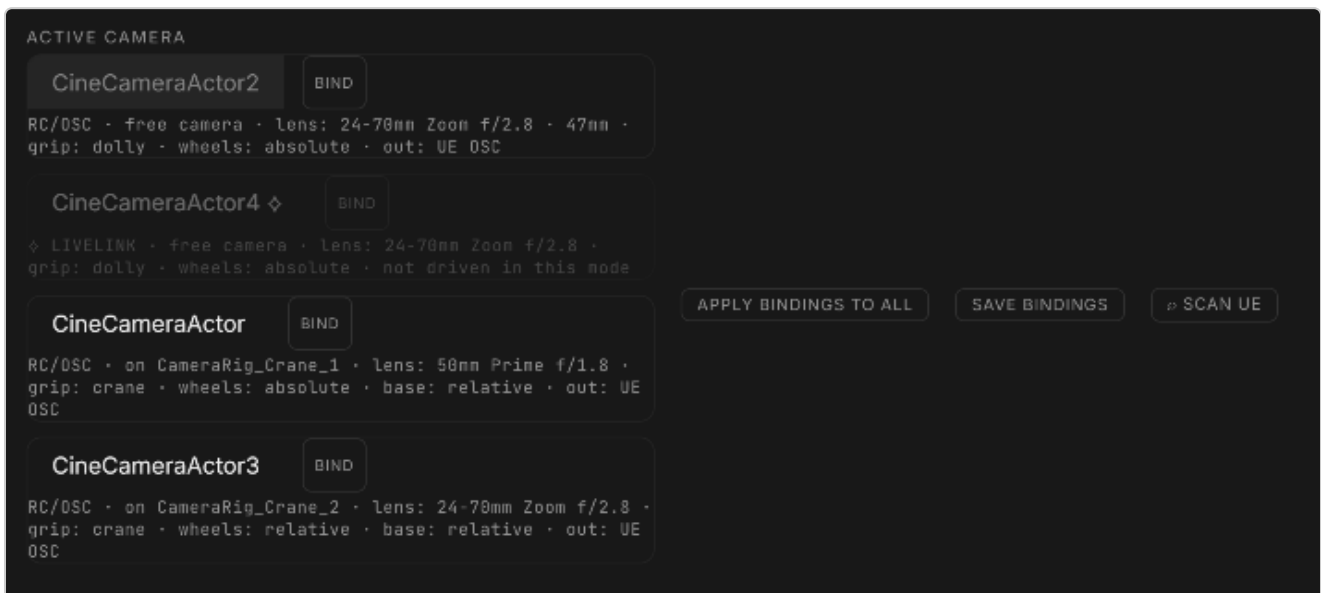


Each camera button can itself be **bound** to a key or gamepad button for hands-free switching mid-shot.

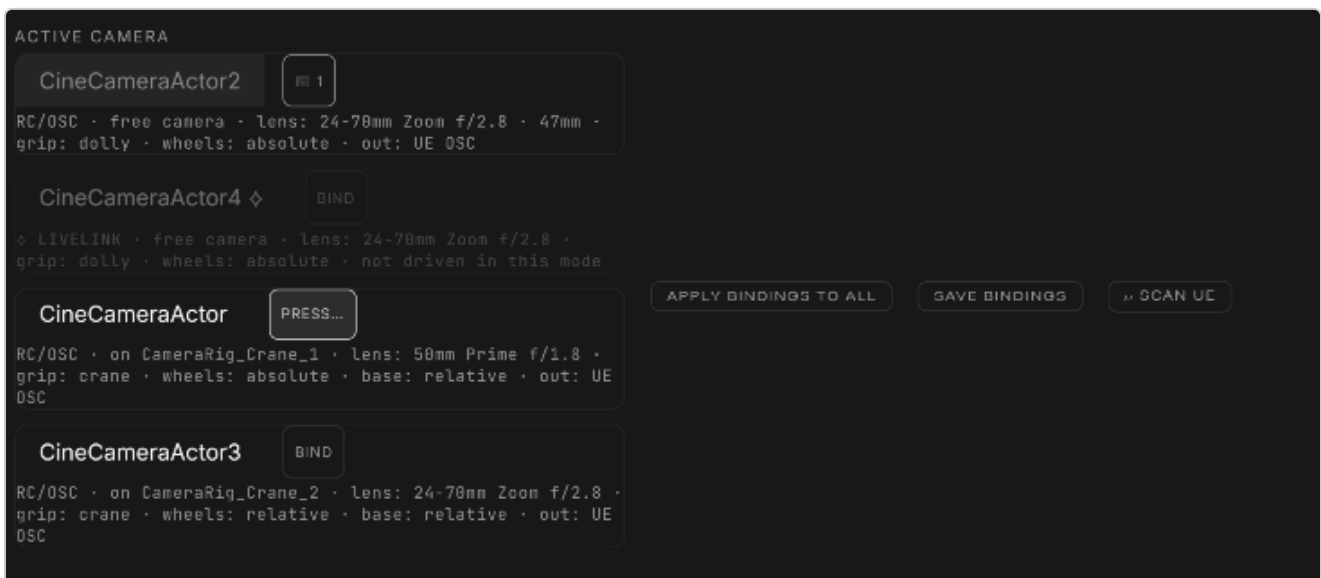

On UE 5.8 — allow remote function calls


UE 5.8 blocks remote function calls by default, so **Scan UE finds nothing** until you turn this on (one time, per project). In UE: **Project Settings** → **search "Allow Any Remote Function Call"** → **tick it on**.

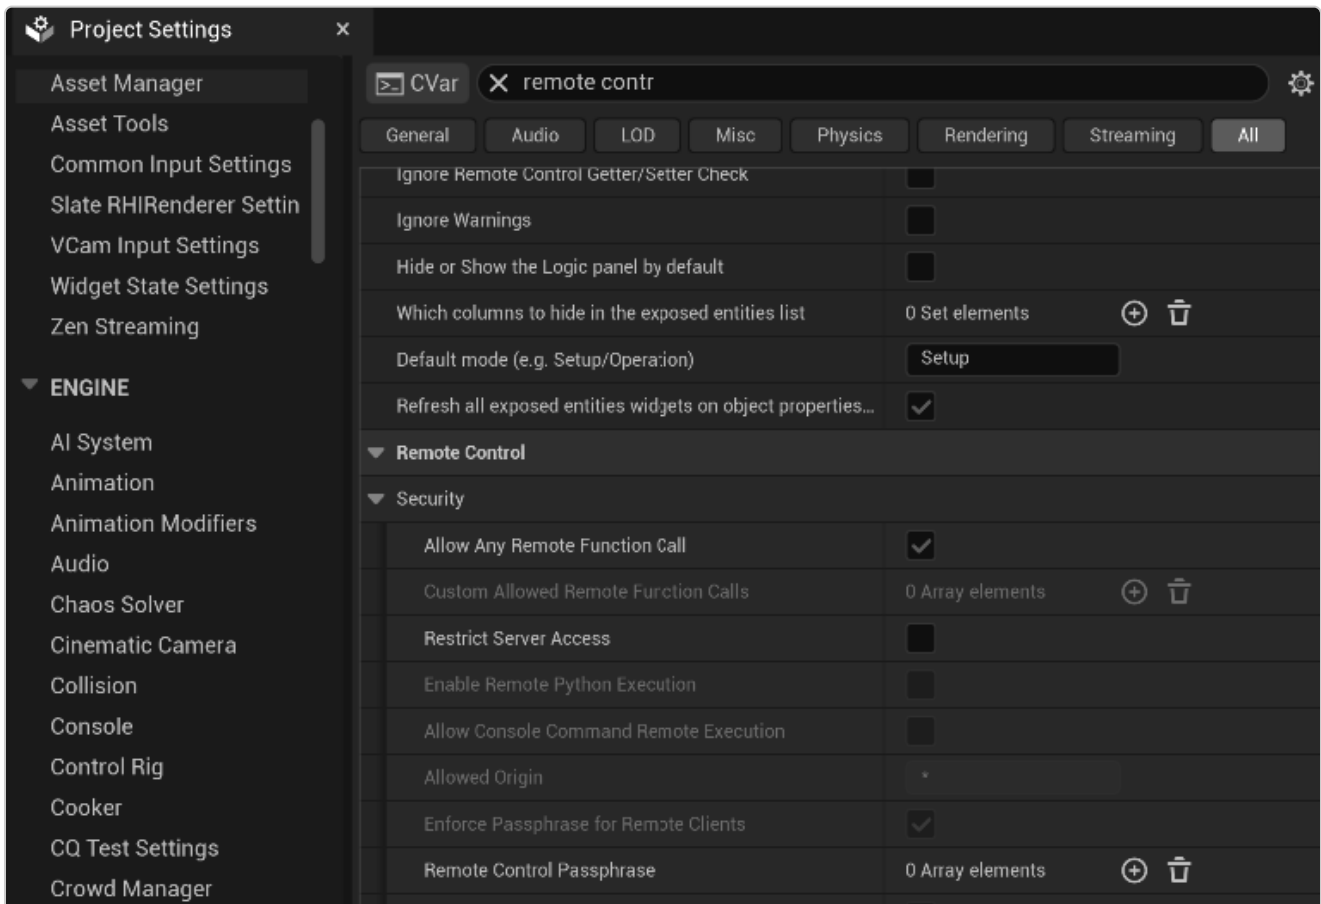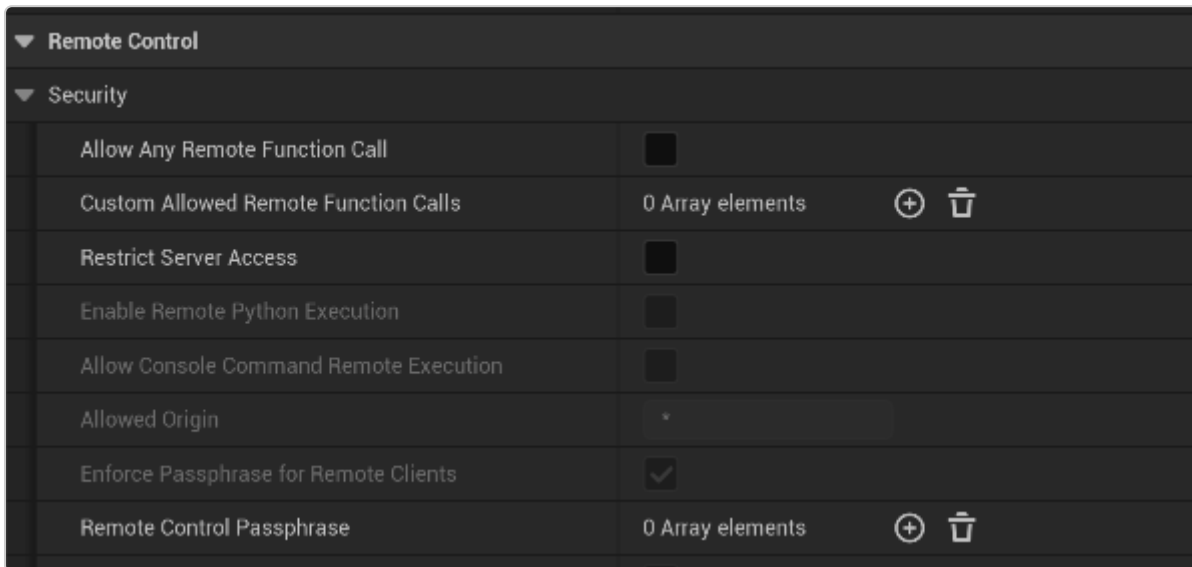


4. REXY WHEELS — camera head

The three head axes: **pan, tilt, roll**.


- **Absolute** — wheel position = camera angle.

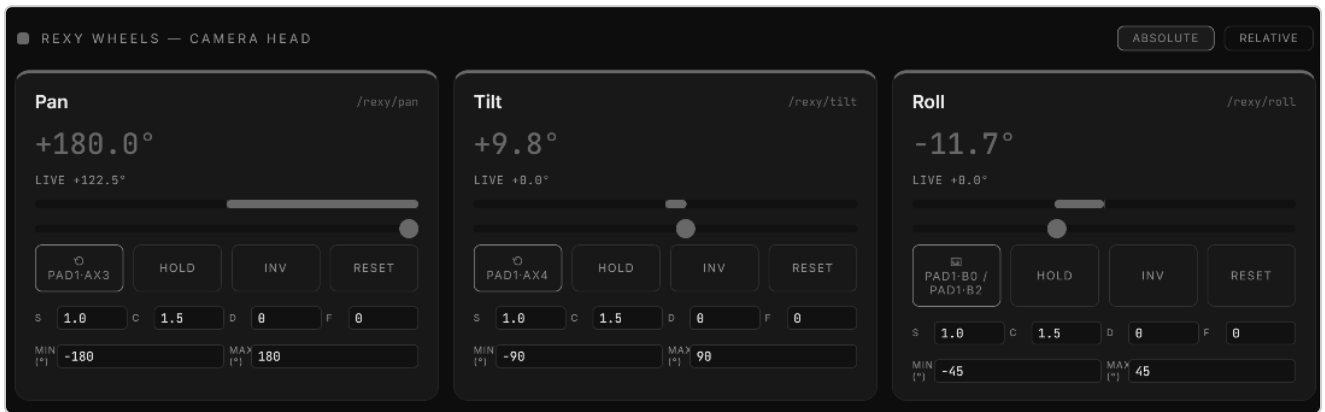

- **Relative** — wheel deflection = rotation *speed*, centre = hold (endless-rotation, fluid-head style).

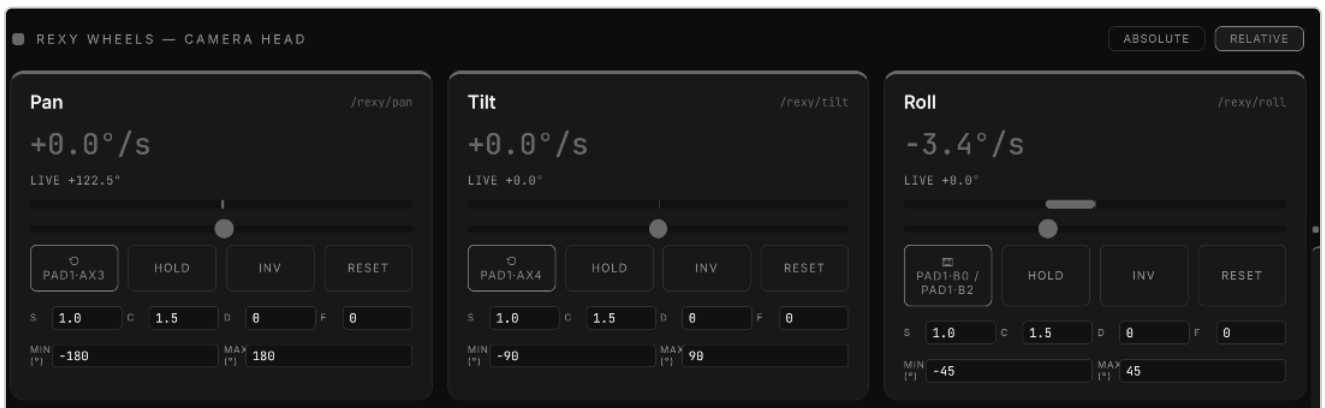


Each card has **Value** and **live** — readouts (commanded vs the camera's actual angle from UE), a **slider**, **Bind / Hold / Inv / Reset**, the **S / C / D / F** tuning row, and **Min / Max** to clamp the output range.

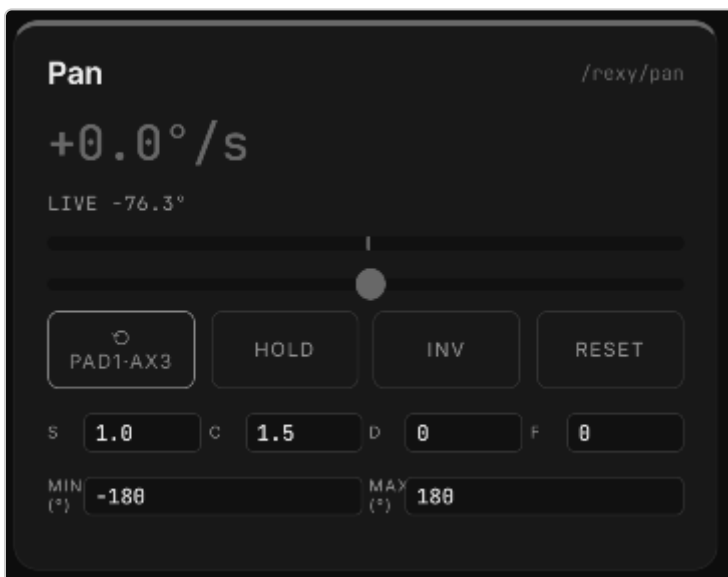


5. Functions

Bindable one-shot actions. Each card has a **Trigger** (fire it now) and a **Bind** (assign a key/button). Binding any copy of an action keeps every copy in sync.

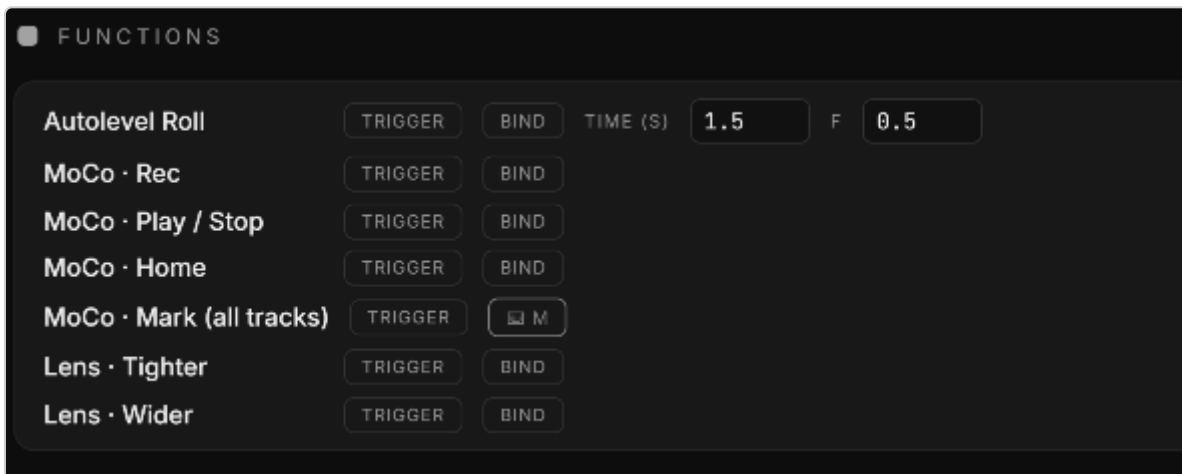

- **Autolevel Roll** — smoothly returns roll to 0° over **Time** seconds, with an **F** easing.
- **MoCo · Rec / Play / Stop / Home / Mark** — transport actions, bindable so you never reach for the mouse mid-take. **Mark** drops a mark on **every bound track** at the playhead.
- **Lens · Tighter / Wider** — step to the next longer/shorter lens in the active **lens box**.

6. REXY Focus — lens & body

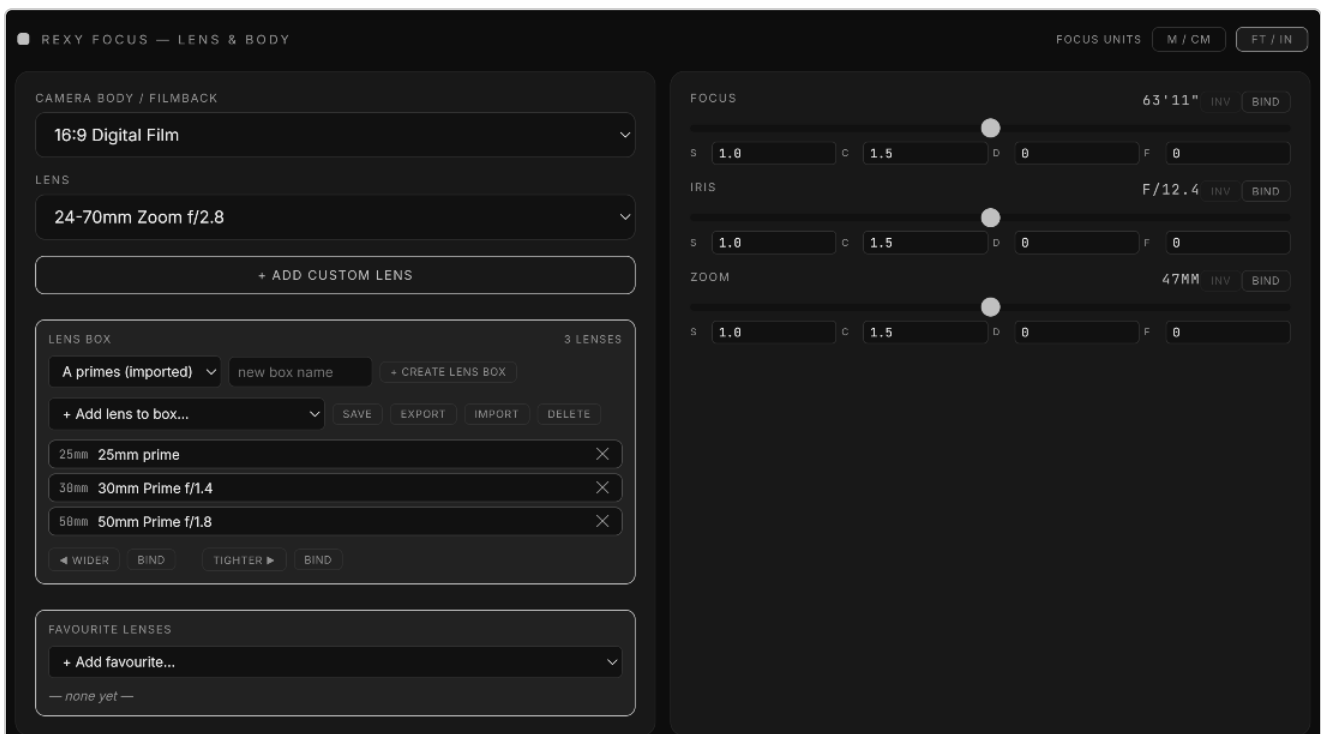


Lens & body

- **Camera body / filmback** — sensor/filmback preset.
- **Lens** — pick a lens; UE's LensSettings (focal, aperture, min-focus) update live.
- **+ Add custom lens** — define name, focal min/max, f-stop min/max, and **Min focus** (shown in cm or ft to match your Focus-units toggle). It's added to the list and applied.

Lens boxes

A **lens box** is a named kit — a list of lenses you cycle through on set.

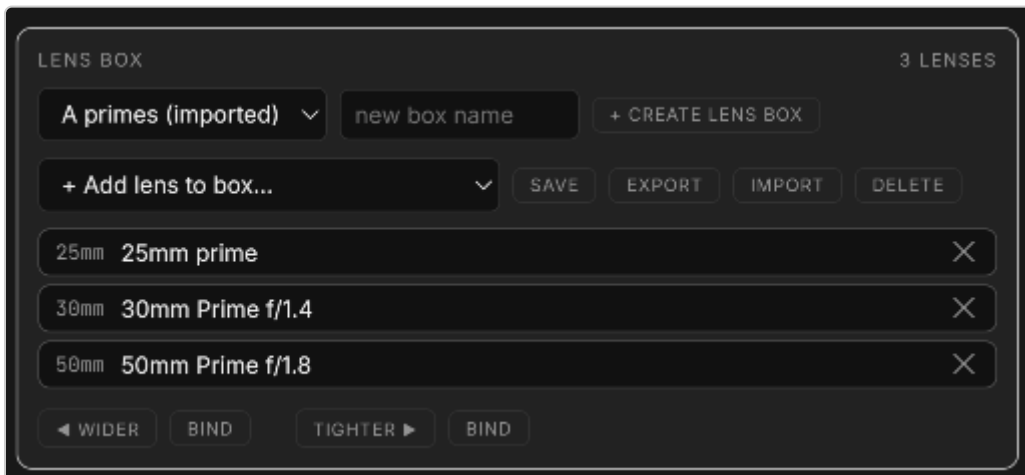

- **Box selector + Create lens box** — make and switch between kits.
- **Add lens to box** dropdown — add any existing lens, or **+ Custom lens...** to define a new one that drops straight into the box.
- **Lens chips** — the box's lenses, always sorted by focal length; the active lens is highlighted. × removes one.
- **◀ Wider / Tighter ▶** — step through the box by focal length (clamped at the ends). Each has a **Bind** for hardware control.
- **Save / Export / Import / Delete** — boxes export and import independently of the main config, so you can share a kit.

Favourite lenses




A global quick-jump list. Add any lens, then **Bind** a key/button to jump straight to it — independent of which box is loaded.

Focus / Iris / Zoom



Each has a slider, **Bind**, **Inv**, a live readout, and the full **S / C / D / F** tuning row — so a focus puller can bind a wheel or keys and tune the feel exactly like the head axes. Zoom locks automatically on a prime lens.

7. Grip — crane / dolly / drone

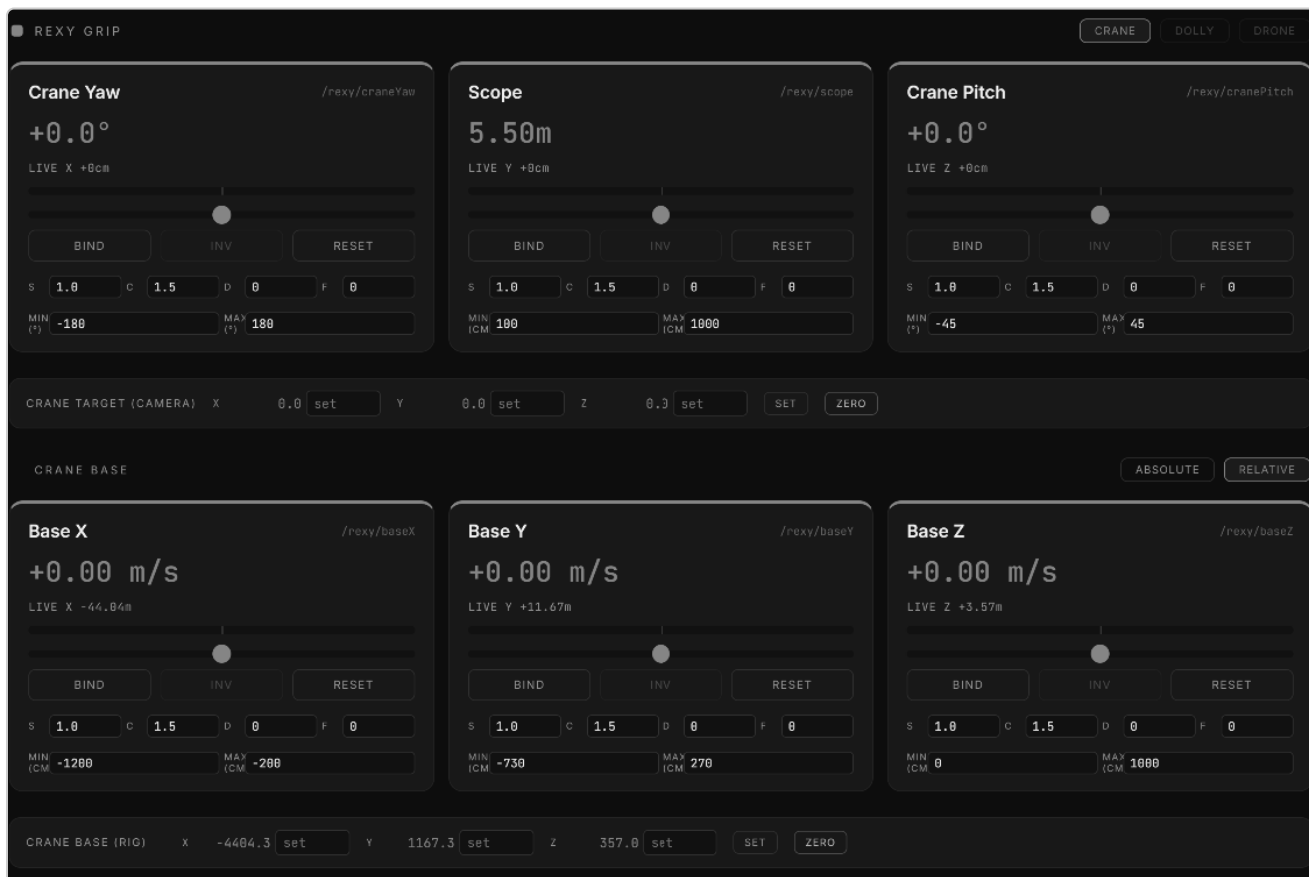

- **Crane** — the grip swings a jib arm around its base (yaw, pitch, scope/arm-length).
- **Dolly** — straight ground translation (X/Y/Z), no arm pivot.

- **Drone** — free flight through 3D space.

In **Drone** mode a **flight-frame** selector appears next to the mode buttons, with three options:

- **Cine** — flies on the world grid; you aim the camera independently with the wheels. Left/right, forward/back and up/down all follow the world axes, exactly like Dolly.
- **Cine/FPV** — left/right and forward/back follow **where the camera is panned**, but stay **parallel to the ground** regardless of tilt or roll; up/down is always a **true vertical** jib. So with the camera tilted 45° down, forward still travels flat in the pan direction, and a rolled camera still tracks level left/right. This is the natural "operator flying a level drone while framing freely" feel.
- **FPV** — everything is relative to the camera body: left/right, forward/back **and** up/down all follow the lens, so up/down rides the roll/tilt. True first-person-drone flight.

☞ **Reset grid** (next to the frame buttons) re-snaps the Cine/FPV ground grid to the camera's current pan heading. In absolute-pan mode the grid follows the pan wheel live; use Reset if it ever drifts out of sync (e.g. after operating in continuous-wheel mode).


Hide Crane (in the Crane Base header, and as a bindable card in the Functions panel) vanishes the crane rig from both the render and the editor viewport, so the arm never appears in shot — press again to bring it back.

The grip cards (craneYaw, scope, cranePitch) use the same binding + S/C/D/F model as the wheels. When **Limits** is unticked, the per-axis Min/Max fields grey out and movement runs unclamped.


Crane Base

The base (baseX/Y/Z) drives the rig's pivot, with two modes:

- **Absolute** — slider position = base position between Min and Max.

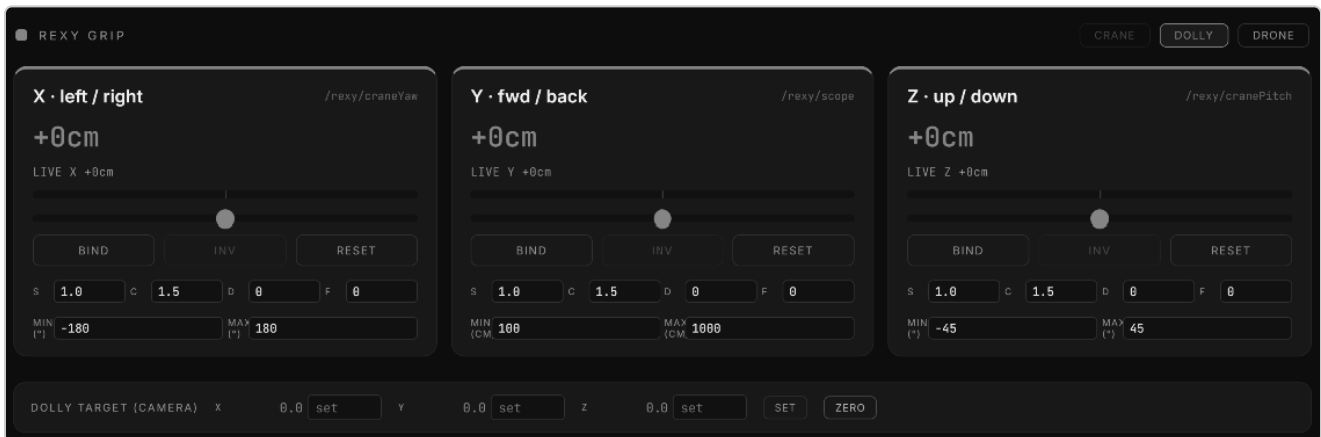


- **Relative** — slider deviation = movement speed (m/s); centre = stop.

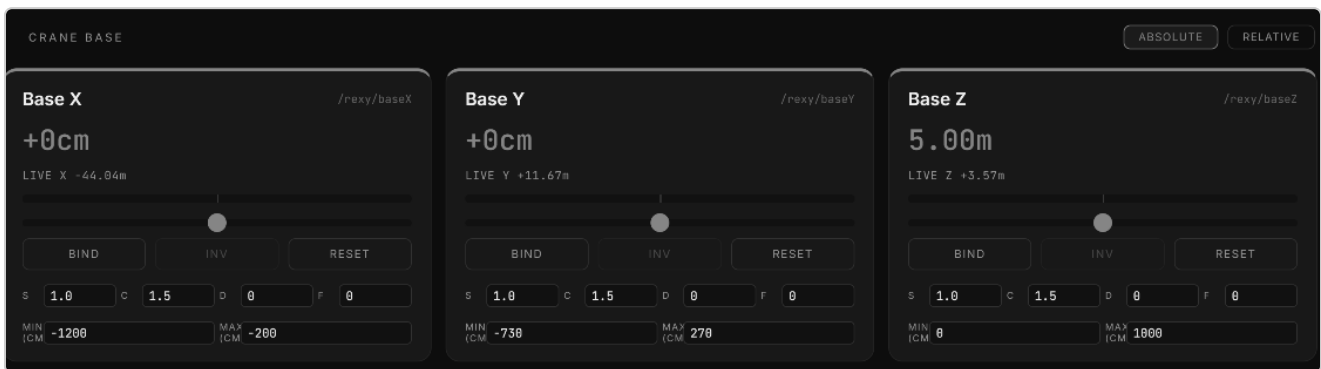


8. Position panels

Live **X / Y / Z** readouts, with **Set** (send a manual position; blank axes keep their current value) and **Zero** (reset to 0,0,0).

- **Crane target** — where the camera/target sits.




- **Crane base** — where the rig base sits.

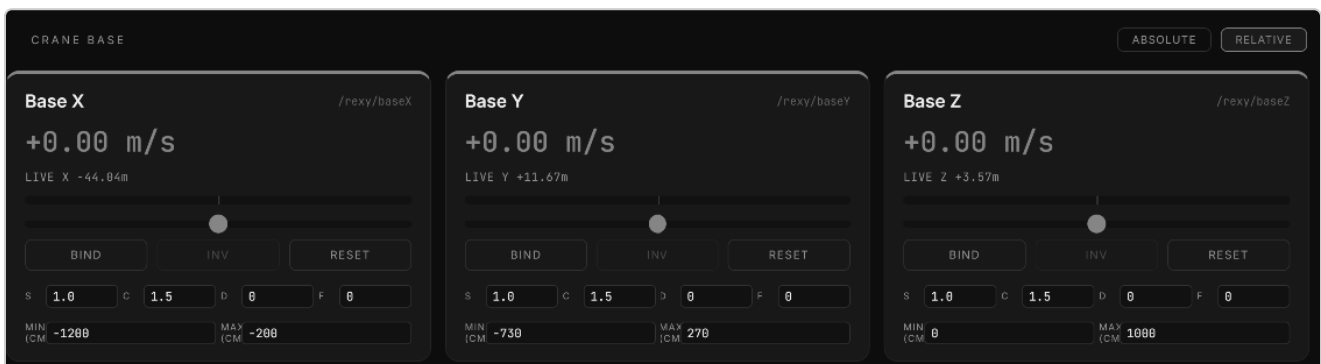


9. Virtual MoCo

Record, edit, and play back moves across every bound parameter.

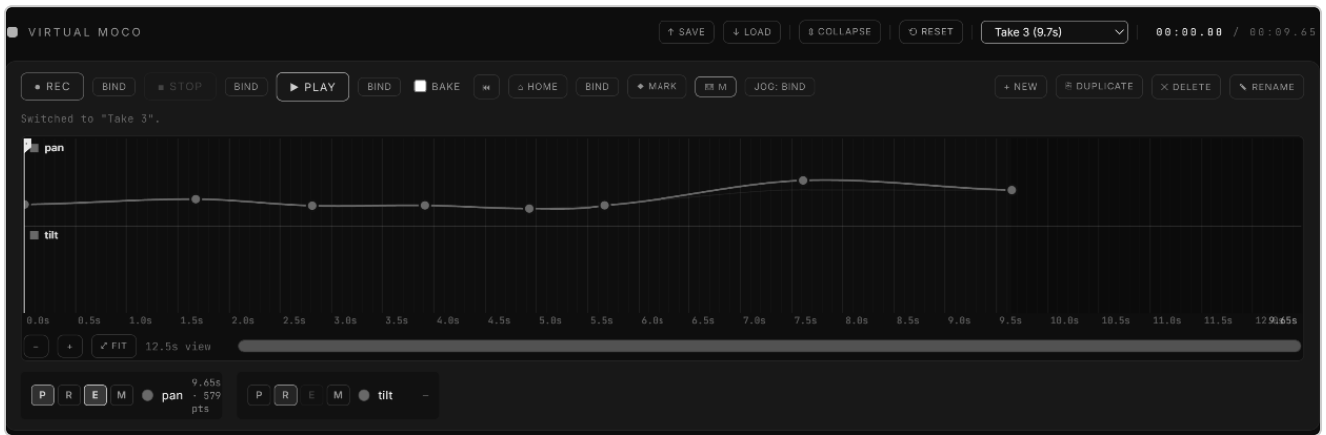


Transport




- **REC** / ■ **STOP** / ► **PLAY** — each with a **Bind** button. STOP leaves the playhead where it is; **Home** (or Rewind) returns it to the start.
- **Bake** — a 3-2-1 countdown on REC/PLAY so you can sync with UE's Take Recorder.
- △ **HOME** — snaps play-armed tracks to their start values and the playhead to 0.
- ◆ **MARK** — drops a mark on every bound track at the playhead.
- **Jog: Bind** — bind an analogue wheel/axis (or keys) to **shuttle** the playhead: push from centre to scrub forward/back, speed proportional to deflection, centre = hold.

Takes

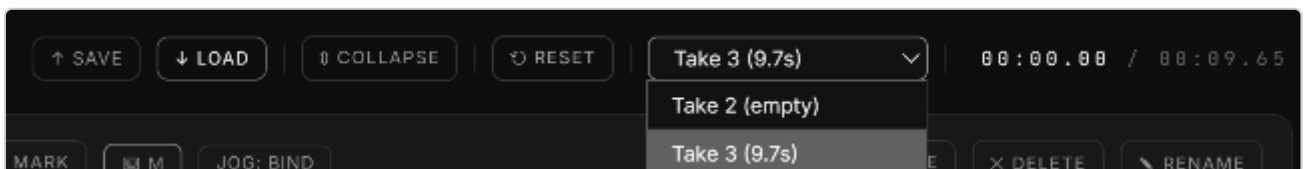

Multi-take management. Save/Load moves as `.rxmove` files. **Expand** stacks each track in its own lane; **Reset** clears everything.


Timeline & tracks

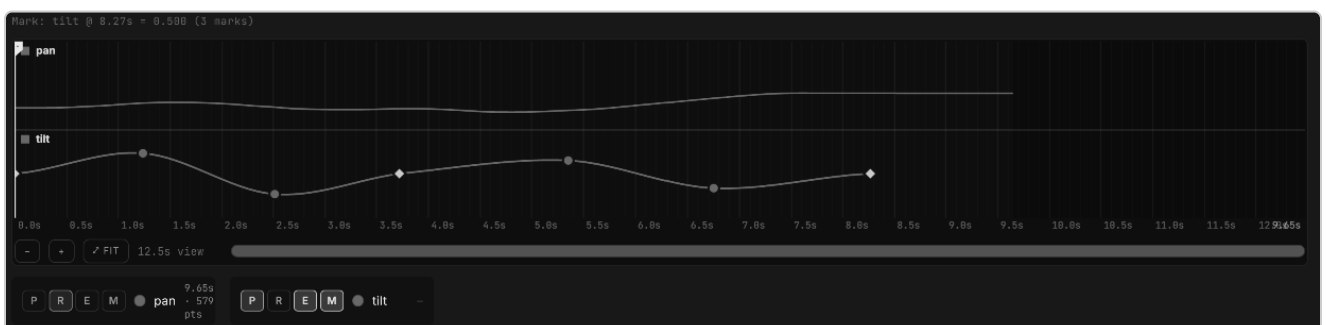


Colour-coded per track. Scrub by dragging the playhead, zoom with the scroll wheel, and drag anchor dots to reshape curves. Each track (left of the timeline) has four arm toggles:

- **P — Play** — plays back its recorded/marked data.
- **R — Record** — captures live input on the next REC (recording over a track auto-erases its marks).
- **E — Edit** — drag anchor dots to reshape. Available once a track has recorded data **or 2+ marks** — entering E on a marked-but-unrecorded track lays down draggable anchors that smooth the marks into **S-curves**.
- **M — Mark** — drops a fixed point at the playhead; the curve always passes through marks. Placing a mark auto-adds a start mark at t=0 so the move has a defined beginning.


10. Gamepad Debug & calibration




- **Show / Hide** — toggles the live view of every axis and button on connected controllers.
- **Null Drift (5s)** — samples all axes for 5 seconds and stores the average as zero, nulling resting drift. **Clear Cal** removes it.

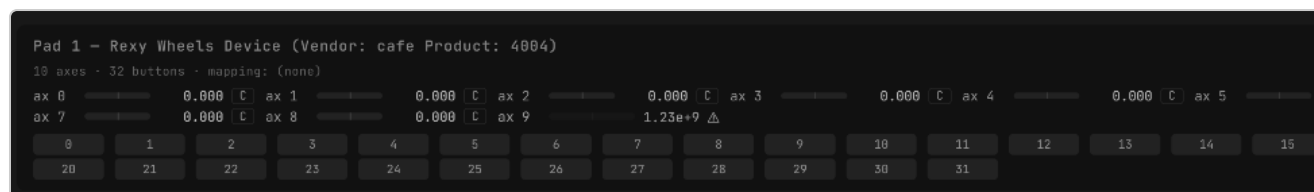

The per-axis **"C"** button opens the calibration wizard. Steps 1–3 capture the axis **max**, **min**, and **rest** so uneven hardware maps to a clean $-1...+1$. On the live bar the **blue** marker is the captured max and the **pink** marker is the captured min.

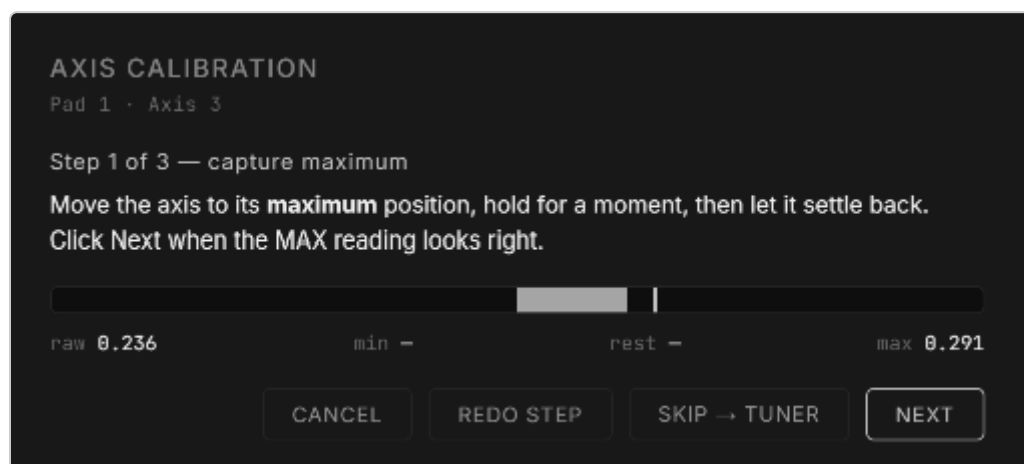

The **Tune response** step shapes the feel, with a live waveform and curve preview. **Skip** jumps straight to the tuner; **Redo step** re-captures the current step.

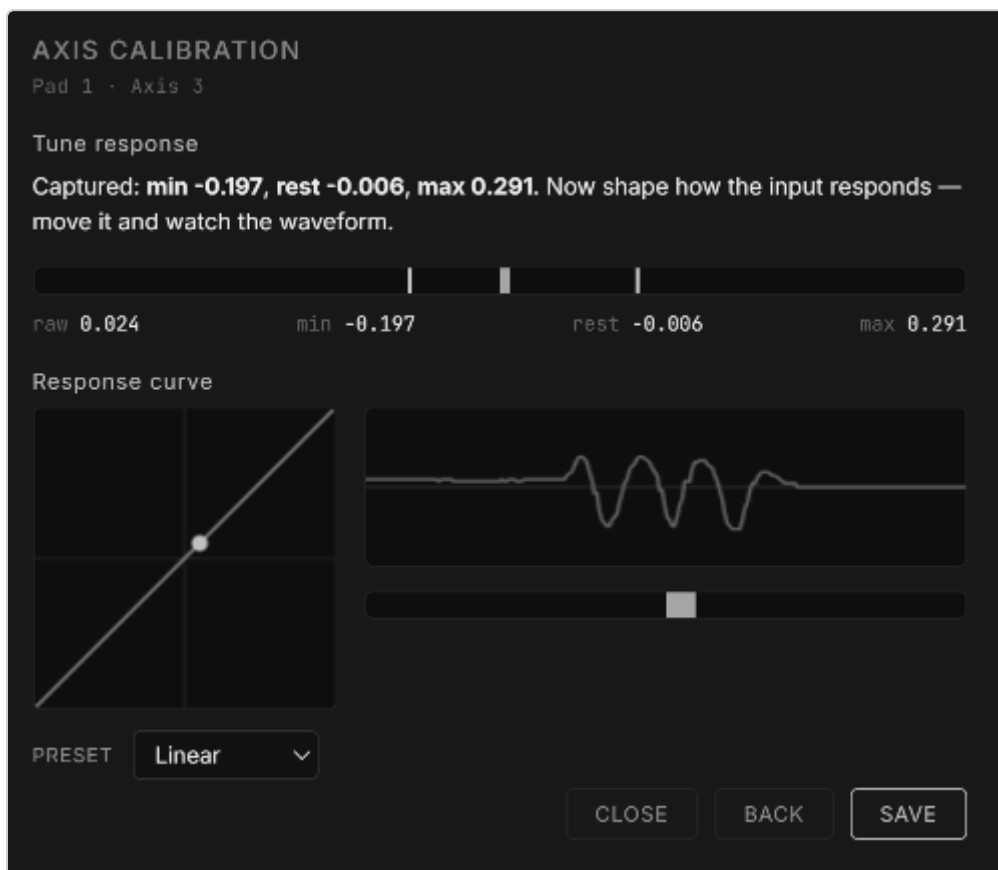


Tune response

Pick a **preset** — **Linear** (a straight 1:1 response)...




...or **Relaxed** / **Aggressive**, or drag the curve to a custom shape. Gentle-at-centre curves give fine control near rest; steeper ends give quicker throws.

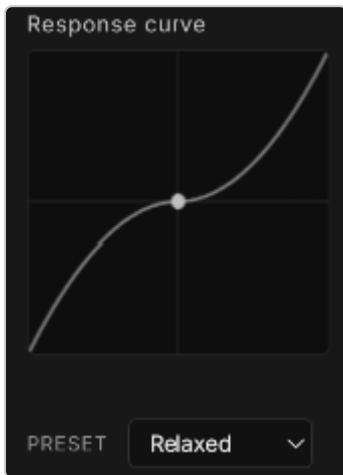

Signal Filter Lab

Rough or noisy inputs — like a load-cell Grip — can be cleaned up here, live, without touching the device firmware. **Capture** records a few seconds of the axis: the **pink** line is the raw signal, the **cyan** line is the filtered result.

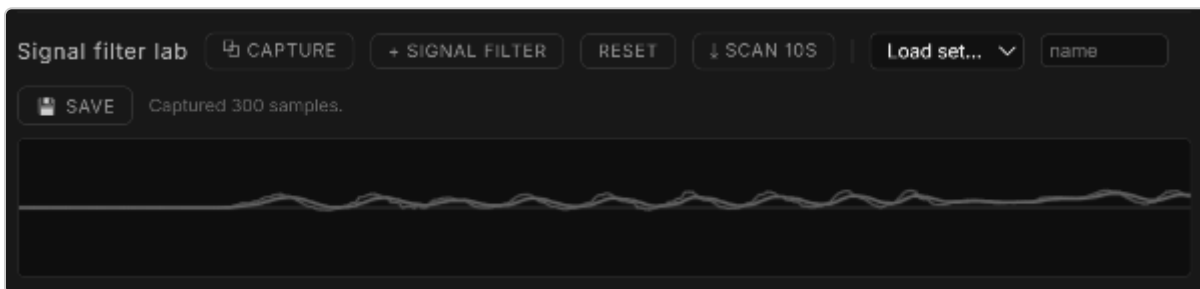

+ **Signal filter** opens a 3×3 grid of the nine filters — Median, Moving average, EMA low-pass, Double-EMA, Kalman, 1-Euro, Hampel, Deadband and Slew limit — each previewing its effect on your captured signal, with editable parameters. + **Add** appends a filter to the live chain, so several can stack in order and the combined result drives UE in real time.



The ⓘ icon on each filter explains what it does and what every parameter changes, so you can tune by feel rather than guesswork.

More info

Sorts a window of recent samples and takes the middle one. A lone spike can never be the median of its neighbours, so it is discarded outright, while a real edge passes through almost untouched. The best tool for saw and spikes with near-zero lag.

win - How many samples in the window (odd numbers).
Bigger = smoother, but a longer settle after a sharp reversal.

Save stores the current chain as a named **filter set** you can **Load** onto any axis or share between machines. **Scan 10s** records raw + filtered + output to a JSON log with a noise-reduction figure, for before/after comparisons.

11. Other inputs — OSC, MIDI, FreeD




- **OSC in** — accept OSC from external devices (e.g. the Remy Wheels). Set **port**, an optional **prefix** filter, and the input **min/max** range. **Sample 10s** records every OSC message for ten seconds and exports a JSON log — the ground-truth capture for diagnosing a device.
- **MIDI** — **Enable MIDI** reads MIDI controls (knobs, faders, notes, pitch-bend) into the same input path as gamepads, so they bind the same way.
- **FreeD in** — accept an incoming FreeD tracking stream.

All three feed the same binding system: enable the source, then **Bind** any control to it.



12. OSC output log

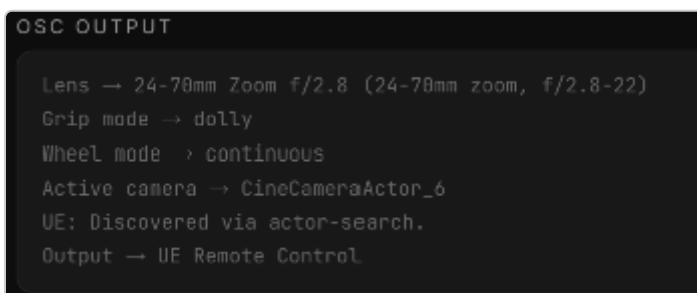

A live feed of what the bridge is sending and status messages — handy for confirming a control is reaching UE and for spotting warnings.

13. Remote viewing — phone, tablet, or a second laptop

The REXY Bridge window you see on the PC is not the bridge itself — it's just a web control panel talking to the bridge over the network. That means **any device on the same Wi-Fi/LAN can open the exact same panel in a browser** and drive the same cameras, no install required. Think of it as a wireless director's monitor / second operator station.

How to open it on another device

1. On the PC running REXY Bridge, find its local IP address. Open a Command Prompt and type `ipconfig` — use the **IPv4 Address** (something like `192.168.1.42`).
2. On the phone/tablet/laptop — connected to the **same network** — open a browser and go to:

`http://192.168.1.42:9000` (swap in your PC's IP)

1. The full control panel loads. It's live and **in sync**: a mode change, a slider, or a binding made on one device shows on all of them, because every panel is a client of the one bridge.

Good to know

- The bridge serves on **port 9000** to the whole LAN, so no extra setup is needed — just the IP and that port.
 - Physical **wheels / gamepads / MIDI** are read by whichever device they're plugged into. A tablet with no controller is perfect as a **touch surface** (sliders, mode buttons, focus, takes) or a monitoring view, while the PC handles the hardware wheels.
 - If the page won't load: both devices must be on the **same network** (not guest Wi-Fi / not a VPN), and a PC firewall prompt for REXY Bridge must be **allowed** the first time.
 - It's the same panel, so everything in this guide applies identically on the remote device.
-

14. Rendering your move out of Unreal

The editor viewport is not what your final render looks like. The viewport runs in real time at a variable frame rate with little or no motion blur, so camera moves can look steppy or strobe against high-contrast detail — bright lights, foreground objects. A proper render is done offline, one frame at a time, and looks considerably smoother. Judge your move from a render, not the viewport.

Capturing the move

REXY Bridge drives the camera live, so first bake that motion into a Level Sequence:

1. **Window → Cinematics → Take Recorder**, add your Cine Camera Actor (and crane) as sources.
2. Press **Record**, perform or play back the move, then stop.

Take Recorder produces a **master sequence** plus a `_Subscenes` folder holding one sequence per recorded actor:

```
Scene_1_17                                <- the master: render THIS
Scene_1_17_Subscenes/
  CineCameraActor2_Scene_1_17
  CameraRig_Crane_Scene_1_17
```

⚠ Render the **master**, not a subscene. A subscene holds one actor's animation with no camera and no Camera Cuts track — the render will report "**no shot**" and render from the wrong viewpoint.

Open the master in Sequencer and confirm it has a **Camera Cuts** track pointing at your Cine Camera Actor (scrubbing should show the camera's view). If it's missing: **+ Track → Camera Cut Track**, then **+ Camera** → your camera, and save.

Rendering — the setting that matters

Window → Cinematics → Movie Render Queue → + Render, pick the master sequence, then click the config link:

Setting	Suggested	Why
Temporal Sample Count	8	The important one. Accumulates 8 samples per output frame to produce real motion blur. This is what smooths small steps in camera motion — at 1 you get none.
Spatial Sample Count	1	Anti-aliasing within a frame; doesn't affect motion.
Output Resolution	1280×720 for tests	Keeps memory use and render time sane.
Output Type	JPG Sequence	Small and dependency-free. EXR is huge; MP4/ProRes need an encoder configured.
Custom Start/End Frame	~120 frames	4 seconds is plenty to judge smoothness.

Raise resolution and sample count for a final render; keep them low while testing.

If a render crashes, it's almost always memory — MRQ holds every temporal sample of a frame at full resolution at once. Drop the resolution first, then Temporal Samples to 4, and close other applications (including any second Unreal instance).

If Take Recorder stops with "Timecode rolled over"

Unreal generates timecode from your PC's clock by default. Those wall-clock values become very large frame numbers, which can overflow while a take is being finalised — reported as a rollover.

Fix: *Project Settings → Engine → General Settings → Timecode* → untick **Generate Default Timecode**, leave **Timecode Provider** empty, and restart the editor. Unless you're syncing to external gear, you don't need engine timecode at all.

A note on input smoothness

Motion blur hides a lot, but it can't invent detail that was never sampled. If a move still looks stepped in a render, check the input itself — the **Signal Filter Lab** (section 10) shows the raw device signal, and the tune-scan export records its true resolution and update rate. A low-resolution or slow-reporting control will quantise the move before REXY Bridge ever sees it, and no amount of filtering fully recovers it.

Questions or bug reports: rob@realprogear.com