

WINCH WINCH UNIT COMPONENTS

## **ILLUSTRATION**

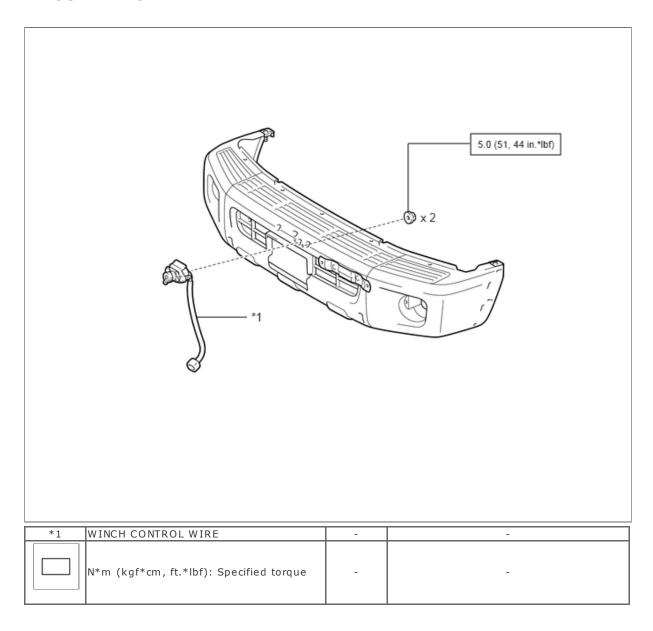


## **ILLUSTRATION**

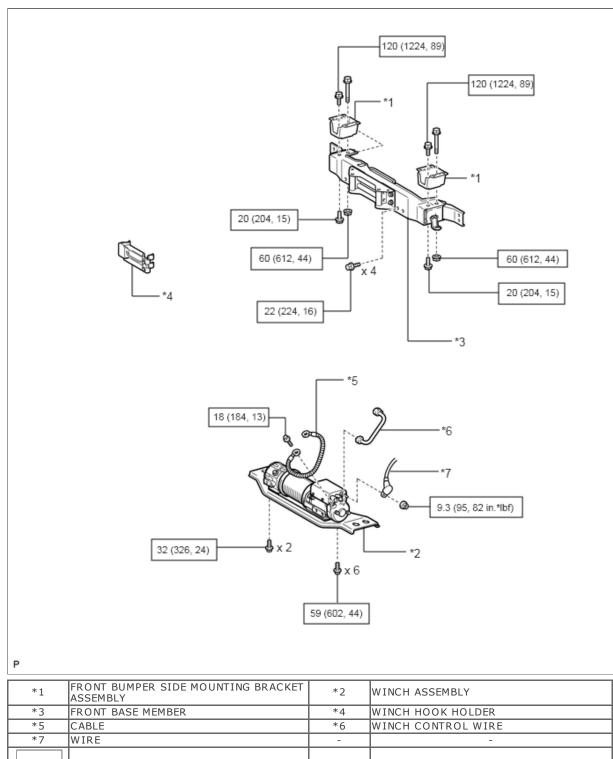

*1	FRONT BUMPER SIDE MOUNTING BRACKET ASSEMBLY	*2	WINCH ASSEMBLY
*3	FRONT BASE MEMBER	*4	WINCH HOOK HOLDER
*5	CABLE	*6	WINCH CONTROL WIRE
*7	WIRE	-	-
	N*m (kgf*cm, ft.*lbf): Specified torque	-	-

## **ILLUSTRATION**

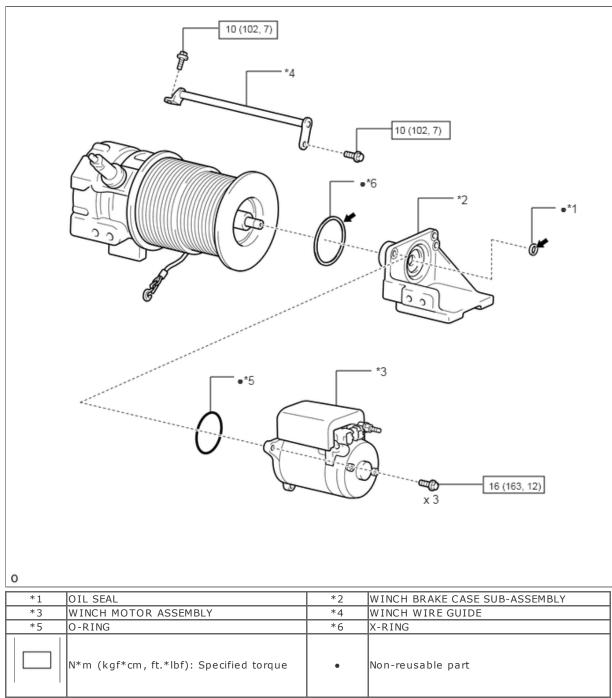

*1	OIL SEAL	*2	WINCH BRAKE CASE SUB-ASSEMBLY
*3	WINCH MOTOR ASSEMBLY	*4	WINCH WIRE GUIDE
*5	O-RING	*6	X-RING
	N*m (kgf*cm, ft.*lbf): Specified torque	•	Non-reusable part
<b>→</b>	MP Grease	-	-

## **ILLUSTRATION**

