
ILLUSTRATION

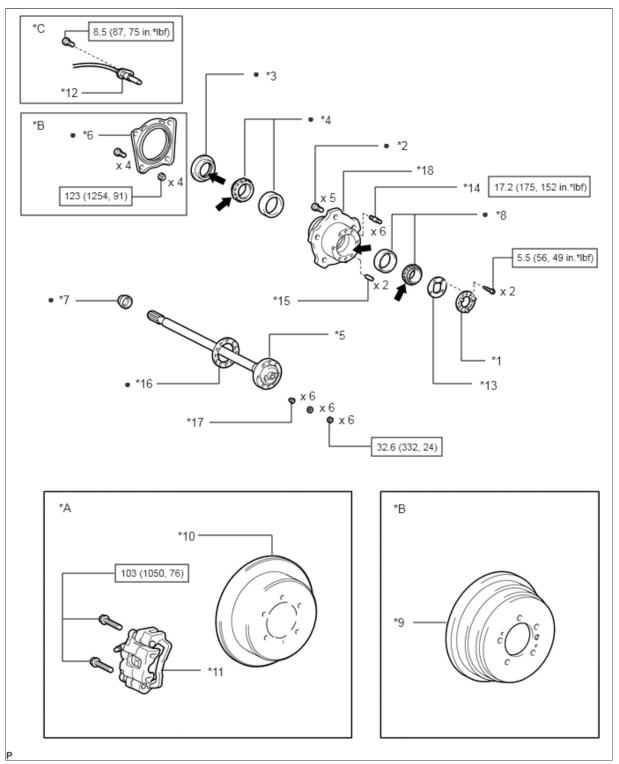

| *A | for Disc Type | *B | for Drum Type |
|-----|--------------------------------------|-----|-------------------------------------|
| *C | w/ ABS | - | - |
| *1 | REAR AXLE BEARING LOCK NUT | *2 | REAR AXLE HUB BOLT LH |
| *3 | REAR AXLE HUB OIL SEAL LH | *4 | REAR AXLE SHAFT INNER BEARING LH |
| *5 | REAR AXLE SHAFT LH | *6 | REAR AXLE SHAFT OIL SEAL |
| *7 | REAR AXLE SHAFT OIL SEAL LH | *8 | REAR AXLE SHAFT OUTER BEARING LH |
| *9 | REAR BRAKE DRUM SUB-ASSEMBLY | *10 | REAR DISC |
| *11 | REAR DISC BRAKE CYLINDER ASSEMBLY LH | *12 | |
| *13 | REAR AXLE LOCK NUT PLATE LH | *14 | REAR AXLE HUB STUD BOLT |
| *15 | REAR AXLE HUB STRAIGHT PIN | *16 | REAR AXLE SHAFT OUTER FLANGE GASKET |

| *17 | REAR AXLE SHAFT CONE WASHER LH | *18 | REAR AXLE HUB LH |
|----------|---|-----|-------------------|
| | N*m (kgf*cm, ft.*lbf): Specified torque | • | Non-reusable part |
| → | MP grease | - | - |

© 2012 TOYOTA MOTOR CORPORATION. All Rights Reserved.