
CLUTCH CLUTCH MASTER CYLINDER(for LHD) COMPONENTS

ILLUSTRATION

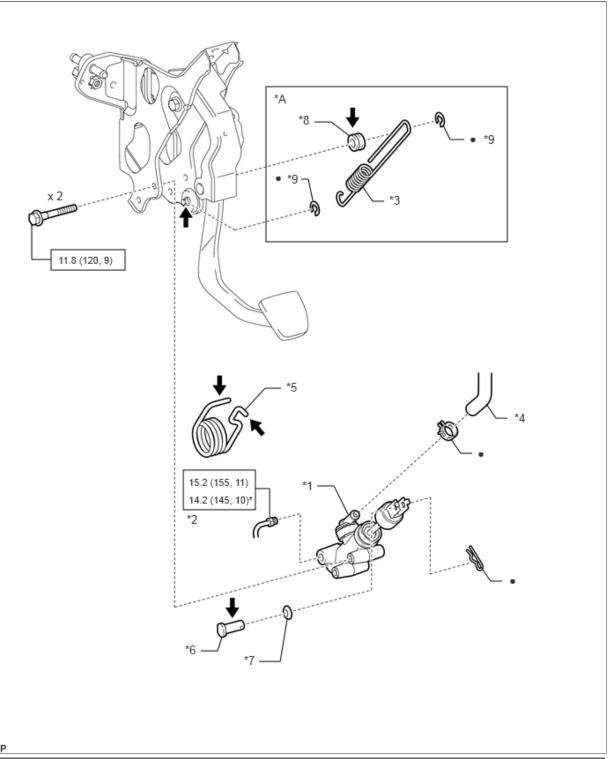

*A	for 1GR-FE	-	-
*1	CLUTCH MASTER CYLINDER ASSEMBLY	*2	CLUTCH MASTER CYLINDER TO 2 WAY TUBE
*3	CLUTCH PEDAL SPRING	*4	CLUTCH RESERVOIR TUBE
*5	TURN OVER SPRING SEAT COMPRESSION SPRING	*6	CLUTCH MASTER CYLINDER PUSH ROD CLEVIS PIN
*7	WAVE WASHER	*8	SPACER
*9	E-RING	-	-
	N*m (kgf*cm, ft.*lbf): Specified torque	*	For use with union nut wrench

•	Non-reusable part	→	MP grease

© 2012 TOYOTA MOTOR CORPORATION. All Rights Reserved.