AUDIO / VIDEO RADIO ANTENNA INSTALLATION

# **CAUTION / NOTICE / HINT**

### HINT:


- · Use the same procedure for LHD and RHD vehicles.
- · The procedures listed below are for LHD vehicles.

## **PROCEDURE**

**■** 1.INSTALL ANTENNA MOTOR CONTROL RELAY

85914A



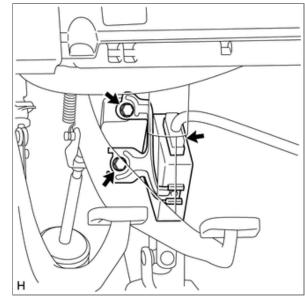


Install the antenna motor control relay with the 2 bolts.

**b.** Connect the connector.



86300




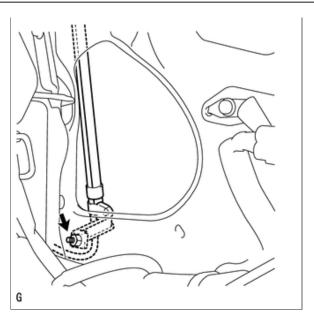

Pass the antenna assembly through the engine room hole and install the antenna assembly to the engine room side as shown in the illustration.

Install the nut.



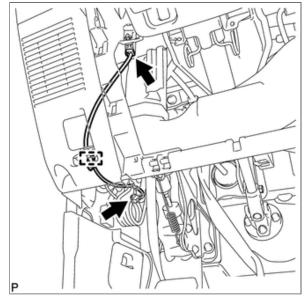


Install the grommet and attach the antenna assembly to the clamp.

Connect the connector.

**■** 3.INSTALL ANTENNA ASSEMBLY (for Auto Type Antenna)

86300


a.

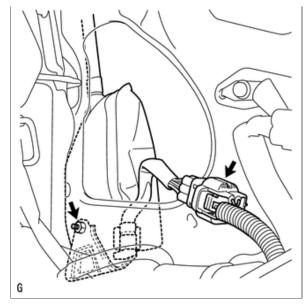

Pass the antenna assembly through the engine room hole and install the antenna assembly to the engine room side as shown in the illustration.

- Install the nut.
- Connect the connector.

d.

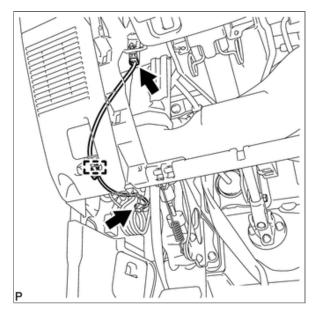

Install the grommet and attach the antenna assembly to the clamp.

e. Connect the connector.

# 4.INSTALL GLOVE COMPARTMENT DOOR ASSEMBLY (for Passenger Side) 55550 Click hereVehicle Interior>INTERIOR PANELS / TRIM>INSTRUMENT PANEL SAFETY PAD>INSTALLATION 5.INSTALL LOWER INSTRUMENT PANEL FINISH PANEL ASSEMBLY (for Driver Side) 55480D

Click hereVehicle Interior>INTERIOR PANELS / TRIM>INSTRUMENT PANEL SAFETY PAD>INSTALLATION

6.INSTALL ANTENNA ORNAMENT


86392

a. 6

Install the antenna ornament as shown in the illustration.

7.INSTALL ANTENNA NUT 86396



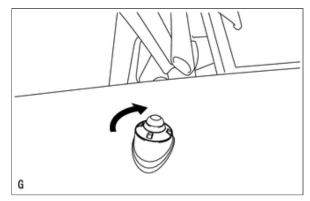

Install the antenna nut as shown in the illustration.

**■** 8.CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

© 2012 TOYOTA MOTOR CORPORATION. All Rights Reserved.