Print Exit

1GR-FE FUEL FUEL PRESSURE PULSATION DAMPER REMOVAL

## **PROCEDURE**

1. DISCHARGE FUEL SYSTEM PRESSURE

Click hereEngine / Hybrid System>1GR-FE FUEL>FUEL SYSTEM>PRECAUTION

**2. PRECAUTION** 

## **NOTICE:**


After turning the ignition switch off, watching time may be required before disconnecting the cable from the battery teminal. Therefore, make sure to read the disconnecting the cable from the battery terminal notice before proceeding with work.

Click hereGeneral>INTRODUCTION>REPAIR INSTRUCTION>PRECAUTION

3.DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

4.REMOVE FUEL PRESSURE PULSATION DAMPER ASSEMBLY

23270

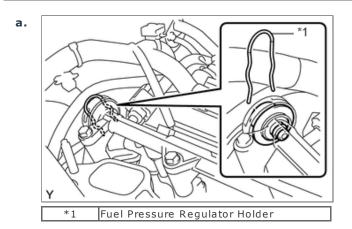

 $\label{lem:lemove} \mbox{Remove the fuel pressure regulator holder from the fuel pressure pulsation damper assembly.}$ 

- **b.** Pull the fuel pressure pulsation damper assembly out of the fuel delivery pipe sub-assembly.
- **c.** Remove the O-ring from the fuel pressure pulsation damper assembly.

 $\ @$  2012 TOYOTA MOTOR CORPORATION. All Rights Reserved.