

DRIVE SHAFT / PROPELLER SHAFT PROPELLER SHAFT ASSEMBLY COMPONENTS

## **ILLUSTRATION**

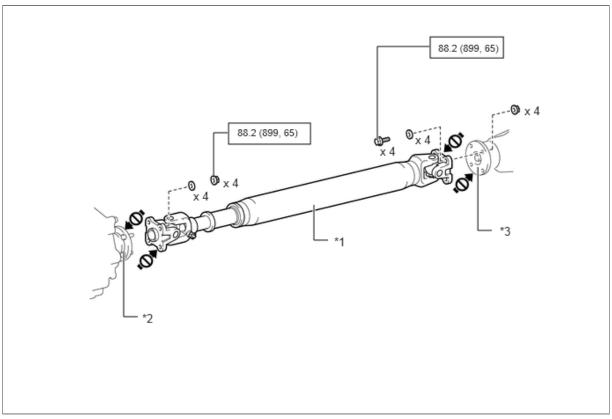

*1	PROPELLER SHAFT ASSEMBLY	*2	TRANSFER ASSEMBLY
*3	DIFFERENTIAL CARRIER ASSEMBLY	-	-
	N*m (kgf*cm, ft.*lbf): Specified torque	<b>(⊘)</b>	Do not apply lubricants

## **ILLUSTRATION**

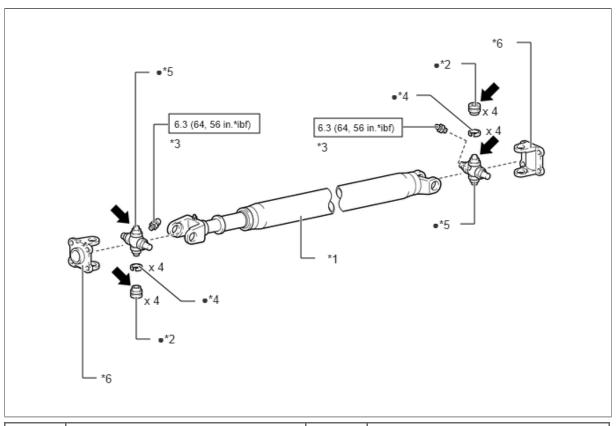

*1	PROPELLER SHAFT ASSEMBLY	*2	SPIDER BEARING
*3	GREASE FITTING	~Δ	REAR PROPELLER SHAFT JOINT SPIDER BEARING SNAP RING
*5	SPIDER	*6	FLANGE YOKE
	N*m (kgf*cm, ft.*lbf): Specified torque	<b>→</b>	MP grease
•	Non-reusable part	-	-

<sup>© 2012</sup> TOYOTA MOTOR CORPORATION. All Rights Reserved.