
H150F MANUAL TRANSMISSION / TRANSAXLE SPEEDOMETER SENSOR COMPONENTS

## **ILLUSTRATION**

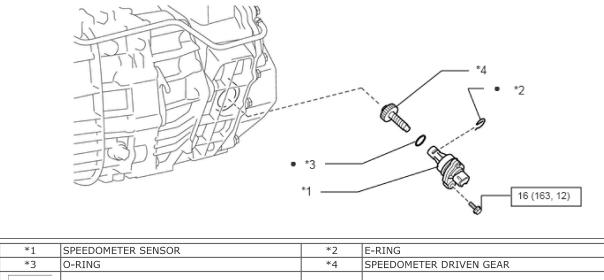

*1	SPEEDOMETER SENSOR	*2	E-RING
*3	O-RING	*4	SPEEDOMETER DRIVEN GEAR
	N*m (kgf*cm, ft.*lbf) : Specified torque	•	Non-reusable part

<sup>© 2012</sup> TOYOTA MOTOR CORPORATION. All Rights Reserved.