Print Exit


EXTERIOR PANELS / TRIM FRONT BUMPER(for Step Type) DISASSEMBLY

# **PROCEDURE**

## **■** 1.REMOVE FRONT BUMPER BAR LH (w/ Over Fender)


52113

a.

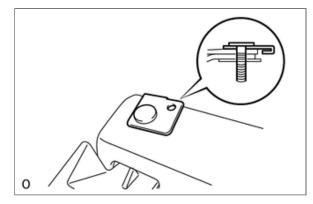

Remove the front No. 3 bumper bracket plate.



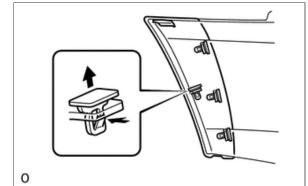

Remove the 4 clips and bumper bar LH.

2.REMOVE FRONT BUMPER BAR RH (w/ Over Fender)


52112

#### HINT:

Use the same procedures described for the LH side.

**■** 3.REMOVE FRONT BUMPER HOLE COVER LH (w/o Fog Light)

52128B

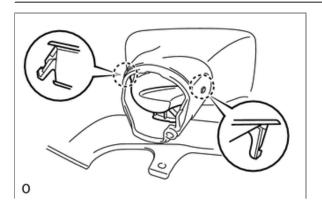

a. Detach the 2 claws and remove the front bumper hole cover LH.

#### HINT:

Use the same procedures described for the LH side.

### 5.REMOVE FOG LIGHT ASSEMBLY LH (w/ Fog Light)

81220

Click hereVehicle Exterior>LIGHTING (EXT)>FOG LIGHT ASSEMBLY>REMOVAL

6.REMOVE FOG LIGHT ASSEMBLY RH (w/ Fog Light)


81210A

#### HINT:

Use the same procedures described for the LH side.

### 7.REMOVE FRONT LICENSE PLATE BRACKET (w/ Winch)

75111

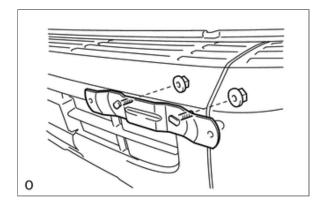



a. Remove the 2 nuts and front license plate bracket.

## 8.REMOVE WINCH CONTROL WIRE (w/ Winch)

38649



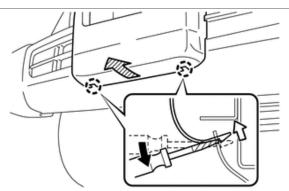

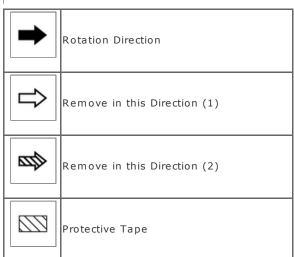


Using a thin-bladed screwdriver, detach the 2 claws as shown in the illustration.

#### HINT:

Tape the thin-bladed screwdriver tip before use.


b.

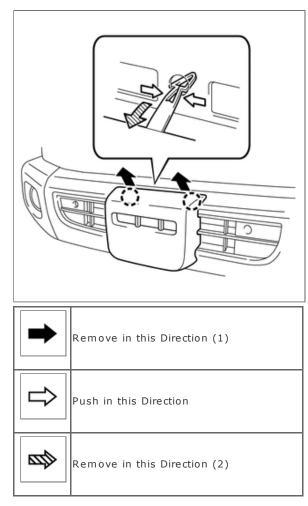


Place your hands on the top of the front bumper winch cover sub-assembly and pull it to detach the 2 claws as shown in the illustration.

Push the part as shown in the illustration to disconnect the fall prevention hook and remove the front bumper winch cover sub-assembly.



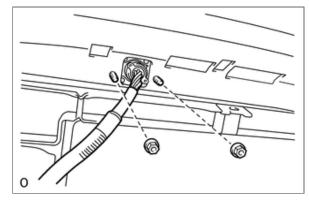


Remove the 2 nuts and winch control wire.

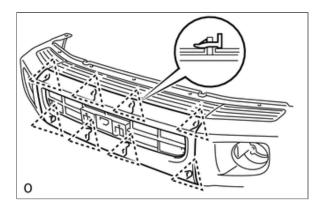

a. Remove the 8 clips and front bumper garnish.

# ■ 10.REMOVE FRONT LICENSE PLATE BRACKET (w/o Winch)

75111

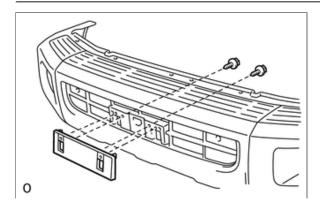

**a.** Remove the 2 screws and front license plate bracket.

# **☐** 11.REMOVE NO. 2 COWL WIRE (w/ Fog Light)

82132

