Print Exit

REAR SUSPENSION REAR LEAF SPRING REMOVAL

CAUTION / NOTICE / HINT


HINT:

- · Use the same procedure for the RH and LH sides.
- The procedure listed below is for the LH side.

PROCEDURE

1.SUPPORT AXLE HOUSING ASSEMBLY

a.

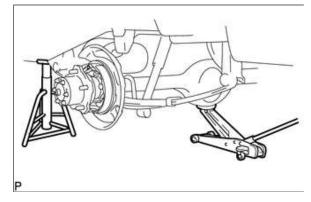

Support the rear axle housing assembly with a jack.


■ 2.REMOVE REAR WHEEL

Click hereSuspension>TIRE / WHEEL>TIRE AND WHEEL>REMOVAL

3.DISCONNECT REAR SHOCK ABSORBER ASSEMBLY LH

48540

a.

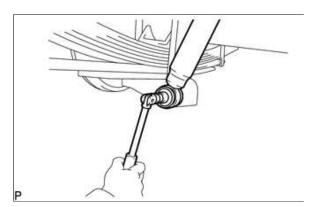


Remove the lower mounting bolt, rear No. 1 shock absorber cushion washer and 2 bushing and disconnect the rear shock absorber assembly LH from the spring U bolt seat sub-assembly LH.

4.REMOVE REAR SPRING U BOLT

48046A



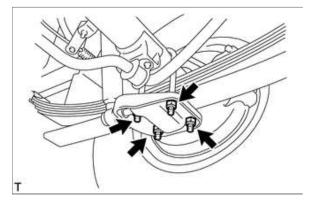

Remove the 4 nuts and 4 washers.

b. Remove the U bolt seat and 2 U bolts.

■ 5.REMOVE REAR DISTANCE PLATE (w/ Distance Plate)


48475R

a. Remove the distance plate.

■ 6.REMOVE REAR SPRING ASSEMBLY LH


48220

a.

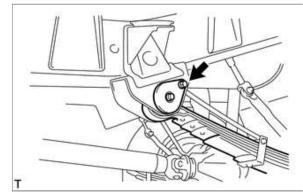


Remove the hanger pin lock bolt.



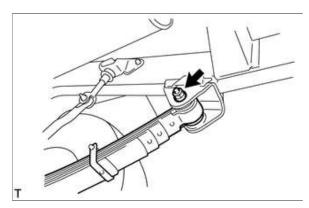

Remove the nut, washer and hanger pin from the front side.

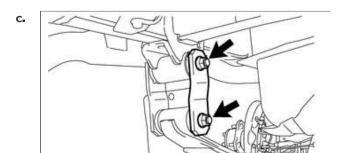

Remove the 2 nuts, 2 washers, shackle plate, shackle pin and spring from the rear side.

■ 7.REMOVE REAR SPRING SHACKLE BUSH

48210Q

a. Remove the 4 bushes from the spring and chassis frame.

8.REMOVE REAR SPRING BUMPER SUB-ASSEMBLY

48306

a. Remove the 2 bolts and bumper.

© 2012 TOYOTA MOTOR CORPORATION. All Rights Reserved.