1GR-FE ENGINE CONTROL HEATED OXYGEN SENSOR INSPECTION


PROCEDURE

■ 1.INSPECT HEATED OXYGEN SENSOR

89465

Exit



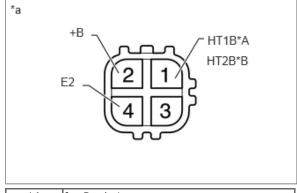

*A	for Bank 1
*B	for Bank 2
*a	Component without harness connected (Heated Oxygen Sensor)

Measure the resistance according to the value(s) in the table below.

Standard Resistance (for Bank 1):

Tester Connection	Condition	Specified Condition
1 (HT1B) - 2 (+B)	20°C (68°F)	11 to 16 Ω
1 (HT1B) - 4 (E2)	Always	$10~\text{k}\Omega$ or higher

Standard Resistance (for Bank 2):

Standard Resistance (101 Bank 2)1						
	Tester Connection	Condition	Specified Condition			
	1 (HT2B) - 2 (+B)	20°C (68°F)	11 to 16 Ω			
	1 (HT2B) - 4 (E2)	Always	10 kΩ or higher			

If the result is not as specified, replace the heated oxygen sensor.

© 2012 TOYOTA MOTOR CORPORATION. All Rights Reserved.