Print Exit


1GR-FE EMISSION CONTROL PURGE VALVE REMOVAL

PROCEDURE

■ 1.REMOVE PURGE VSV


17650G

a.

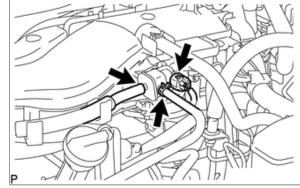

Disconnect the purge VSV connector.

Slide the clamp and disconnect the 2 No. 1 fuel vapor feed hoses from the purge VSV.

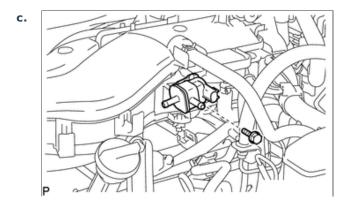

Remove the bolt and purge VSV.

© 2012 TOYOTA MOTOR CORPORATION. All Rights Reserved.