
Print Preview <u>Exit</u>

HF1A TRANSFER / 4WD / AWD TRANSFER ASSEMBLY INSTALLATION

PROCEDURE

1.INSTALL TRANSFER ASSEMBLY

36110

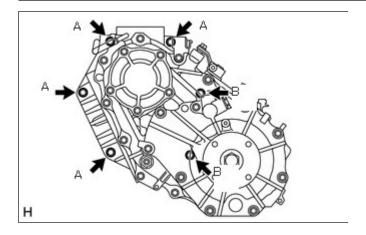

a. Install the transfer assembly to the manual transmission with the 4 bolts (A) and 2 bolts (B).

Torque:

68.6 N*m (700 kgf*cm, 51 ft.*lbf)

Standard Bolt Length:

Item	Specified Condition
Bolt (A)	45 mm (1.7717 in.)
Bolt (B)	35 mm (1.3780 in.)

HINT:

Install the bolts (A) to the transfer and the bolts (B) to the transmission.

■ 2.INSTALL MANUAL TRANSMISSION WITH TRANSFER

- for 1GR-FE: Click hereDrivetrain>H150F (MANUAL TRANSMISSION / TRANSAXLE)>MANUAL TRANSMISSION ASSEMBLY (for 1GR-FE)>INSTALLATION
- for 1VD-FTV: Click hereDrivetrain>H150F (MANUAL TRANSMISSION / TRANSAXLE)>MANUAL TRANSMISSION ASSEMBLY (for 1VD-FTV)>INSTALLATION
- © 2012 TOYOTA MOTOR CORPORATION. All Rights Reserved.