

DRIVE SHAFT / PROPELLER SHAFT FRONT PROPELLER SHAFT ASSEMBLY COMPONENTS

## **ILLUSTRATION**

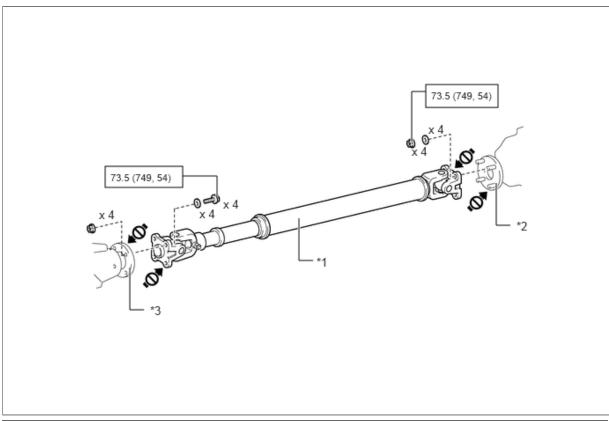

*1	FRONT PROPELLER SHAFT ASSEMBLY	*2	TRANSFER ASSEMBLY
*3	FRONT DIFFERENTIAL CARRIER ASSEMBLY	-	-
	N*m (kgf*cm, ft.*lbf): Specified torque	<b>(⊘)</b>	Do not apply lubricants

## **ILLUSTRATION**

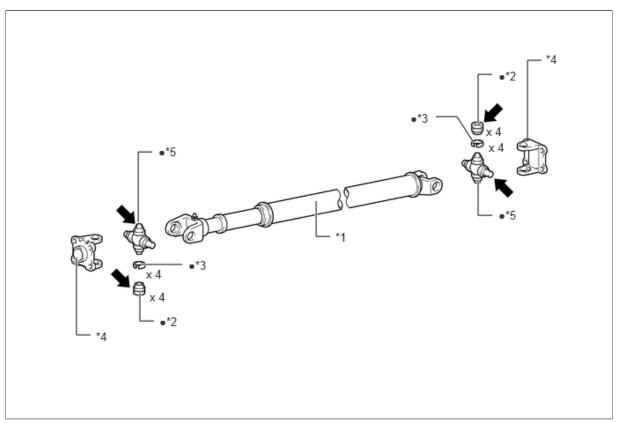

*1	FRONT PROPELLER SHAFT ASSEMBLY	*2	SPIDER BEARING
*3	FRONT PROPELLER SHAFT JOINT SPIDER BEARING SNAP RING	*4	FLANGE YOKE
*5	SPIDER	-	-
<b>→</b>	MP grease	•	Non-reusable part

<sup>© 2012</sup> TOYOTA MOTOR CORPORATION. All Rights Reserved.