DRIVE SHAFT / PROPELLER SHAFT PROPELLER SHAFT ASSEMBLY REMOVAL


PROCEDURE

■ 1.REMOVE PROPELLER SHAFT ASSEMBLY

37110

Exit




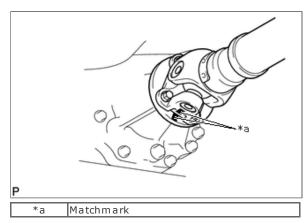

Place matchmarks on the propeller shaft flange and transfer flange.

b. Remove the 4 nuts and 4 washers.



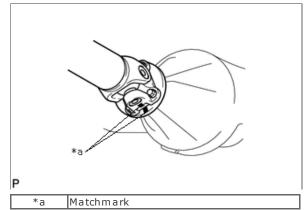

Place matchmarks on the propeller shaft flange and rear differential flange.

- d. Remove the 4 nuts, 4 bolts and 4 washers.
- e. Remove the propeller shaft assembly.

© 2012 TOYOTA MOTOR CORPORATION. All Rights Reserved.