

H150F MANUAL TRANSMISSION / TRANSAXLE OUTPUT SHAFT COMPONENTS

ILLUSTRATION

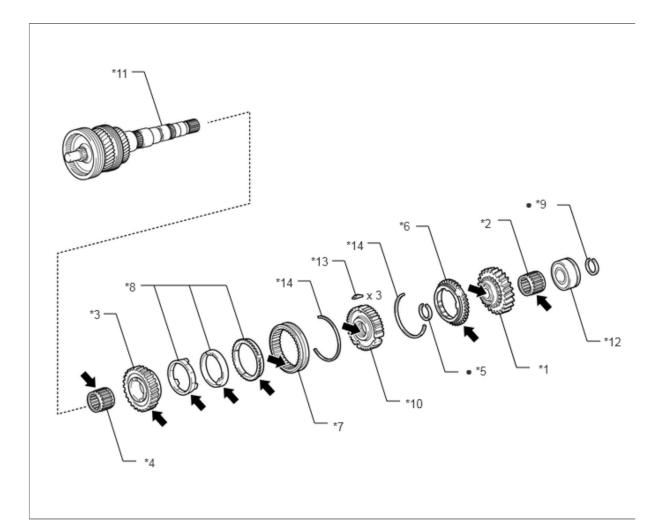

*1	1ST GEAR	*2	1ST GEAR NEEDLE ROLLER BEARING
*3	2ND GEAR	*4	2ND GEAR NEEDLE ROLLER BEARING
*5	NO. 1 CLUTCH HUB SHAFT SNAP RING	*6	NO. 1 SYNCHRONIZER RING
*7	NO. 1 TRANSMISSION HUB SLEEVE	*8	NO. 2 SYNCHRONIZER RING SET
*9	OUTPUT SHAFT BEARING SHAFT SNAP RING	*10	NO. 1 TRANSMISSION CLUTCH HUB
*11	OUTPUT SHAFT	*12	REAR OUTPUT SHAFT BEARING
*13	SHIFTING KEY	*14	SPRING
		→	
•	Non-reusable part		Gear oil

ILLUSTRATION

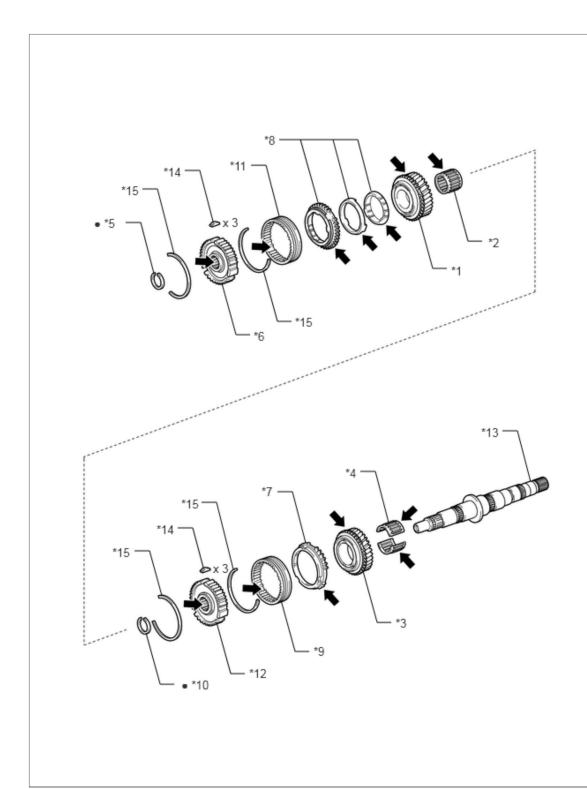

*1	3RD GEAR	*2	3RD GEAR NEEDLE ROLLER BEARING
*3	5TH GEAR	*4	COUNTER 5TH GEAR BEARING
*5	NO. 2 CLUTCH HUB SETTING SHAFT SNAP RING	*6	NO. 2 TRANSMISSION HUB SLEEVE
*7	NO. 3 SYNCHRONIZER RING	*8	NO. 3 SYNCHRONIZER RING SET
*9	NO. 3 TRANSMISSION HUB SLEEVE	*10	NO. 3 TRANSMISSION CLUTCH HUB SHAFT SNAP RING
*11	NO. 2 TRANSMISSION CLUTCH HUB	*12	NO. 3 TRANSMISSION CLUTCH HUB
*13	OUTPUT SHAFT	*14	SHIFTING KEY
*15	SPRING	-	-
		→	
•	Non-reusable part		Gear oil