
CLUTCH CLUTCH MASTER CYLINDER(for RHD) COMPONENTS

ILLUSTRATION

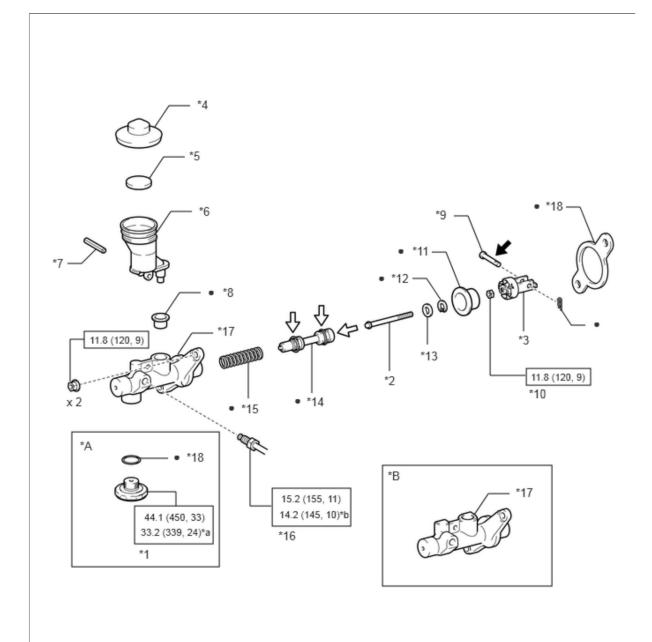

*A	for 1GR-FE, 1HZ	*B	for 1VD-FTV
*1	CLUTCH ACCUMULATOR ASSEMBLY	*2	CLUTCH MASTER CYLINDER PUSH ROD
*3	CLUTCH MASTER CYLINDER PUSH ROD CLEVIS	*4	CLUTCH MASTER CYLINDER RESERVOIR FILLER CAP ASSEMBLY
*5	CLUTCH MASTER CYLINDER RESERVOIR FLOAT	*6	CLUTCH MASTER CYLINDER RESERVOIR SUB- ASSEMBLY
*7	SLOTTED SPRING PIN	*8	GROMMET
*9	CLUTCH MASTER CYLINDER PUSH ROD CLEVIS PIN	*10	LOCK NUT
*11	BOOT	*12	SNAP RING
*13	PLATE	*14	PISTON
*15	SPRING	*16	CLUTCH MASTER CYLINDER TO FLEXIBLE HOSE TUBE
*17	CLUTCH MASTER CYLINDER BODY	*18	GASKET
*a	For use with SST	*b	For use with union nut wrench
	N*m (kgf*cm, ft.*lbf): Specified torque	•	Non-reusable part

→	MP grease	介	Lithium soap base glycol grease

© 2012 TOYOTA MOTOR CORPORATION. All Rights Reserved.