

1GR-FE INTAKE / EXHAUST INTAKE MANIFOLD COMPONENTS

## **ILLUSTRATION**

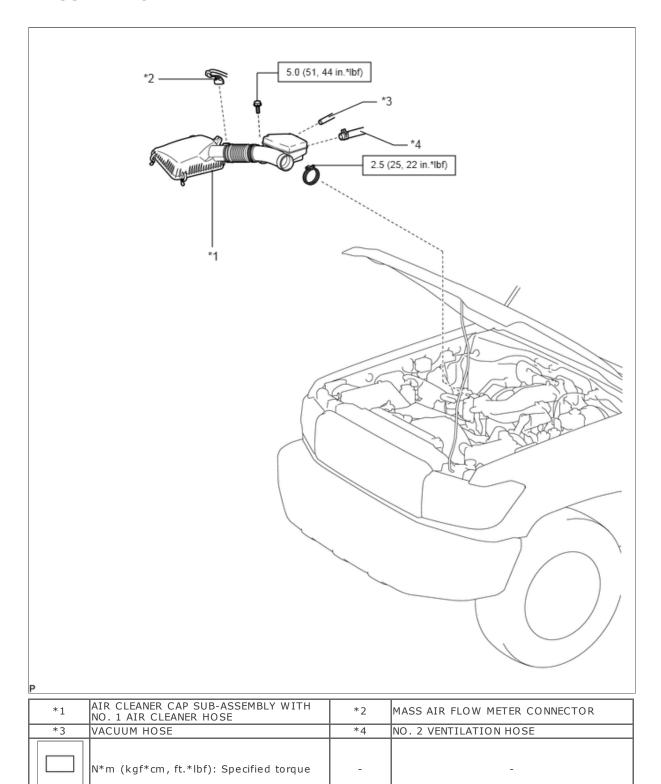

## **ILLUSTRATION**

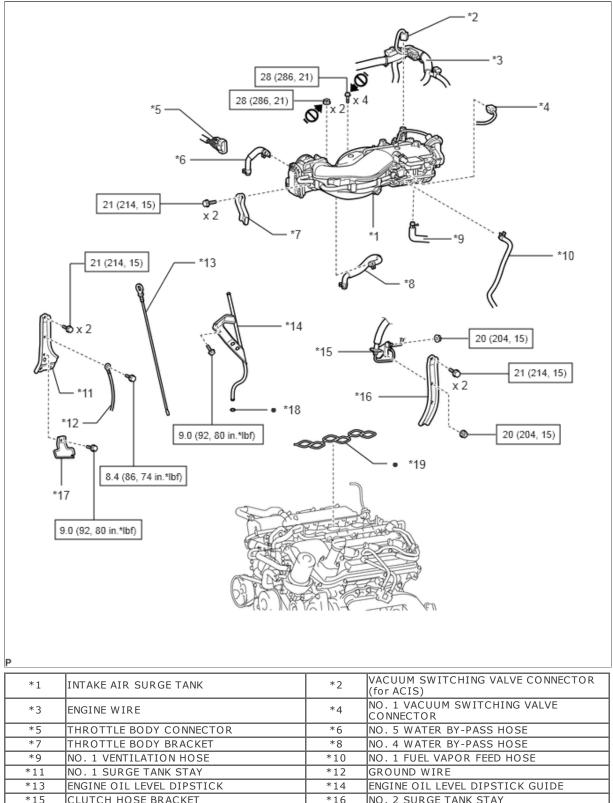

*1	INTAKE AIR SURGE TANK	*2	VACUUM SWITCHING VALVE CONNECTOR (for ACIS)
*3	ENGINE WIRE	*4	NO. 1 VACUUM SWITCHING VALVE CONNECTOR
*5	THROTTLE BODY CONNECTOR	*6	NO. 5 WATER BY-PASS HOSE
*7	THROTTLE BODY BRACKET	*8	NO. 4 WATER BY-PASS HOSE
*9	NO. 1 VENTILATION HOSE	*10	NO. 1 FUEL VAPOR FEED HOSE
*11	NO. 1 SURGE TANK STAY	*12	GROUND WIRE
*13	ENGINE OIL LEVEL DIPSTICK	*14	ENGINE OIL LEVEL DIPSTICK GUIDE
*15	CLUTCH HOSE BRACKET	*16	NO. 2 SURGE TANK STAY
*17	OIL BAFFLE PLATE	*18	O-RING
*19	GASKET	-	-
	N*m (kgf*cm, ft.*lbf): Specified torque	•	Non-reusable part
<b>I</b> ⊘▶	Do not apply lubricants	-	-

