Print Exit

1GR-FE FUEL FUEL PRESSURE REGULATOR REMOVAL

PROCEDURE

■ 1. DISCHARGE FUEL SYSTEM PRESSURE

Click hereEngine / Hybrid System>1GR-FE FUEL>FUEL SYSTEM>PRECAUTION

2. PRECAUTION

NOTICE:

After turning the ignition switch off, watching time may be required before disconnecting the cable from the battery teminal. Therefore, make sure to read the disconnecting the cable from the battery terminal notice before proceeding with work.

Click hereGeneral>INTRODUCTION>REPAIR INSTRUCTION>PRECAUTION

3.DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

4.DISCONNECT NO. 2 FUEL PIPE SUB-ASSEMBLY


23802B

Click hereEngine / Hybrid System>1GR-FE FUEL>FUEL INJECTOR>REMOVAL

5.REMOVE FUEL PRESSURE REGULATOR ASSEMBLY

23280

a. Disconnect the vacuum hose from the fuel pressure regulator assembly.

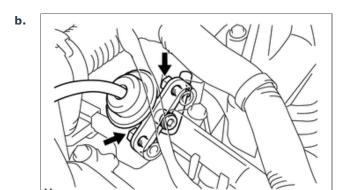

Remove the 2 bolts and fuel pressure regulator assembly from the fuel delivery pipe sub-assembly.

c. Remove the O-ring from the fuel pressure regulator assembly.

 $\ @$ 2012 TOYOTA MOTOR CORPORATION. All Rights Reserved.