


AXLE AND DIFFERENTIAL REAR AXLE HUB COMPONENTS

## **ILLUSTRATION**

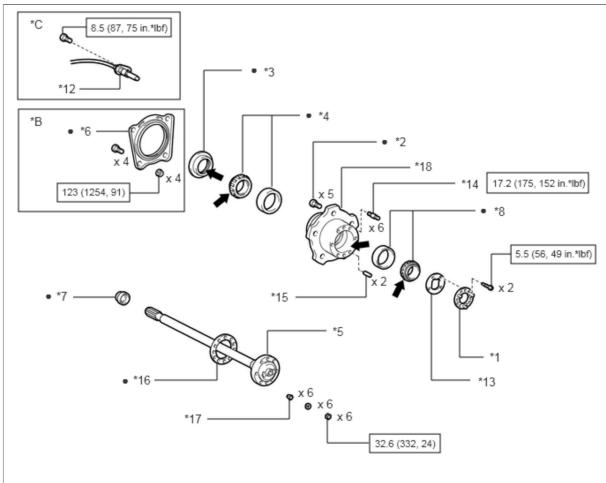

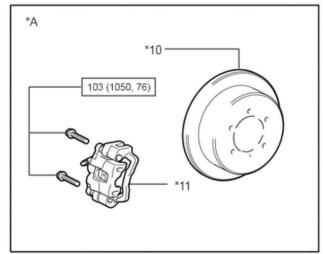

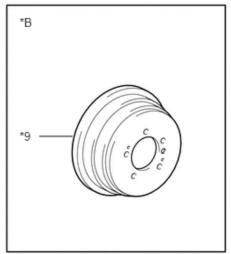

*A	for Disc Type	*B	for Drum Type	
*C	w/ ABS	-	-	
*1	REAR AXLE BEARING LOCK NUT	*2	REAR AXLE HUB BOLT LH	
*3	REAR AXLE HUB OIL SEAL LH	*4	REAR AXLE SHAFT INNER BEARING LH	
*5	REAR AXLE SHAFT LH	*6	REAR AXLE SHAFT OIL SEAL	
*7	REAR AXLE SHAFT OIL SEAL LH	*8	REAR AXLE SHAFT OUTER BEARING LH	
*9	REAR BRAKE DRUM SUB-ASSEMBLY	*10	REAR DISC	
*11	REAR DISC BRAKE CYLINDER ASSEMBLY LH	*12		
*13	REAR AXLE LOCK NUT PLATE LH	*14	REAR AXLE HUB STUD BOLT	
*15	REAR AXLE HUB STRAIGHT PIN	*16	REAR AXLE SHAFT OUTER FLANGE GASKET	

*17	REAR AXLE SHAFT CONE WASHER LH	*18	REAR AXLE HUB LH
	N*m (kgf*cm, ft.*lbf): Specified torque	•	Non-reusable part
<b>→</b>	MD grooco	_	
	MP grease	-	-

© 2012 TOYOTA MOTOR CORPORATION. All Rights Reserved.