Print Exit

SEAT BELT SEAT BELT WARNING SYSTEM CUSTOMIZE PARAMETERS

PROCEDURE




■ 1. CUSTOMIZING FUNCTION WITH ODO/TRIP SWITCH (REFERENCE)

NOTICE:

When the customer requests a change in function, first make sure that the function can be customized.

- a. Turn the ignition switch to ON and press the ODO/TRIP switch until the odometer appears. Then, within 6 seconds, press and hold the ODO/TRIP switch for 10 seconds or more.
- b. Fasten the driver side seat belt (the driver side seat belt buckle switch is turned on) to enter buzzer cancel mode. HINT:

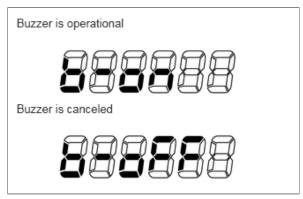

- The mode is displayed on the LCD.
- In buzzer cancel mode, the setting changes between "b-on" and "b-oFF" each time the ODO/TRIP switch is pressed.
- Buzzer cancel mode continues until 10 seconds pass without the ODO/TRIP switch being operated, or until the ignition switch is turned off.
- The buzzer setting is backed up by a power supply from the battery (the buzzer is on by default).
- Even if the buzzer is canceled, the warning light blinks when the driver side seat belt is not fastened.

© 2012 TOYOTA MOTOR CORPORATION. All Rights Reserved.