
Print

DRIVE SHAFT / PROPELLER SHAFT PROPELLER SHAFT ASSEMBLY REMOVAL

## **PROCEDURE**


## \_ 1.REMOVE PROPELLER SHAFT ASSEMBLY

37110

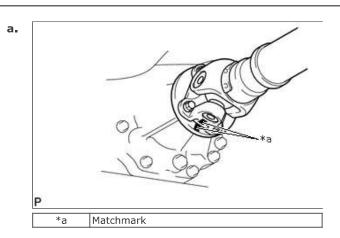

Place matchmarks on the propeller shaft flange and transfer flange.

Remove the 4 nuts and 4 washers.

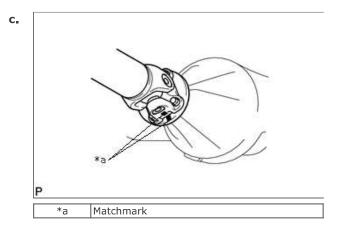

Place matchmarks on the propeller shaft flange and rear differential flange.

- Remove the 4 nuts, 4 bolts and 4 washers.
- Remove the propeller shaft assembly.

© 2012 TOYOTA MOTOR CORPORATION. All Rights Reserved.

Exit