
ILLUSTRATION

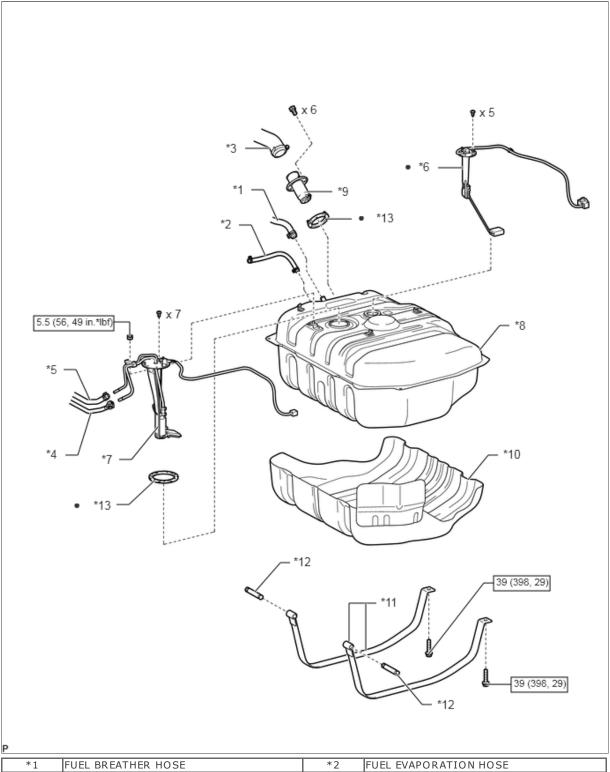

*1	FUEL BREATHER HOSE	*2	FUEL EVAPORATION HOSE
*3	FUEL INLET HOSE	*4	FUEL MAIN HOSE
*5	FUEL RETURN HOSE	*6	FUEL SENDER GAUGE ASSEMBLY
*7	FUEL SUCTION TUBE SUB-ASSEMBLY	*8	FUEL TANK ASSEMBLY
	FUEL TANK FILLER LOWER PIPE SUB- ASSEMBLY	T T T T T T T T T T T T T T T T T T T	NO. 1 FUEL TANK PROTECTOR SUB- ASSEMBLY
*11	FUEL TANK BAND	*12	PIN
*13	GASKET	-	-
	N*m (kgf*cm, ft.*lbf): Specified torque	•	Non-reusable part

© 2012 TOYOTA MOTOR CORPORATION. All Rights Reserved.