

DRIVE SHAFT / PROPELLER SHAFT FRONT PROPELLER SHAFT ASSEMBLY COMPONENTS

ILLUSTRATION

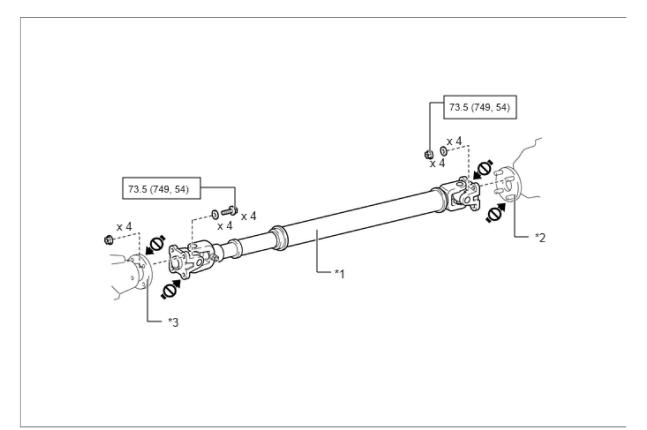

*1	FRONT PROPELLER SHAFT ASSEMBLY	*2	TRANSFER ASSEMBLY
*3	FRONT DIFFERENTIAL CARRIER ASSEMBLY	-	-
		• ⊘ •	
	N*m (kgf*cm, ft.*lbf): Specified torque		Do not apply lubricants

ILLUSTRATION

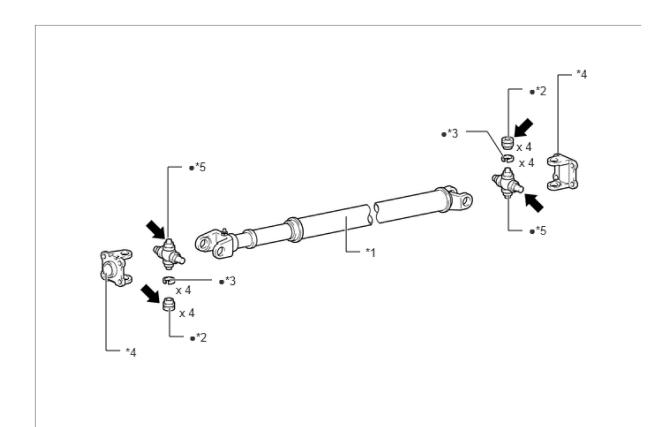

*1	FRONT PROPELLER SHAFT ASSEMBLY	*2	SPIDER BEARING
*3	FRONT PROPELLER SHAFT JOINT SPIDER BEARING SNAP RING	*4	FLANGE YOKE
*5	SPIDER	-	-
→			
	MP grease	•	Non-reusable part

© 2012 TOYOTA MOTOR CORPORATION. All Rights Reserved.