
H150F MANUAL TRANSMISSION / TRANSAXLE OUTPUT SHAFT COMPONENTS


## **ILLUSTRATION**

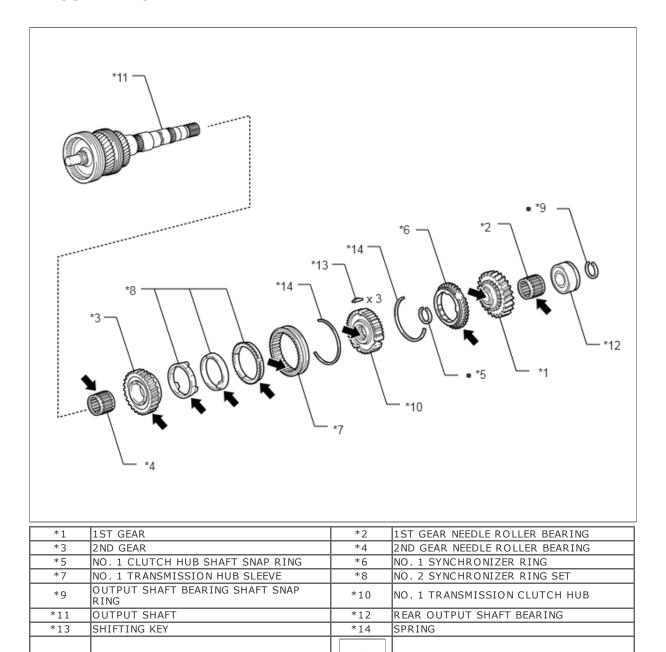

Gear oil

## **ILLUSTRATION**

Non-reusable part

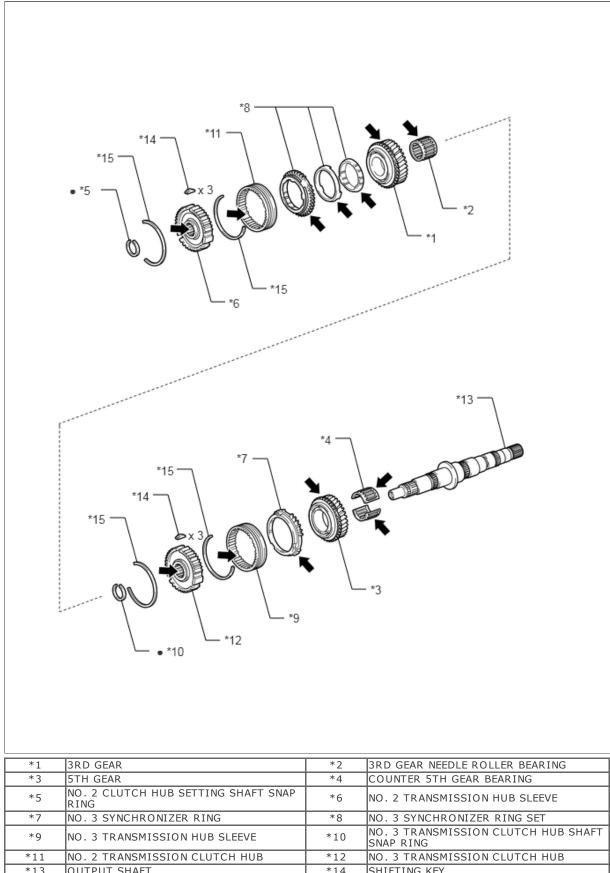

*1	3RD GEAR	*2	3RD GEAR NEEDLE ROLLER BEARING
*3	5TH GEAR	*4	COUNTER 5TH GEAR BEARING
*5	NO. 2 CLUTCH HUB SETTING SHAFT SNAP RING	*6	NO. 2 TRANSMISSION HUB SLEEVE
*7	NO. 3 SYNCHRONIZER RING	*8	NO. 3 SYNCHRONIZER RING SET
*9	NO. 3 TRANSMISSION HUB SLEEVE	T T T T T T T T T T T T T T T T T T T	NO. 3 TRANSMISSION CLUTCH HUB SHAFT SNAP RING
*11	NO. 2 TRANSMISSION CLUTCH HUB	*12	NO. 3 TRANSMISSION CLUTCH HUB
*13	OUTPUT SHAFT	*14	SHIFTING KEY
*15	SPRING	-	-
•	Non-reusable part	<b>→</b>	Gear oil