

1GR-FE STARTING STARTING SYSTEM PARTS LOCATION

ILLUSTRATION

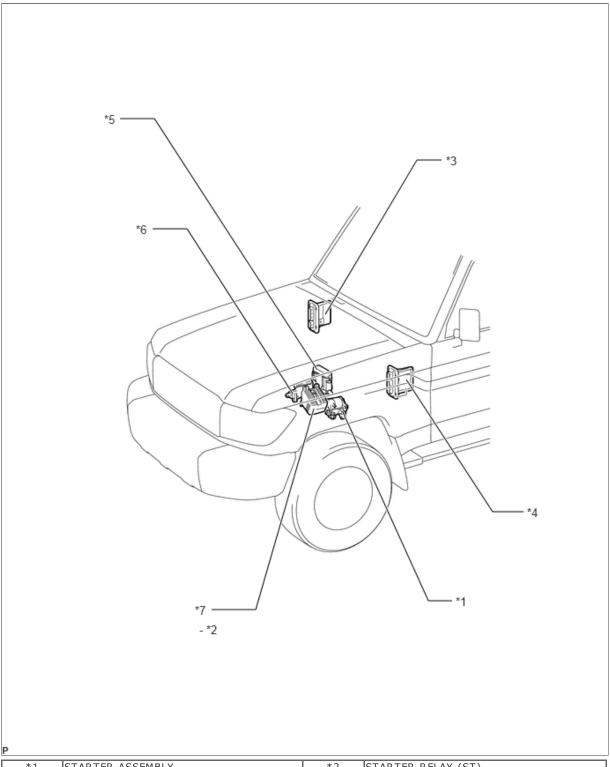

· ·				
*1	STARTER ASSEMBLY	*2	STARTER RELAY (ST)	
*3	ECM (for LHD)	*4	ECM (for RHD)	
*5	FUSIBLE LINK BLOCK ASSEMBLY - ALT H-FUSE - AM1 H-FUSE	I *6	FUSE BLOCK ASSEMBLY - AM2 H-FUSE	
*7	ENGINE ROOM RELAY BLOCK ASSEMBLY	-	-	

ILLUSTRATION

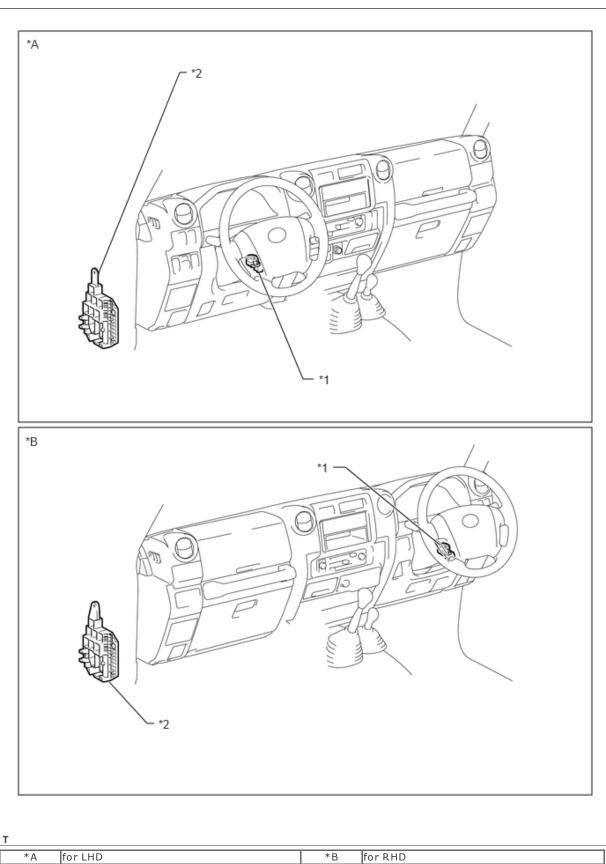

*A	for LHD	*B	for RHD
*1	IGNITION SWITCH	*2	COWL SIDE RELAY BLOCK ASSEMBLY - ST FUSE