
1GR-FE INTAKE / EXHAUST INTAKE SYSTEM PARTS LOCATION

ILLUSTRATION

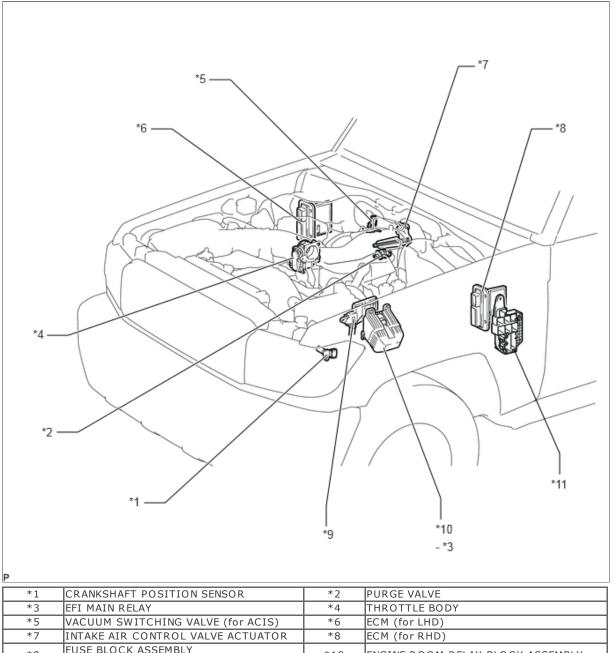

*1	CRANKSHAFT POSITION SENSOR	*2	PURGE VALVE
*3	EFI MAIN RELAY	*4	THROTTLE BODY
*5	VACUUM SWITCHING VALVE (for ACIS)	*6	ECM (for LHD)
*7	INTAKE AIR CONTROL VALVE ACTUATOR	*8	ECM (for RHD)
*9	FUSE BLOCK ASSEMBLY - EFI FUSE	*10	ENGINE ROOM RELAY BLOCK ASSEMBLY
*11	COWL SIDE RELAY BLOCK ASSEMBLY - EFI-NO. 2 FUSE	-	-

^{© 2012} TOYOTA MOTOR CORPORATION. All Rights Reserved.