

## **ILLUSTRATION**

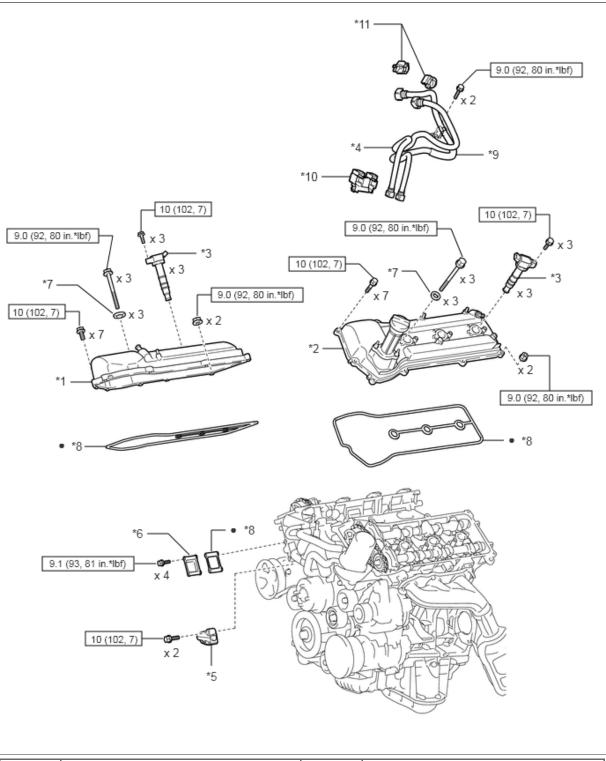

*1	CYLINDER HEAD COVER SUB-ASSEMBLY	*2	CYLINDER HEAD COVER SUB-ASSEMBLY LH
*3	IGNITION COIL ASSEMBLY	*4	NO. 1 FUEL PIPE SUB-ASSEMBLY
*5	NO. 1 CHAIN TENSIONER ASSEMBLY	*6	TIMING CHAIN COVER PLATE
*7	SEAL WASHER	*8	GASKET
*9	NO. 2 FUEL PIPE SUB-ASSEMBLY	*10	NO. 1 FUEL PIPE CLAMP
*11	NO. 2 FUEL PIPE CLAMP	-	-
	N*m (kgf*cm, ft.*lbf): Specified torque	•	Non-reusable part

## **ILLUSTRATION**

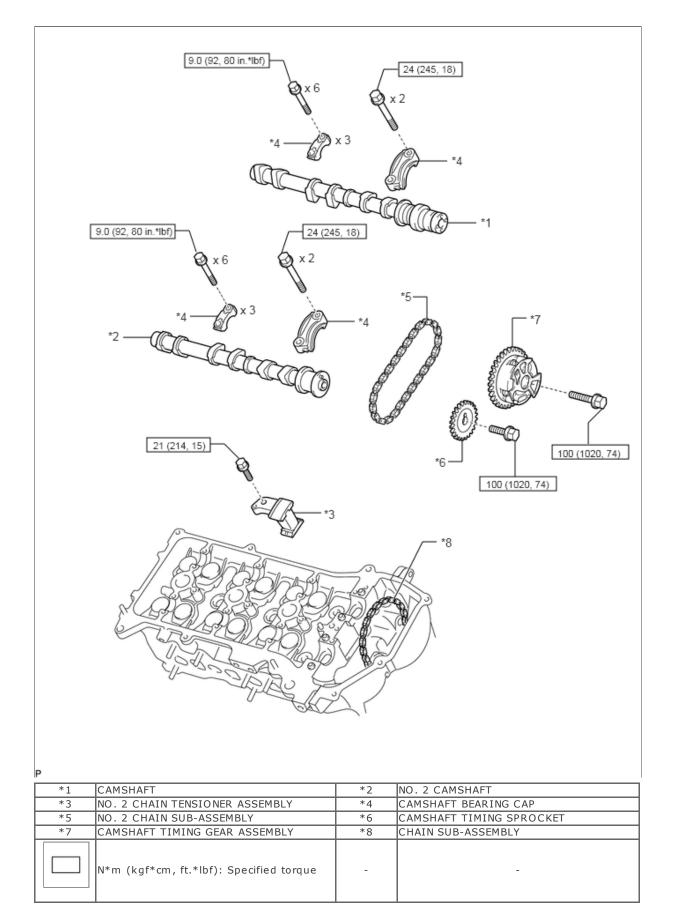

## **ILLUSTRATION**

