HEATING / AIR CONDITIONING AIR CONDITIONING PANEL REMOVAL

PROCEDURE

■ 1.REMOVE CENTER INSTRUMENT CLUSTER FINISH PANEL

55412D

Click hereVehicle Interior>INTERIOR PANELS / TRIM>INSTRUMENT PANEL SAFETY PAD>REMOVAL


2.REMOVE CENTER LOWER INSTRUMENT CLUSTER FINISH PANEL

55413D

Click hereVehicle Interior>INTERIOR PANELS / TRIM>INSTRUMENT PANEL SAFETY PAD>REMOVAL

3.REMOVE HEATER CONTROL NAME SHEET

81942

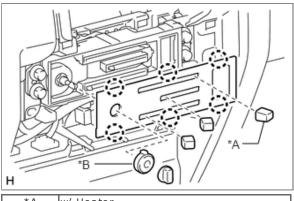

*A	w/ Heater
*B	w/ Cooler System

a. w/o Heater:

Remove the 2 control knob sub-assemblies.

b. w/ Heater:

Remove the 3 control knob sub-assemblies.

c. w/o Cooler System:

Remove the heater blower switch knob.


d. w/ Cooler System:

Remove the heater blower switch knob and cooler switch knob.

e. Detach the 6 claws and remove the heater control name sheet.


4.REMOVE HEATER OR BOOST VENTILATOR CONTROL ASSEMBLY

55910

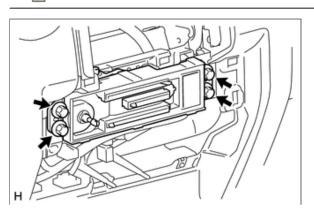

a. Remove the 4 bolts.

b.

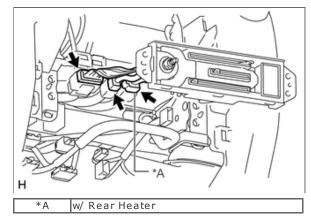


w/o Rear Heater: Disconnect the 2 connectors.

c. w/ Rear Heater:

Disconnect the 3 connectors.



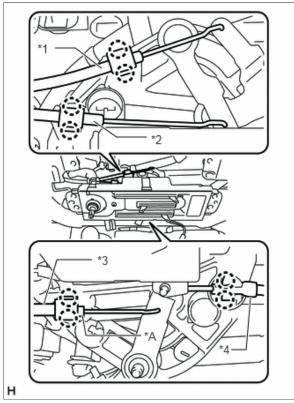

*A	w/ Heater
*1	Air Inlet Damper Control Cable Sub- assembly (Black)
*2	Defroster Damper Control Cable Sub- assembly (Black)
*3	Water Valve Control Cable Sub- assembly (Blue)
*4	Airmix Damper Control Cable Sub-

w/o Heater:

Detach the 4 claws and remove the 2 heater control cable clamps.

e. w/ Heater:

Detach the 6 claws and remove the 3 heater control cable clamps.

f. w/o Heater:

Remove the air inlet damper control cable sub-assembly and defroster damper control cable sub-assembly.

g. w/ Heater:

Remove the air inlet damper control cable sub-assembly, defroster damper control cable sub-assembly and water valve control cable sub-assembly.

- **h.** Detach the 2 claws and remove the airmix damper control cable sub-assembly.
- i. Remove the heater or boost ventilator control assembly.


5.REMOVE REAR HEATER BLOWER SWITCH (w/ Rear Heater)

84732A

 $\label{lower_control} \mbox{Click hereVehicle Interior>HEATING / AIR CONDITIONING>REAR BLOWER CONTROL SWITCH (for Quarter Panel)>REMOVAL \\$

6.REMOVE HEATER BLOWER SWITCH ASSEMBLY

84730

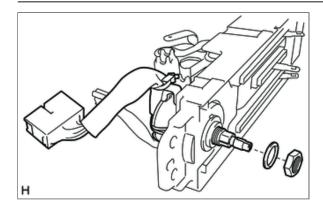

a. Remove the nut, washer and heater blower switch assembly.

© 2012 TOYOTA MOTOR CORPORATION. All Rights Reserved.