
H150F MANUAL TRANSMISSION / TRANSAXLE INPUT SHAFT COMPONENTS

ILLUSTRATION

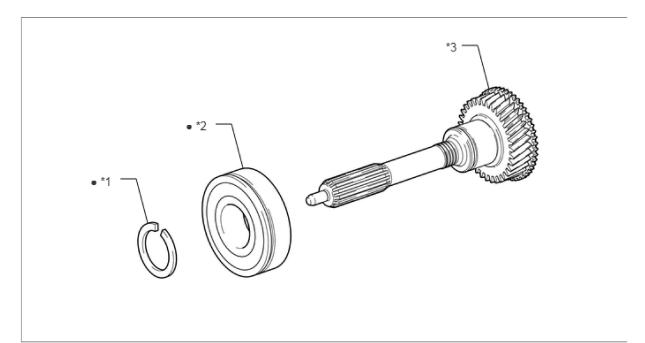

*1	FRONT INPUT SHAFT BEARING	*2	REAR INPUT SHAFT BEARING SHAFT SNAP RING
*3	INPUT SHAFT SUB-ASSEMBLY	-	-
•	Non-reusable part	-	-

© 2012 TOYOTA MOTOR CORPORATION. All Rights Reserved.