
Exit

H150F MANUAL TRANSMISSION / TRANSAXLE COUNTER GEAR COMPONENTS

## **ILLUSTRATION**

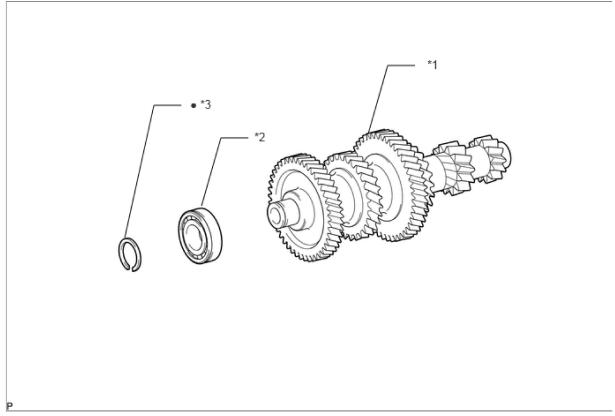

*1	COUNTER GEAR	*2	FRONT COUNTER GEAR BEARING OR ROLLER
*3	SNAP RING	-	-
•	Non-reusable part	-	-

© 2012 TOYOTA MOTOR CORPORATION. All Rights Reserved.