

1GR-FE ENGINE CONTROL SFI SYSTEM PARTS LOCATION


ILLUSTRATION

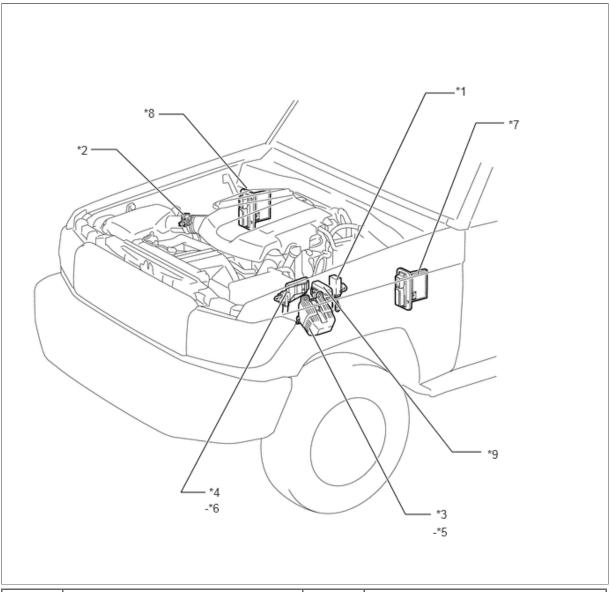


*1	FUEL PUMP RESISTOR	*2	MASS AIR FLOW METER
*3	Engine Room Relay Block Assembly	*4	Fuse Block Assembly
*5	- A/F RELAY - ST RELAY - C/OPN RELAY - FUEL PMP RELAY - SUB PMP RELAY - PMP SELECT RELAY	*6	- EFI FUSE - A/F FUSE -ETCS FUSE
*7	ECM (for RHD)	*8	ECM (for LHD)
*9	Fusible Link Block Assembly	-	-

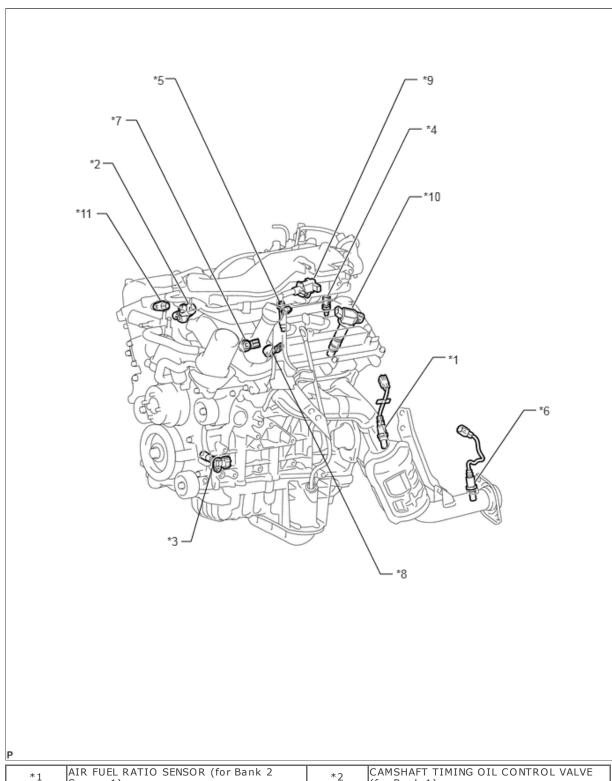


*1	AIR FUEL RATIO SENSOR (for Bank 2 Sensor 1)	*2	CAMSHAFT TIMING OIL CONTROL VALVE (for Bank 1)
*3	CRANKSHAFT POSITION SENSOR	*4	ENGINE COOLANT TEMPERATURE SENSOR
*5	FUEL INJECTOR	*6	HEATED OXYGEN SENSOR (for Bank 2 Sensor 2)
*7	KNOCK SENSOR (for Bank 1)	*8	KNOCK SENSOR (for Bank 2)
*9	PURGE VSV	*10	IGNITION COIL ASSEMBLY
*11	VVT SENSOR (for Bank 1)	-	-

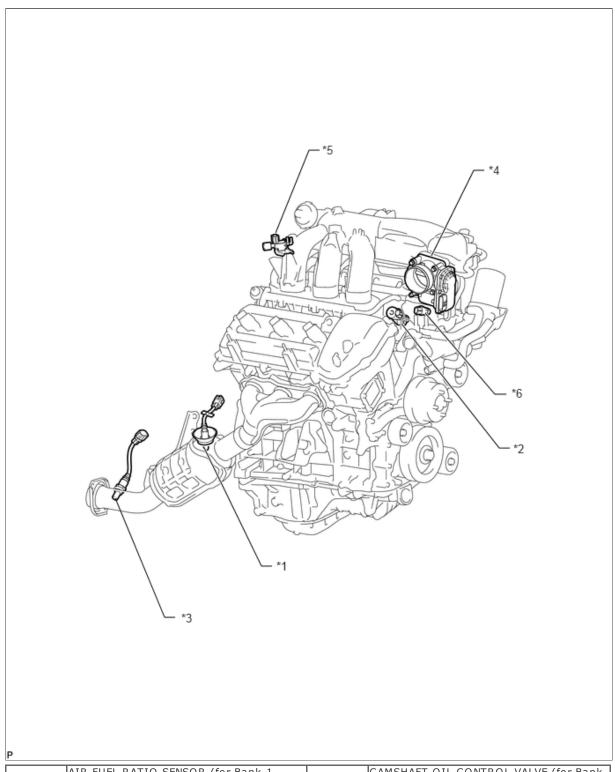


*1	AIR FUEL RATIO SENSOR (for Bank 1 Sensor 1)	*2	CAMSHAFT OIL CONTROL VALVE (for Bank 2)
*3	HEATED OXYGEN SENSOR (for Bank 1 Sensor 2)	*4	THROTTLE BODY WITH MOTOR ASSEMBLY
*5	VACUUM SWITCHING VALVE (for ACIS)	*6	VVT SENSOR (for Bank 2)

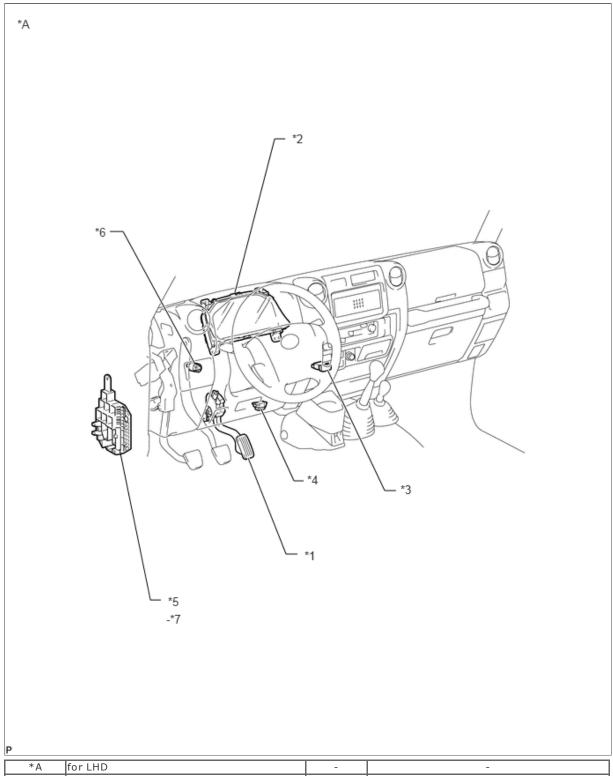


*A	for LHD	-	-
*1	ACCELERATOR PEDAL SENSOR ASSEMBLY	*2	COMBINATION METER ASSEMBLY
*3	FUEL TANK SELECT SWITCH	*4	DLC3
*5	COWL SIDE RLAY BLOCK ASSEMBLY	*6	STOP LIGHT SWITCH ASSEMBLY
*7	- EFI NO. 2 FUSE - INJ FUSE - IGN FUSE - STOP FUSE - ST FUSE	-	-

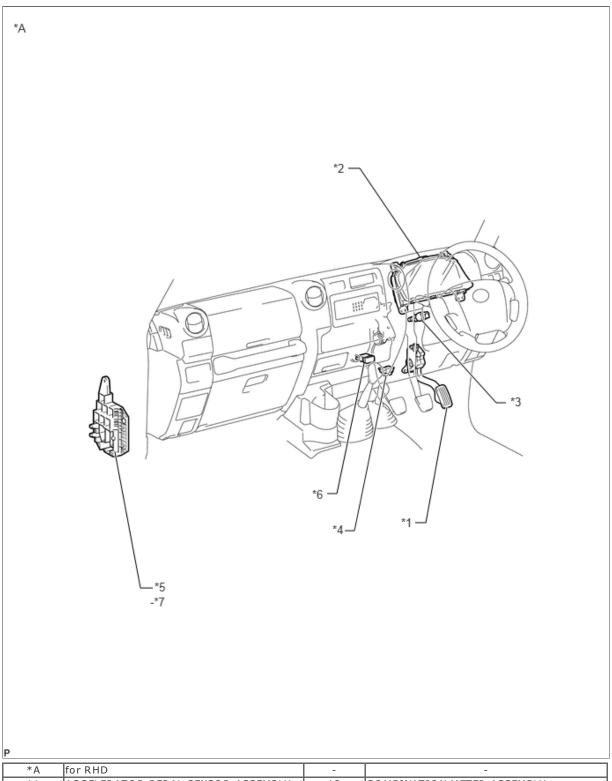


*A	for RHD	-	-
*1	ACCELERATOR PEDAL SENSOR ASSEMBLY	*2	COMBINATION METER ASSEMBLY
*3	STOP LIGHT SWITCH ASSEMBLY	*4	DLC3
*5	COWL SIDE RLAY BLOCK ASSEMBLY	*6	FUEL TANK SELECT SWITCH
*7	- EFI NO. 2 FUSE - INJ FUSE - IGN FUSE - STOP FUSE - ST FUSE	-	-

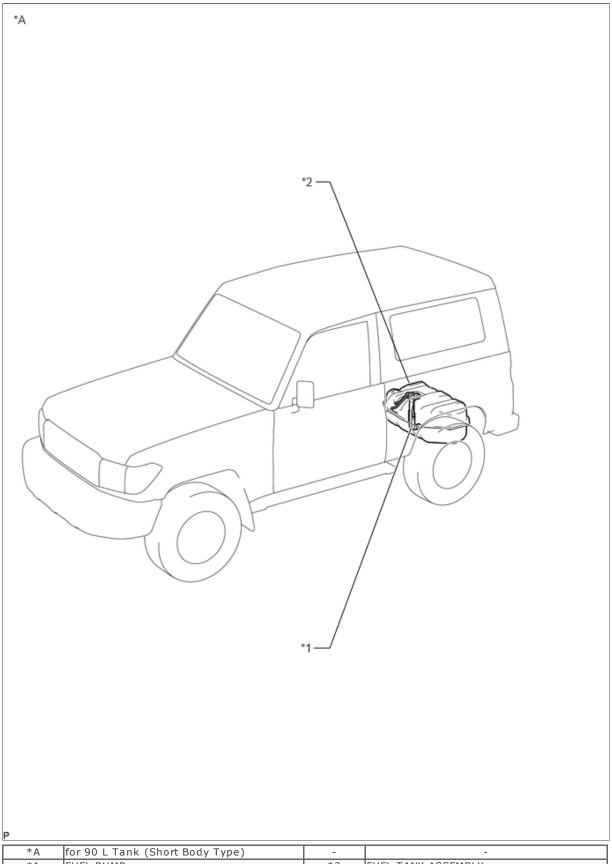


*A	for 90 L Tank (Short Body Type)	-	-
*1	FUEL PUMP	*2	FUEL TANK ASSEMBLY

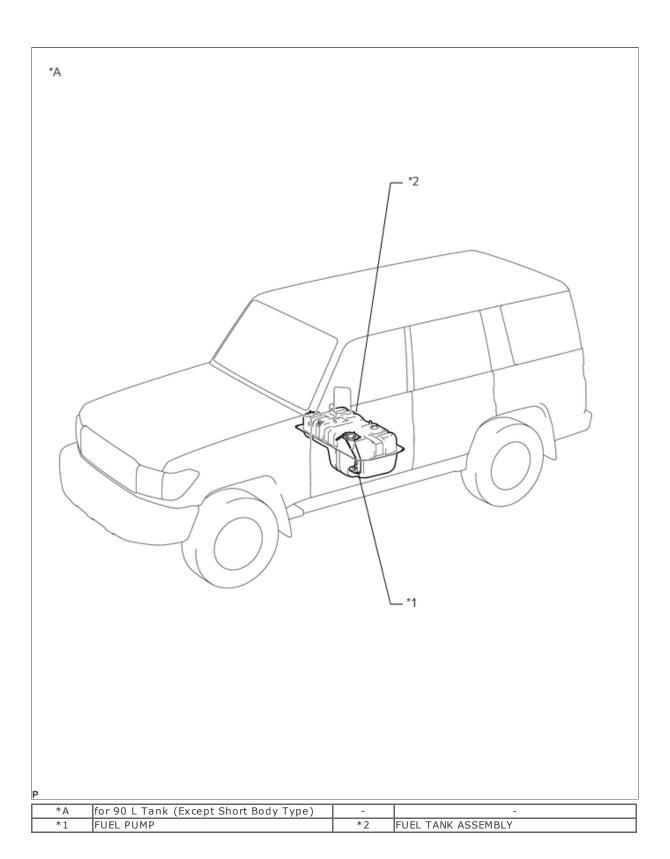

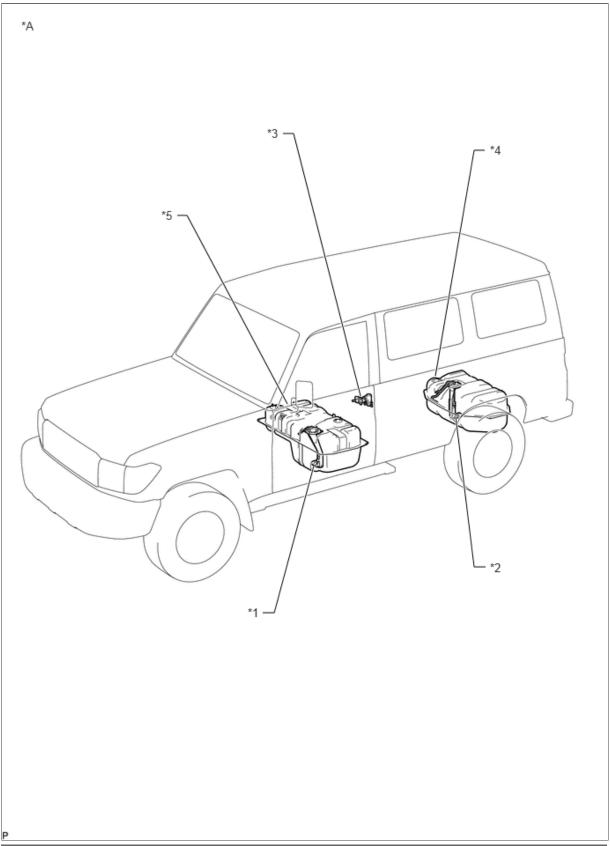

*A	for Double Tank	-	-
*1	FUEL PUMP(MAIN)	*2	FUEL PUMP(SUB)
1	FUEL TANK SOLENOID RETURN VALVE ASSEMBLY	*4	FUEL SUB TANK
*5	FUEL TANK ASSEMBLY	-	-

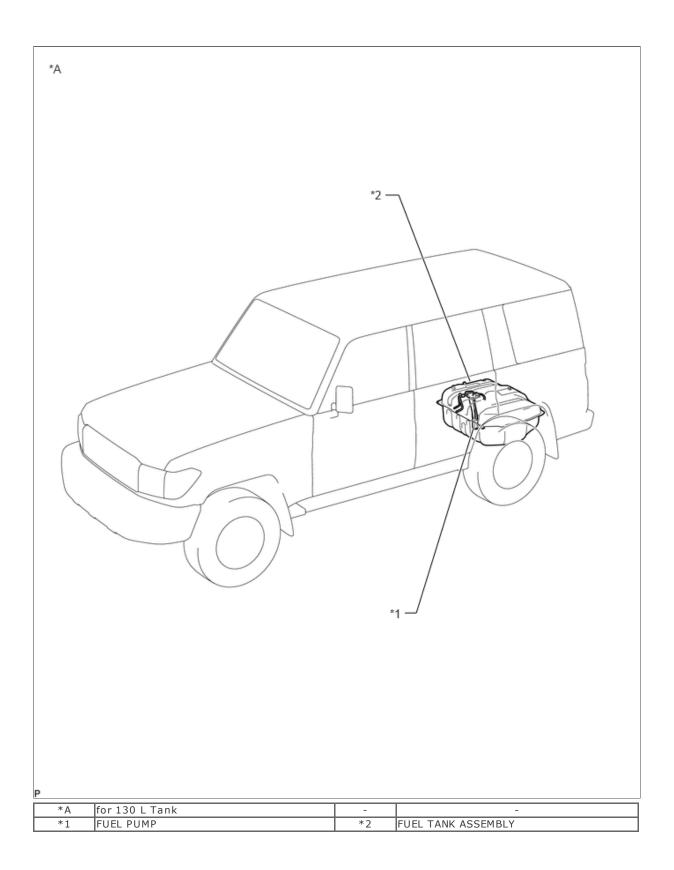

© 2012 TOYOTA MOTOR CORPORATION. All Rights Reserved.